Charith Perera and Nhat Pham (Eds.)

# Internet of Things Systems Design Lab Book with Packet Tracer






PUBLISHED BY CARDIFF IOT GROUP

Brand names, logos and trademarks used herein remain the property of their respective owners. This listing of any firm or their logos is not intended to imply any endorsement or direct affiliation with the author.

How to cite this book Charith Perera and Nhat Pham (Eds.), Internet of Things: Systems Design Lab Book with Packet Tracer, Cardiff IoT Group, 2025

Contributing Authors (alphabetical order) Isra Ismail, Imran Khan

Version 1.0, (Latest) January 2025

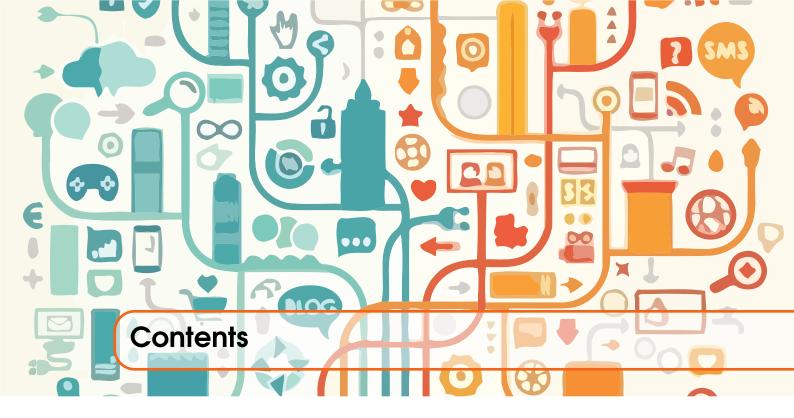

	Preface Accessing the Code Repository	5 6
1	Connecting to Real World using HTTP Server	7
2	IoT-Based Intruder Alert System	25
3	RFID-Based Door Access System	41
4	Smart Wind Detection and Automation	57
5	IoT-Based Smart Access Control	75
6	Multi-User Communication	<b>79</b>
7	IoT Devices Networking	11
8	LED Blinking with MCU Programming	25
9	Fire Detection and Sprinkler Control Simulation	31
10	MQTT Broker-Client Configuration	41

# Preface

This IOT LAB BOOK WITH PACKET TRACER is primarily compiled to support the university courses on '*Internet of Things: Systems Design*' at both undergraduate and postgraduate levels. It is also designed to complement the IOT LAB BOOK. The IOT LAB BOOK primarily focuses on end-to-end IoT systems development, combining microcontrollers, single-board computers, and IoT cloud platforms. This IOT LAB BOOK WITH PACKET TRACER aims to design IoT systems and bridge the gap between the virtual and physical environments.

One of the unique aspects of this LAB BOOK is its emphasis on integrating real-world hardware, such as Raspberry Pis, Arduinos, and microcontrollers, with the simulated environment of Cisco Packet Tracer. While working with physical hardware provides invaluable hands-on experience, it often comes with limitations. These include restricted access to specific types of sensors, actuators, or the number of devices available at a given time. Cisco Packet Tracer addresses these limitations by enabling students to create virtual counterparts of these devices—digital representations of sensors, actuators, and devices—and integrate them seamlessly with physical setups. This integration is achieved by allowing real hardware to communicate with virtual environments through protocols like HTTP, enabling bidirectional data and command flow between the two worlds.

For example, students can develop part of their project using physical hardware, such as Arduinos, and communicate with the virtual environment in Cisco Packet Tracer through HTTP servers or other communication protocols. This allows for sending commands and data back and forth between the physical and virtual worlds. By combining these two realms, students learn to leverage the strengths of both environments, building more robust and scalable IoT solutions.

Cisco Packet Tracer's flexibility extends further, allowing users to create new types of virtual sensors and actuators that may not be accessible due to hardware constraints. For instance, students might design a virtual temperature sensor that interacts with real-world data or create a virtual robotic arm actuator to simulate complex tasks not feasible with limited hardware. These examples help students develop problem-solving skills by exploring practical applications of IoT systems and foster their ability to design comprehensive and innovative solutions. It also offers extensive simulation capabilities that enable students to model and test complex scenarios that would be challenging to replicate in real-world conditions. This lab book bridges the gap between virtual and physical worlds through a series of targeted exercises. These are designed to teach students how to connect these domains effectively, fostering innovative and comprehensive IoT system designs.

It is important to note that ADVANCED LAB BOOK is primarily focused on teaching Cisco Packet Tracer as a standalone tool for learning the Internet of Things, providing a detailed introduction to its features and capabilities. In contrast, this IOT LAB BOOK WITH PACKET TRACER emphasizes integrating physical hardware with virtual environments. By bridging these two domains, this book equips students with the practical experience and conceptual tools necessary to create hybrid IoT systems. Together, the two books complement each other, enabling students to both master the technical aspects of Cisco Packet Tracer and explore innovative ways to combine real and virtual IoT components for comprehensive system designs.

— **Further information, links and references.** Throughout this lab book, we offer explanations, learning tips, external links, and references to relevant reading materials. If you find certain programming tasks difficult, you are encouraged to explore these resources for additional guidance. Although the suggested readings are optional, they provide valuable opportunities to deepen your understanding of IoT beyond the scope of the provided labs. Finally, please note that this is not a programming course; you are responsible for identifying and addressing any knowledge gaps by consulting the links and materials we have included.

# Accessing the Code Repository

All the Packet Tracer (.pkt) files and other resources required to complete the labs in this *IOT LAB BOOK WITH PACKET TRACER* can be found in the following GitLab repository:

https://gitlab.com/IOTGarage/iot-lab-book-with-packet-tracer


This repository includes all lab files, configuration scripts, and supplemental materials referenced throughout the chapters. Whenever you work on a lab exercise, refer to the respective folder or file in the repository to locate the exact examples. We will also post updates, bug fixes, or enhancements here, so please check back periodically for the most recent versions. By visiting the repository, you can:

- Clone or Download the Files: Acquire all the relevant .pktlab files, along with any scripts or configurations you need for each lab activity.
- **Review Commit History:** Track changes across different versions and branches, noting any improvements or experimental features.
- **Submit Issues:** If you encounter a bug, need clarification, or have suggestions, open an issue in the repository and collaborate with others to enhance the lab exercises.

#### Learn More about Cisco Packet Tracer:

If you would like to download Cisco Packet Tracer or learn more about its features, visit:

https://www.netacad.com/cisco-packet-tracer

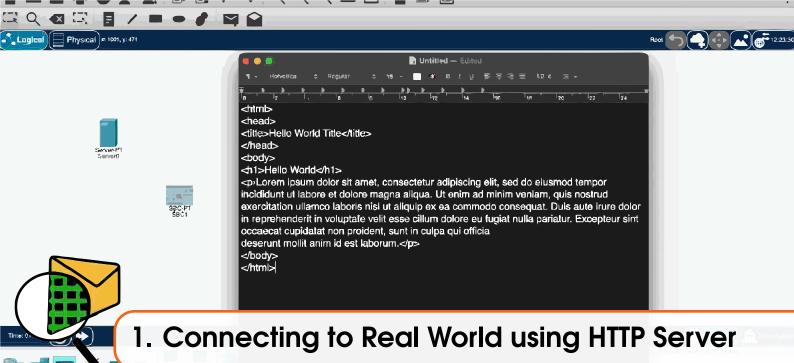

# Introduction

In this lab, you will learn how to **configure a JavaScript-based HTTP server** within Cisco Packet Tracer—first on a Single Board Computer (SBC) and then on a standard Server device. You will create routes, embed HTML, and verify responses via your local (or Packet Tracer's built-in) web browser. By the end, you'll see how Packet Tracer can simulate real HTTP connections for simple web hosting, providing a solid foundation for more advanced IoT or networking labs.

# Objectives

- Build a basic topology in Cisco Packet Tracer (SBC, Server).
- Create and run a JavaScript HTTP server on the SBC.
- Modify port numbers, routes, and responses (including multi-line HTML).
- Validate the server by accessing it through a browser at 127.0.0.1.
- Transfer the same concept to the Server device, using a different port and route.

# Lab Plan

- A. Launch Packet Tracer and Observe the Initial Workspace
- B. Build the Topology
- C. Programming SBC Board (Creating the Program)
- D. Programming SBC Board (Modifying the Program)
- E. Programming SBC Board (Testing the Modification)
- F. Programming SBC Board (Creating Another Directory)
- G. Programming SBC Board (Adding to Your Web Page)
- H. Programming on the Server

# **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Basic knowledge of navigating the Programming tab in Packet Tracer

• Optional: external web browser for testing (http://127.0.0.1:{port})

# A. Launch Packet Tracer and Observe the Initial Workspace

# 1. Open Packet Tracer:

Double-click the Packet Tracer icon on your computer. You will see a blank Logical topology workspace.

# A. Launch Packet Tracer and Observe the Initial Workspace

# (a) **Open Packet Tracer:**

Double-click the **Packet Tracer** icon on your computer to launch the program. When it starts, you'll see a blank *Logical* topology workspace, as shown in Figure 1.1.

				A		1	2							<b>7</b>
ΞQ										. — .				
Logical														Root 🕤 🌒 🖓 🛋 💣 20:53:30
Time: 00:41:4	(O)													Realtime 🚍 Simulation
🎾 🗾	E ,	۲	1		c Lap	top Si	arver Meski Se	Network Controller	Printer	IP Phone	De C	Scenario	0 💟	Fire Last Status Source Destination Type Color Time(sec) Periodic Num Edit Delete
<b>_</b>		- 1	4								•	-	elete	
		-	4m				PC	-PT				oggle PDU List	Window	

Figure 1.1: Initial workspace with no devices added yet.

# B. Build the Topology

# 2. Practice the Device-Type Selection Box:

In the lower-left corner of Packet Tracer, you'll see two rows of icons:

- The top row shows device categories (e.g., End Devices, Components, Network Devices).
- The bottom row shows subcategories (e.g., Servers, PCs, SBC Boards).

Hover your mouse slowly over each category/subcategory to reveal helpful tooltips. This step familiarizes you with the **wide array of devices** you can use to build network scenarios.



Figure 1.2: Using the Device-Type Selection box to pick devices.

**Why do this?** Understanding how to navigate these categories is essential for quickly finding the right devices (like routers, switches, IoT boards, or servers). It also ensures you're comfortable adding, removing, or replacing components in more complex labs.

# 3. Add a Server:

- In the top row, click *End Devices*.
- In the bottom row, look for and select **Server**.
- Move your cursor over the main workspace and click to place the server.

After a brief moment, you should see the server icon appear with default settings (e.g., *Server0*).

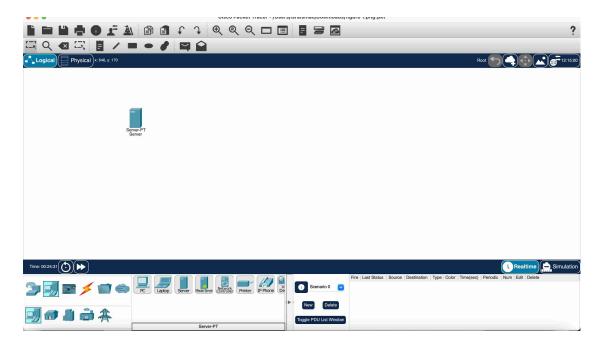


Figure 1.3: Server device added to the empty workspace.

**Why a Server**? A **Server** in Packet Tracer can host a variety of services (HTTP, DHCP, DNS, etc.). Having one in your topology allows you to simulate real-world network scenarios such as serving web pages or allocating IP addresses.

# 4. Add an SBC Board:

- Still in the top row, click Components.
- In the bottom row, select SBC (Single-Board Computer).
- Click inside the workspace to place the SBC.

You will now see both the Server and SBC board in the workspace.

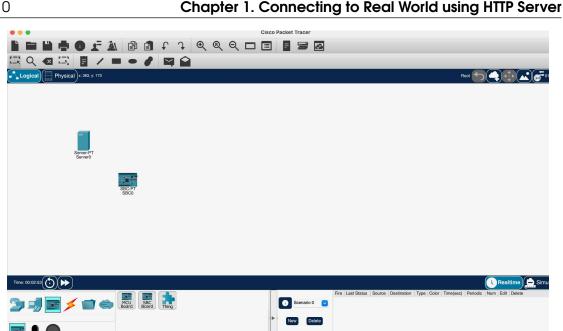


Figure 1.4: Topology now includes a Server and an SBC board.

Why an SBC Board? A Single-Board Computer (SBC) can represent a small device or microcontroller in IoT scenarios. This allows you to explore and experiment with networking, programming, and IoT features (e.g., sensors, actuators) within Packet Tracer.

# C. Programming SBC Board (Creating the Program)

# 5. Open the SBC Board Configuration:

Click on the SBC Board to open its configuration window. Then select the Programming tab. You will see a list of existing scripts on the left, and an editor or console area on the right.

- Why do this?. Accessing the *Programming* tab is the starting point for any custom script you wish to run on the SBC. By default, an SBC may include sample scripts (like Blink), which you can edit or remove.

# 6. Delete the File Blink (Python):

In the left panel, highlight the script named "Blink (Python)" and remove it by clicking the *Delete* or *Remove* button.

	J @ @ Q 🗆 🗏 🖥 🗃 🗃	?
🖾 Q 🚳 🖾 / = - / 🖼		
	● ● ● SBC1	Root 6 01:40:30
Sever PT Serve0	Specifications       Physical       Config       Desktop       Programming       Attributes         No Project Opened       Install to Desktop       Run       Clear Outputs       Help         Blink (Python)       Install to Desktop       Run       Clear Outputs       Help         Blink (Python)       Install to Desktop       Run       Clear Outputs       Help         Very statistic open (Run (Python))       Install to Desktop       Run       Clear Outputs       Help         Very statistic open (Run (Python))       Very statistic open (Run (Python))?       Image: Statistic open (Run (Python))?       Image: Statistic open (Run (Python))?	
	Serial Outputs	Realtime 🔔 Simulation

Figure 1.5: Removing the default Blink script from the SBC.

— Why remove Blink?. The Blink script is a simple default demonstration. Removing it declutters the interface, so you can start fresh with your own HTTP server script.

# 7. Create a New HTTP Server Script:

Click the **New** button on the left, name the script *HTTP Server*, and select the template Real HTTP Server - JavaScript from the dropdown list.

		Attributes	
No Project Opened Open New Delete Rename Import			Install to Desktop Run Clear Outputs Help
Crr Ent Nar	ate Project are a project name and select the project type. ne: HTTP Server Template eal HTTP Server - JavaScript Global Script Project	×	
Serial Outputs	1TT Broker - (Python) 🗸	Cancel	
Тар			Å

Figure 1.6: Creating a new JavaScript-based HTTP Server project.

11

**— Why JavaScript?.** The Real HTTP Server - JavaScript template auto-generates boilerplate code (main.js plus route handling) that's already set up to listen for HTTP requests. This simplifies creating basic web endpoints quickly.

# 8. Open main. js and Run the Code:

In the left panel, click main.js, then switch to the **Run** tab (usually at the top right of the editor window).

<pre>41 reply.setContent("reached 42 reply.setStatus(200); 43 reply.end(); 44 } 45 server.route("/*", ["GET"], o 47 server.route("/contacts", ["g</pre>	<pre>' + 'request.url() + ", ip: " + request.ip()); services"); i_files); it", "POST"], server.on_contacts); Post", "get"], server.on_services);</pre>	
50 server.route("*", ["POST"], o 51 } 52		

Figure 1.7: Running the newly created main.js.

# 9. Allow Port 8765:

Upon running the script, Packet Tracer will prompt you to allow the SBC to listen on port 8765. Click *Allow* or *Yes* when asked.



Figure 1.8: Permission pop-up for listening on port 8765.

— What is Port 8765?. Web servers typically run on port 80 (HTTP) or port 443 (HTTPS). Here, we're using 8765 for demonstration. Packet Tracer's built-in firewall prompts you to confirm that this script can bind to that port.

#### 10. Test via Browser:

In your *PC's* or *SBC's* browser (Packet Tracer's built-in browser, or your real system browser if configured), navigate to:

127.0.0.1:8765/contacts

You should see a response similar to "reached contacts...".

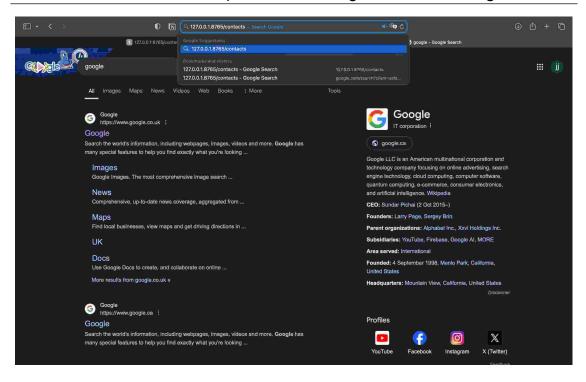


Figure 1.9: Browser pointing to /contacts on port 8765.



Figure 1.10: A simple web page output from the SBC.

— Why 127.0.0.1?. 127.0.0.1 is the loopback address, meaning the SBC itself is hosting the server. In many real networks, you'd use the SBC's assigned IP (e.g., 192.168.x.x). Here, we test locally to confirm the server is functioning before exploring external connections.

# 11. Check Program Outputs:

Open the **Console** or **Log** at the bottom or side of the SBC's *Programming* tab. You will see debug messages showing request handling (e.g., "GET /contacts" or "request from 127.0.0.1").

		F	Polood	Com	Dente	Undo	Dada	Find	Deplese	Zoom: +
24		F	reload	Copy	Paste	Undo	Redo	Find	Replace	200m:+
24 25 }	reply.end();									
26										
	ction setup() {									
28	var server = new RealHTTPServer();									
29	server.start(8765);									
30	<pre>Serial.println("Running: " + server.isListening());</pre>									
31										
32 *	<pre>server.on contacts = function(request, reply){</pre>									
33	<pre>Serial.println("C - url: " + request.url() + ", ip: " + request.ip(</pre>	));								
34	reply.setContent("reached contacts");									
35	reply.setStatus(200);									
36	reply.end();									
37	}									
38										
39 -	<pre>server.on_services = function(request, reply){</pre>									
40	<pre>Serial.println("S - url: " + request.url() + ", ip: " + request.ip(</pre>	));								
41	<pre>reply.setContent("reached services");</pre>									
42	reply.setStatus(200);									
43	reply.end();									
44	}									
45										
46	<pre>server.route("/*", ["GET"], on_files);</pre>									
47	<pre>server.route("/contacts", ["gEt", "POST"], server.on_contacts);</pre>									
48	<pre>server.route("/services/*", ["Post","get"], server.on_services);</pre>									
49	<pre>server.route("*", ["GET"], on_gets);</pre>									
50	<pre>server.route("*", ["POST"], on_posts);</pre>									
51 }										

Figure 1.11: SBC console output showing request handling.

- Why check the console?. Viewing the console messages helps you:
  - Confirm that HTTP requests reach your code.
  - Debug any syntax or connection issues (e.g., port binding errors).
  - Monitor the incoming URLs or routes that users (or other devices) are requesting.

#### Tips for Creating the Program:

- **Port Binding Prompts:** If you accidentally deny Packet Tracer's prompt to open port 8765, click **Stop** and re-**Run** the code. You should see the prompt again, allowing you to grant permission.
- **Double-Check the Template:** Always confirm you've selected Real HTTP Server JavaScript. This ensures Packet Tracer generates main.js, along with default route-handling functions, simplifying your server setup.

# D. Programming SBC Board (Modifying the Program)

12. Change Script Values in main.js:

Using the code editor in the Programming tab, locate and modify the following lines:

- Line 22: Change F to "Fail"
- Line 29: Change 8765 to 8008
- Line 33: Change C url to "Connected via url"
- Line 52: Change gEt to get

Each of these updates will alter the behavior or appearance of your HTTP server's responses and port configuration.

- Why make these changes?. Renaming "F" to "Fail" (Line 22) might clarify an error message or status code in your script.
  - Shifting from Port 8765 to 8008 (Line 29) demonstrates how to run an HTTP

server on a different port. This also helps you understand how to free up ports or avoid conflicts in advanced scenarios.

- Changing "C url" to "Connected via url" (Line 33) makes your console or web responses more descriptive, improving readability for debugging or demonstration.
- **Correcting "gEt" to "get"** (Line 52) resolves a case-sensitivity issue. Packet Tracer's JavaScript engine is strict about capital letters in function names and route methods.

#### Tips for Editing the Script:

- Syntax and Capitalization: Packet Tracer's JavaScript engine is case-sensitive. Ensure your replacements use the exact case (e.g., changing gEt to get).
- Comment Your Changes: For clarity, you can add inline comments, for example:

// changed port to 8008

// updated gEt to get

 
• **Save Frequently:** While Packet Tracer often auto-saves your script state, it's good practice to explicitly save after each major edit to avoid losing work if you close the project.

# E. Programming SBC Board (Testing the Modification)

#### 13. Stop the Program:

In the *Programming* tab, click the **Stop** button to halt the currently running script (see Figure 1.12). Stopping the script ensures that any new changes (such as port numbers) will take effect when you re-run it.

Specifications Physical Config Desktop Programming Attributes
HTTP Server (JavaScript) - main.js
Open New Delete Rename Import Install to Desktop Run Clear Outputs Help
Reload Copy Paste Undo Redo Find Replace Zoom:+ -
25 }
25 7
27 - function setup() {
<pre>28 var server = new RealHTTPServer();</pre>
29 server.start(8008);
<pre>30 Serial.println("Running: " + server.isListening());</pre>
31
<pre>32 - server.on_contacts = function(request, reply){</pre>
33 Serial.println("Connected via url: " + request.url() + ", ip: " + request.ip()); 34 reply.setContent("reached contacts"):
<pre>34 reply.setContent("reached contacts"); 35 reply.setStatus(200);</pre>
36 reply.end();
i 37
38
<pre>39 * server.on_services = function(request, reply){</pre>
40 Serial.println("S - url: " + request.url() + ", ip: " + request.ip());
<pre>41 reply.setContent("reached services");</pre>
42 reply.setStatus(200);
43 reply.end(); ; 44 }
i 44 } 45
45 46 server.route("/*", ["GET"], on files);
47 server.route("/contacts", ["get", "PDST"], server.on_contacts);
<pre>48 server.route("/services/*", ["Post","get"], server.on services);</pre>
<pre>49 server.route("*", ["GET"], on_gets);</pre>
<pre>50 server.route("*", ["POST"], on_posts);</pre>
51 }
52
Starting HTTP Server (JavaScript)
Running: true
C - url: /contacts, ip: ::ffff:127.0.0.1
HTTP Server (JavaScript) stopped.
Top



#### 14. Run the Program Again:

After stopping, select the **Run** button once more. Packet Tracer will prompt you to allow listening on the newly specified port, 8008. Click **Allow** (or **Yes**) to proceed.



Figure 1.13: Now listening on port 8008 instead of 8765.

15. Browse to 127.0.0.1:8008/contacts:

Open a web browser (either Packet Tracer's built-in browser or your system browser) and visit:

127.0.0.1:8008/contacts

You should again see the response:

reached contacts...

which confirms the server is now running on the new port.

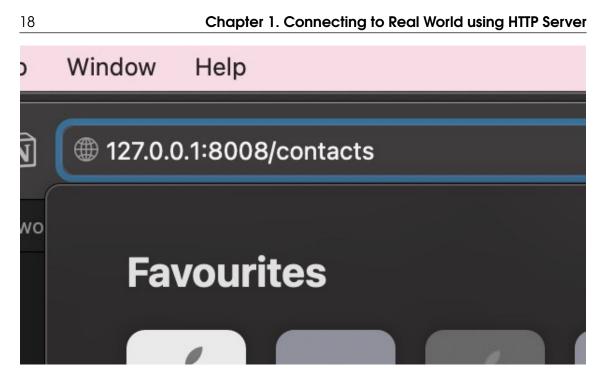


Figure 1.14: Switching to /contacts on port 8008.

	0	127.0.0.1	€ (
reached contacts			

Figure 1.15: The "reached contacts..." output on the new port.

# Tips for Testing the Modification:

- Verify the Console: In the SBC's log or console output, check for messages stating it is "listening on 8008." This confirms the change took effect.
- **Browser Choice:** You can use the *Packet Tracer Browser* (from the SBC or a local PC) or your actual computer's browser. As long as you allow the port binding, either should work.

# F. Programming SBC Board (Creating Another Directory)

16. Duplicate the /contacts Route:

In the main.js file, locate the line similar to:

```
server.route("/contacts", ["get","POST"], server.on_contacts);
```

Copy this line, then modify it as follows:

server.route("/hello", ["get", "POST"], server.on\_hello);

This step defines a brand-new endpoint called /hello, which will be handled by the function server.on\_hello.

	ver (JavaScript) - main.js Delele Rename Import Install to Desktop (Stop Clear Outputs) Heip
	Reload Copy Paste Undo Redo Find Replace Zoom:+ -
26	·
27 -	function setup() {
28	var server = new RealHTTPServer();
29	server.start(8008);
30	<pre>Serial.println("Running: " + server.isListening());</pre>
31	
32 *	<pre>server.on_contacts = function(request, reply){</pre>
33	<pre>Serial.println("Connected via url: " + request.url() + ", ip: " + request.ip());</pre>
34	<pre>reply.setContent("reached contacts");</pre>
35	reply.setStatus(200);
36	reply.end();
37	}
38	
39 +	<pre>server.on_services = function(request, reply){</pre>
40	<pre>Serial.println("S - url: " + request.url() + ", ip: " + request.ip());</pre>
41	<pre>reply.setContent("reached services");</pre>
42	reply.setStatus(200);
43	reply.end();
i 44	}
45	
46	server.route("/*", ["GET"], on_files);
47	server.route("/contacts", ["get", "POST"], server.on_contacts);
48	server.route("/hello", ["get", "POST"], server.on_hello);
49	<pre>server.route("/services/*", ["Post", "get"], server.on_services);</pre>
50	<pre>server.route("*", ["GET"], on_gets);</pre>
51	<pre>server.route("*", ["POST"], on_posts);</pre>
52	}
53	
53	<pre>g HTTP Server (JavaScript)</pre>
	: true
- url	: /contacts, ip: ::ffff:127.0.0.1
TP Se	rver (JavaScript) stopped.
	g HTTP Server (JavaScript)
nning	: true
nnoat	ed via url: (contacts in: ::ffff:127.0.0.1

Figure 1.16: Adding a new route /hello to complement /contacts.

— Why another route?. By creating multiple routes (e.g., /contacts and /hello), you expand the HTTP server's functionality. Each route can serve different content or handle unique data, much like real-world RESTful APIs or web servers.

17. **Define** server.on\_hello:

In your code, find the function body for server.on\_contacts (often near line 32 in the generated template). Copy that entire function, paste it beneath, and rename it to server.on\_hello. Then change the response text to:

"Hello World!"

This way, when /hello is accessed, you return a distinct message.

t.ip());
t.ip());
ι. <b>τ</b> ρ()),
31

Figure 1.17: Final code block for the new /hello route.

— Why a separate function?. Each route needs its own handler function (e.g., server.on\_hello). This keeps your code organized and helps manage different endpoints independently. Reusing the structure from server.on\_contacts is a quick way to maintain a consistent coding pattern.

#### 18. Stop, Re-run, and Test:

- Click the **Stop** button to halt the current script.
- Click **Run** again, allowing it to listen on port 8008.
- In your browser, visit 127.0.0.1:8008/hello.
- You should see the message: "Hello World!"

• • < >	0	127.0.0.1	<b>● ●</b>	⊕ û + ©
Hello World!				

Figure 1.18: Browser now responding with "Hello World!" at /hello.

#### Tips for Multiple Routes:

- **Practice Adding More:** Experiment with adding additional routes like /status or /about. Each new route requires:
  - 1. A server.route("/routeName", [...], server.on\_routeName);
  - 2. A corresponding function server.on\_routeName in main.js.
- **GET vs. POST:** While the route definition includes both ["get", "POST"], your web browser primarily sends GET requests. To experiment with POST, try tools like Postman

or cURL to send data and see how your server handles various request methods.

# G. Programming SBC Board (Adding to Your Web Page)

# 19. **Copy the Following HTML:** Below is a sample snippet you can embed into your response:

<html><head><title>Hello World Title</title></head> <body><h1>Hello World</h1> Lorem ipsum ...</body></html>

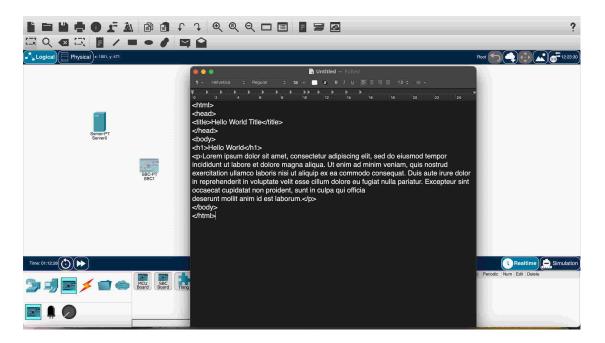


Figure 1.19: Multi-line HTML snippet to embed in the response (for reference).

— Why this HTML snippet?. Adding a simple HTML structure (<html>, <head>, <body>, etc.) introduces you to embedding more complex web content. You can quickly customize headings, paragraphs, or other elements to suit your project's needs.

# 20. Replace "Hello World!" in on\_hello:

In your main.js, locate the server.on\_hello function. Remove the old "Hello World!" text and paste the HTML snippet in its place (Figure 1.20).

**Important:** Keep the entire HTML code on a single line to avoid "Unclosed string" errors in Packet Tracer.

		Reload	Copy	Paste Unc	o Redo	Find	Replace	Zoom:
32 -	<pre>server.on contacts = function(request, reply){</pre>							
33	Serial.println("Connected via url: " + request.url() + ", ip: "	+ request.ip(	));					
34	<pre>reply.setContent("reached contacts");</pre>							
35	reply.setStatus(200);							
36	reply.end();							
37	}							
38 -	<pre>server.on_hello = function(request, reply){</pre>							
39	<pre>Serial.println("Connected via url: " + request.url() + ", ip: "</pre>	+ request.ip(	));					
40	reply.setContent(" <html></html>							
	<head></head>							
	<title>Hello World Title</title>							
	<body></body>							
	<h1>Hello World</h1>					_		
	Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed do eiusm	od tempor inc.	ididun	t ut labor	e et do	lore	magna a	liqua.
	deserunt mollit anim id est laborum.							
	");							
50	reply.setStatus(200);							
51	reply.end();							
52	}							
53 -	<pre>server.on_services = function(request, reply){</pre>	2-()).						
54	<pre>Serial.println("S - url: " + request.url() + ", ip: " + request.</pre>	ip());						
55 56	<pre>reply.setContent("reached services"); reply.setStatus(200);</pre>							
50								
57	reply.end();							
59	}							
29	asmuan manha(H/.H INCCTH1 an files).							
	ng HTTP Server (JavaScript)							
	g: false							
	erver (JavaScript) stopped.							
	ng HTTP Server (JavaScript)							
	g: true							
nnect	ed via url: /hello, ip: ::ffff:127.0.0.1							

Specifications Physical Config Desktop Programming Attributes

Figure 1.20: HTML pasted into the code on a single line.

— Why the one-line requirement?. Packet Tracer's JavaScript parser treats line breaks within a quoted string as syntax errors. If you need multiple lines, use either string concatenation or the correct escape characters to avoid the "Unclosed string" error.

#### 21. Stop, Re-run, and Check the Page:

- Stop the script to apply your changes.
- Run it again, ensuring port 8008 is allowed.
- In your browser, navigate to 127.0.0.1:8008/hello.
- You should see the HTML content (title, heading, and paragraph) rendered in the browser.

Hello World

Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed do eiusmod tempor incididunt ut labore et dolore magna aliqua. Ut enim ad minim veniam, quis nostrud exercitation ullamco laboris nisi ut aliquip ex ea commodo consequat. Duis aute irure dolor in reprehenderit in voluptate velit esse cillum dolore eu fugiat nulla pariatur. Excepteur sint occaecat cupidatat non proident, sunt in culpa qui officia deserunt mollit anim id est laborum.

Figure 1.21: Embedded HTML now visible at the /hello route.

# **Tips for Embedding HTML:**

- **One-Line Requirement:** If you insert line breaks in the string, Packet Tracer may report an "Unclosed string" error. Keep your snippet on one line or properly escape line breaks with \n.
- Add More Elements: Experiment with tags like <h2>, , , or even images to

22

see how you can enrich your embedded web page. This lets you create more sophisticated interfaces or information displays.

# H. Programming on the Server

# 22. Why Move the Script to the Server?

In Packet Tracer, the standard **Server** device has a built-in file system for storing multiple scripts and files. This makes it especially useful if you're planning more complex or larger-scale labs. You can follow essentially the same steps you did with the SBC, but:

- Use a different port, such as 8001 (instead of 8765 or 8008).
- Provide a different route name, like /HelloServer0.

This way, you can keep your SBC project and the Server's project separate, each serving different HTTP endpoints.

# 23. Open Another Browser Tab:

After creating and running your JavaScript-based HTTP server on the **Server** device, open a new browser tab (either in the built-in Packet Tracer browser or on your host system, if properly configured). Navigate to:

127.0.0.1:8001/HelloServer0

to access your newly hosted route.



Figure 1.22: Accessing the route /HelloServer0 on port 8001.

# 24. Confirm "Hello World Server0":

If everything is configured correctly, your browser should display a page (Figure 1.23) containing the text "Hello World Server0" or whichever custom message you defined in your script.

	0 1 0	127.0.0.1	<b>●</b>	• ů + ©
	🔟 Hello World Title		1 Hello World Title	
Hello World				

Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed do eiusmod tempor incididunt ut labore et dolore magna aliqua. Ut enim ad minim veniam, quis nostrud exercitation ullanco laboris nisi ut aliquip ex ea commodo consequat. Duis aute irure dolor in reprehenderit in voluptate velit esse cillum dolore eu fugiat nulla pariatur. Excepteur sint occaecat cupidatat non proident, sunt in culpa qui officia deserunt mollit anim id es laborum.

Figure 1.23: Final page served by the standard Server device.

# Tips for Using the Server Device:

- **Built-in File System:** The Packet Tracer **Server** device comes with its own file system, allowing you to store multiple scripts or web files. This is more convenient for bigger or multi-service labs, where you might host multiple pages or applications.
- Multiple Ports in Parallel: Want to simulate multiple web services? You can continue

running your SBC HTTP server on port 8008, while simultaneously hosting another script on the **Server** at port 8001. This is handy for testing how different client devices interact with different endpoints on the same network.

#### **Measuring Success**


- SBC's HTTP Server Responses: You can navigate to 127.0.0.1:8008/hello and see the HTML content you embedded, confirming that the /hello route is operational.
- **Route Flexibility:** If you created a second or third route (e.g., /about), you can visit it in the browser and see your custom text—verifying your ability to duplicate and modify route logic.
- Server-Side Hosting on Port 8001: You can open 127.0.0.1:8001/HelloServer0 to see "Hello World Server0," demonstrating a successful HTTP service on Packet Tracer's standard Server.
- **No Port or Syntax Errors:** The Packet Tracer console shows no messages like "Failed to bind port" or "Unclosed string," confirming that your code is stable and properly configured.

# Summary

You have successfully **modified an existing script in Packet Tracer** to connect to real-world networks using a JavaScript-based HTTP server. Starting with an SBC board, you added routes (/contacts and /hello), embedded HTML, changed ports, and verified everything in a web browser. You then repeated a similar process on a standard Server device for comparison, demonstrating how Packet Tracer can simulate a variety of HTTP-based scenarios.

#### - Further Exploration

- Experiment with additional device states (e.g., MEDIUM or ALERT).
- Add environment-based triggers (like temperature or motion) to automatically change an IoT device's state or route response.
- Combine multiple IoT devices and scripts to build a more integrated smart home scenario.

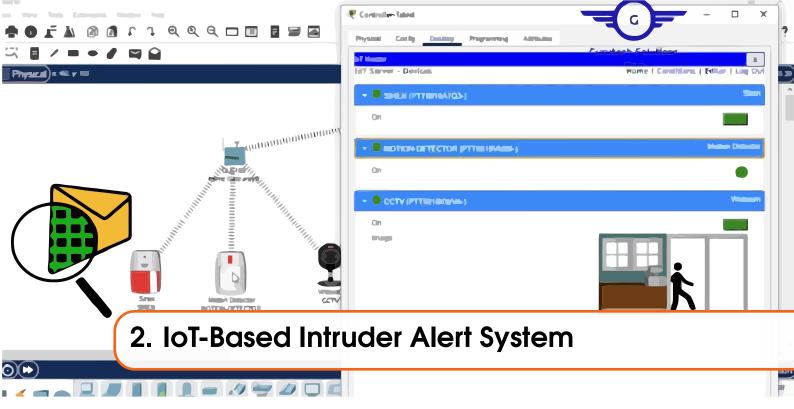

# Introduction

This lab demonstrates how to build and configure an **IoT-based intruder detection system** in Cisco Packet Tracer. You will create a network with motion detectors, sirens, and CCTV cameras, all registering to a Home Gateway server. By defining conditions and programming devices to react to motion, you will simulate a functional security system capable of detecting intruders and triggering alarms.

# Objectives

- Set up a simulated IoT system in Packet Tracer to detect intruders.
- Build and configure a topology with motion detectors, sirens, and CCTV cameras.
- Register IoT devices to a Home Gateway server.
- Program devices to react to motion, activating the CCTV and Siren.
- Test the system by simulating motion detection and ensuring correct responses.

# Lab Plan

- A. Launch Packet Tracer
- B. Build the Topology
- C. Configure the Tablet (Wireless Settings)
- D. Register IoT Devices with Home Gateway
- E. Explore Devices on the Network
- F. Connecting IoT Devices (Conditions)
- G. Testing the Motion Detector Rules

# **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Basic knowledge of IoT device configuration in Packet Tracer
- Optional: external PC browser if you wish to test advanced user interfaces

# A. Launch Packet Tracer

# 1. Open Packet Tracer:

Double-click the Packet Tracer icon on your desktop or locate it in your applications folder to launch. You should see a blank default Logical topology workspace similar to the figure below.

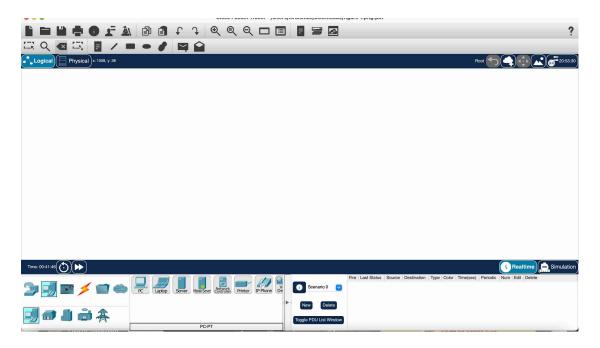


Figure 2.1: Initial Workspace (blank default topology).

# B. Build the Topology

# 2. Add Network Devices:

In Packet Tracer's lower-left pane, hover over the *device categories* and *subcategories* to locate each IoT component. Drag and drop the following onto your workspace:

- Home Gateway
- Motion Detectors
- Sirens
- CCTV Cameras

Arrange them to reflect how you want the network to appear. See Figure 2.2 for an example layout.

- Why these devices?.
   Home Gateway: Acts as a central hub or router for IoT devices, often providing wireless connectivity and an IoT registration service.
  - Motion Detectors, Sirens, and CCTV Cameras: Common security-focused IoT devices that communicate with the Home Gateway.

Collectively, these devices form a basic intruder alert or security monitoring system in Packet Tracer's IoT environment.

# 3. Rename Devices:

After placing each device, click on it, navigate to the **Config** tab, and modify the *Display Name* to something descriptive (e.g., "Siren1," "MotionSensor1," "CCTV1"). Meaningful labels make it easier to differentiate between multiple devices of the same type.

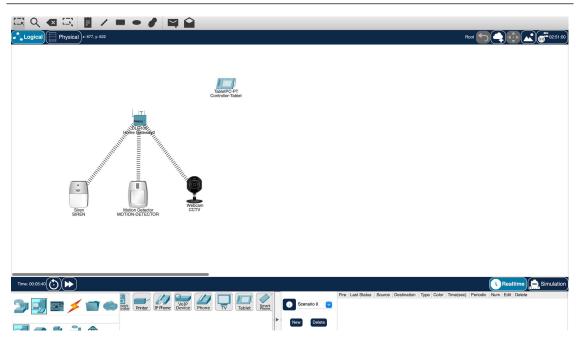


Figure 2.2: Topology with motion detectors, sirens, and cameras.

**— Why rename?.** In larger or more complex labs, you might have multiple sirens, cameras, and sensors. Assigning clear names (e.g., *CCTV1*, *CCTV2*, etc.) prevents confusion when configuring or troubleshooting. This also simulates real-world best practices for device naming.

# C. Configure the Tablet (Wireless Settings)

# 4. Open the Tablet's Config Tab:

Click on the **Tablet** device to open its configuration window, then select the *Config* tab at the top. The left panel will display available interfaces and settings.

— Why do this?. The *Config* tab provides a streamlined way to rename devices, adjust network settings, and configure wireless parameters without using the CLI. This is especially helpful if you're new to IoT devices in Packet Tracer.

# 5. Change Wireless SSID:

In the left pane, click on **Wireless0** (the wireless interface). Change the SSID field from "Default" to "HomeGateway". This sets the name of the wireless network the Tablet will join.

Logical Physical x: 559, y: 147	• • •	Controller-Tak		
		Physical Config Desktop Pr	wireless0	
	GLOBAL		W11616630	
	Settings	Port Status		On Con
	Algorithm Settings	Bandwidth	11 Mbps	
	INTERFACE			
	Wireless0 3G/4G Cell1	MAC Address SSID	0009.7C49.7153 HomeGateway	
	Bluetooth	Authentication		
		O Disabled WEP	WEP Key	
2011		WPA-PSK WPA2-PSK	PSK Pass Phrase	
with.		WPA WPA2	User ID	
IIIIII		110	Password	
and the second sec		802.1X Method:	MDs	
. Proprinter and			User Name	
• "			Password Disabled	0
-		Encryption Type	Disabled	
Siren Mc		IP Configuration		
SIREN MOTIC		O DHCP Static		
		IPv4 Address	192:168.25.103	
		Subnet Mask		
: 00:18:51 () )		IPv6 Configuration		🕕 Realtime 💭 Simul
		Automatic Static		stination Type Color Time(sec) Periodic Num Edit Delete
I 🗾 🖙 🗲 🖬 👄 🌡		IPv6 Address	1	
		Link Local Address: FE80::209:7CFF:FE	:49:/153	

Figure 2.3: Wireless settings on the Tablet.

- Why rename the SSID?.
   Using a clear SSID like "HomeGateway" helps differentiate this wireless network from others, especially in complex topologies.
  - It ensures that any wireless device (like the Tablet) knows exactly which network to connect to.

# 6. Verify Connection:

After changing the SSID, you should see a **wireless link** (often shown as a dotted or curved line) automatically forming between the Tablet and the **Home Gateway**, as shown in Figure 4.4.

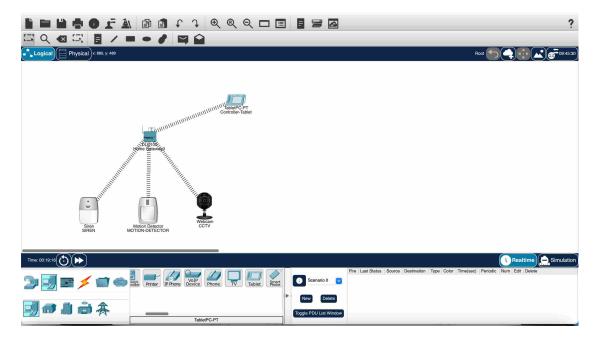


Figure 2.4: Wireless connection established between Tablet and Gateway.

- How to confirm the wireless link?.
   Check for a wireless symbol or a dotted line directly connecting the Tablet to the Gateway in the Logical workspace.
- Alternatively, hover your cursor over the Tablet or Gateway to see if the pop-up information indicates a wireless association (e.g., signal strength or connected SSID).

# D. Register IoT Devices with Home Gateway

- 7. Siren Registration:
  - Click on the Siren device in the workspace.
  - Go to  $Config \rightarrow Settings$ .
  - Under IoT Server (usually a dropdown or selection box), choose Home Gateway.

This tells the Siren to communicate and register with the Home Gateway, making it controllable via the gateway's IoT services.

# 8. Motion Detector Registration:

- Click on the Motion Detector device.
- Navigate to  $Config \rightarrow Settings$ .
- Under IoT Server, select Home Gateway again.

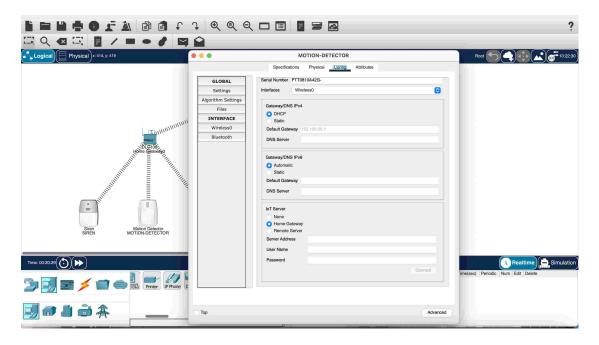


Figure 2.5: Registering devices to Home Gateway (example).

- Why register Siren and Motion Detector?. By registering, the devices become visible to the Home Gateway's IoT Monitor.
  - It allows you to create automated rules (e.g., *if Motion Detector = triggered, then activate Siren*).

# 9. Webcam Registration:

- Click on the Webcam icon.
- Go to  $Config \rightarrow Settings$ .

• Under IoT Server, choose Home Gateway.

	, e e e		?
□         Q         ☑         □         /         ■         ●         Ø         ☑           ▲ Logical         □         Physical         =         1386, y. 445         ☑         ☑		ссти	Root () (10:34:30)
SIREN MOTOR-DEFECTOR	GLOBAL Settings Algorithm Settings Files INTERFACE Wireless0 Bluetooth	Specification Physical Control Attributes	Realtime Simulation
	Тор	Advanced	

Figure 2.6: Registering the Webcam to Home Gateway.

- Why register the Webcam?. • The Webcam can record or stream footage upon detecting motion or other triggers.

• Linking it to the Home Gateway helps centralize control and monitoring (for example, the gateway can activate recording when motion is detected).

# E. Explore Devices on the Network

10. Activating Devices (Alt-Key):

In Packet Tracer, holding down the **Alt** key while hovering your cursor over certain IoT devices can simulate triggering or interacting with them.

• For example, with a **Motion Detector**, pressing Alt causes its *red light* to appear, indicating activation or detection.

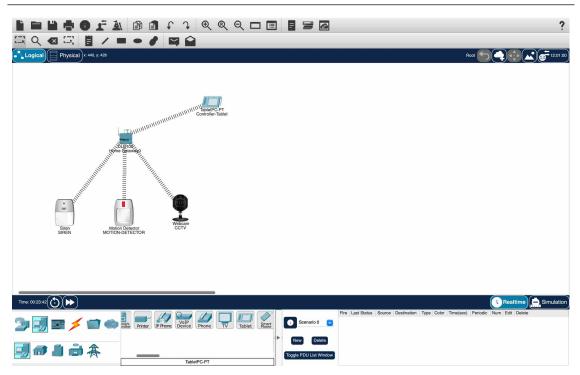


Figure 2.7: Motion detector showing a red light when activated (via Alt + hover).

- Why use Alt?. Triggers Device State: In Packet Tracer's IoT environment, Alt + hover is a quick way to simulate real-world sensor inputs (e.g., motion or heat).
  - **Testing Reactions:** This helps you check if other devices (like sirens or CCTV) respond correctly to a triggered sensor without needing a fully automated script.

# 11. Viewing Device Info:

Simply hover your cursor over a device (e.g., the Tablet) to see a pop-up with basic network data like:

- IP address
- MAC address
- Device Name

This allows a quick overview of how devices are identified and connected.

31

È ⊨ ≌ ♣ ᠿ ⋰ À ഈ ∄ ♪ ♪ ♥ ♥ ♥ ⊂ Ε Ε ₩ Δ ☆ ♥ ♥ ☆ ↓ = ● ✔ ₩ ⋒ <sup>•</sup> Logica ← Physical × 55. y 150 Rex ⓑ ♥ ♥	?
with the second part of the second part	
Time: 27 29 46 (b)	

Figure 2.8: Viewing device information (IP, MAC, etc.) by hovering.


# 12. Open IoT Monitor on Tablet:

- Click the Tablet.
- Switch to the *Desktop* tab.
- Select *IoT Monitor*.

The IoT Monitor is where you can log in to the Home Gateway and see or control registered IoT devices.



 Figure 2.9: Accessing IoT Monitor from the Tablet's desktop.



• Rules & Automation: You can also configure triggers or actions (e.g., *if motion detected, then turn on siren*).

# 13. Log in to Home Gateway:

- In IoT Monitor, enter the Home Gateway IP (e.g., 192.168.25.1).
- Use default credentials, typically admin / admin.

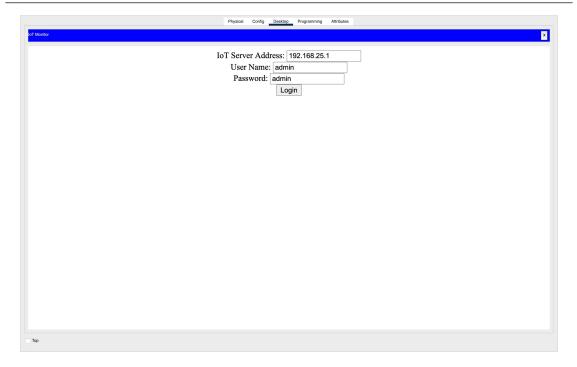


Figure 2.10: Logging into Home Gateway via the Tablet.

# 14. View Connected Devices:

Once logged in, a list of all registered IoT devices (Sirens, Motion Sensors, Webcams, etc.) appears. Select any device to see more details.

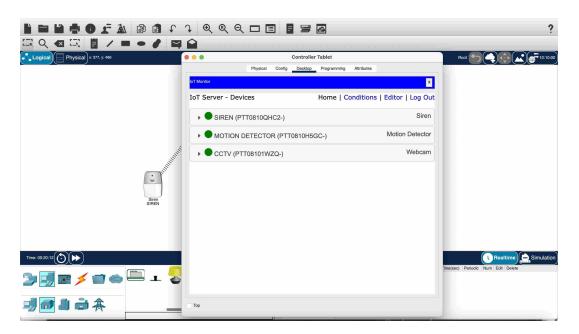


Figure 2.11: List of IoT server devices on Home Gateway.

# 15. Check Device Status/Settings:

- Clicking a device in the IoT Monitor reveals its Status and Settings.
- This can include on/off states, battery levels, or any special configurations specific to

that device.

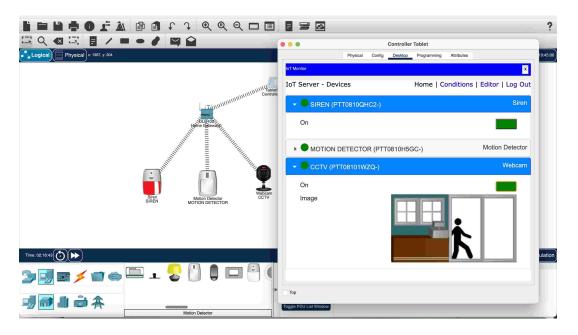


Figure 2.12: Status and configuration options for connected IoT devices.

- How to use these details?.
   Troubleshoot: If a device isn't responding, verify here if it's registered, online, or has any error states.
  - **Manage Remotely**: Change settings such as sensitivity for motion sensors or volume for sirens without physically "touching" the device in the workspace.

# F. Connecting IoT Devices (Conditions)

*Goal:* Link the CCTV and Siren to the Motion Detector so that when the motion detector is "on," the other devices activate as well.

# 16. Add a Motion Detector Rule:

- On the Tablet's **IoT Monitor** interface, click on the **Conditions** tab.
- Select the Add Rule button and name your new rule MOTIONDETECT.

This rule will define what happens when the motion sensor detects movement.

- 17. Set Condition:
  - Within the new MOTIONDETECT rule, choose "motion detector" as the device.
  - Under *State*, pick "on," which should auto-fill "true" or a similar boolean value indicating motion is detected.
- 18. Set Actions:
  - Under *Actions*, select SIREN and set on = true.
  - Click Add Action to also set CCTV on = true.

This means that once the **Motion Detector** is on, it will automatically turn the **Siren** and **CCTV** on as well.

	Physical	Config	Desktop	Programming	Attributes	
IoT Monitor						×
IoT Server - Device Conditions						Home   Conditions   Editor   Log Out
Edit Rule						×
Name MOTIONDETECT Enabled 🗹						
If: Match All v MOTION DETECTOR v On v is true v						- + Condition + Group
Then set: SIREN ON to true CCTV ON ON to true True						+ Action
						OK Cancel
Тор						

Figure 2.13: Creating the first condition for motion detection.

Actio	_	Name		
	Yes	MOTIONDETECT	Condition MOTION DETECTOR On is true	Actions Set SIREN On to true Set CCTV On to true
dd	·	,		L

Figure 2.14: CCTV and Siren set to "on" when motion is detected.

# 19. Test the Setup:

- Close the tablet window (or leave it open to observe status updates).
- Hold Alt/Option and hover your cursor over the Motion Detector device in the

36

workspace.

• As soon as the motion detector is triggered, both the **Siren** and **CCTV** should switch on.

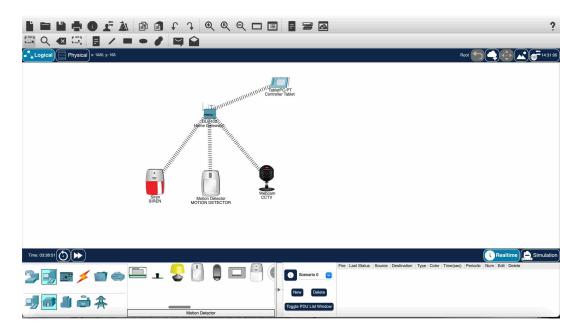


Figure 2.15: Siren and CCTV turning on when motion is detected.

- Why Create a Rule?. Automated Security: By configuring conditions and actions, you simulate a basic home or office security system where motion automatically triggers alarms and camera recording.
  - Easy Management: Using *IoT Monitor* rules is more efficient than writing custom scripts to link devices, making it beginner-friendly for rapid prototyping of IoT interactions.

# G. Testing the Motion Detector Rules

*Observation:* After a few seconds, the Motion Detector automatically resets to an off state, yet the Siren and CCTV remain on. We need a second rule that deactivates them when motion is no longer detected.

- 20. Add a "No Movement" Rule:
  - On the Tablet, open **IOT Monitor** and navigate to the **Conditions** tab again.
  - Click Add Rule and name it NOMOVEMENT.
- 21. Condition:
  - Set *Device* to "motion detector."
  - Under *State*, choose "on = false."

This captures the scenario when the motion detector returns to an off state (no movement).

- 22. Actions:
  - Set SIREN on = false.
  - Click Add Action to also set CCTV on = false.
  - Click **Connect** (or **Save**) to finalize the rule.

Actions	Enabled	Name	Condition	Actions
lit Remove	Yes	MOTIONDETECT	MOTION DETECTOR On is true	Set SIREN On to true Set CCTV On to true
lit Remove	Yes	NOMOVEMENT	MOTION DETECTOR On is false	Set SIREN On to false Set CCTV On to false
d				

Figure 2.16: Creating the "no movement" condition to turn devices off.

	Physical Con	fig Desktop Programming	Attributes		
IoT Monitor					
Add Rule					×
Name NOMOVEMENT					
Enabled 🗹					
If: Match All V					
MOTION DETECTOR V On V is false V				-	+ Condition + Group
Then set:					+ Action
SIREN V On V to false V					
CCTV V On V to false V					-
					OK Cancel
Тор					

Figure 2.17: Both CCTV and Siren set to "off" when no motion is detected.

## 23. Final Test:

- Exit or minimize the Tablet window.
- Once again, hold Alt/Option and hover over the Motion Detector to simulate movement.

- Verify that the CCTV and Siren turn on when motion is detected.
- Wait a few seconds for the motion to reset, and confirm that the CCTV and Siren automatically switch off.

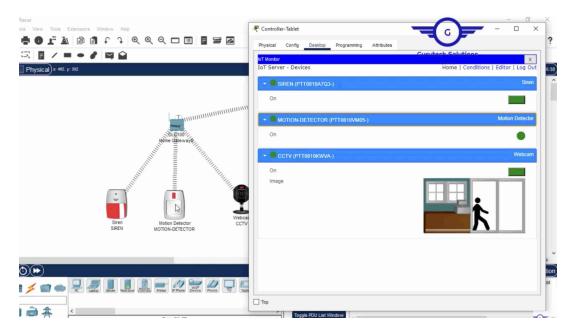


Figure 2.18: CCTV and Siren on while the motion sensor is active.

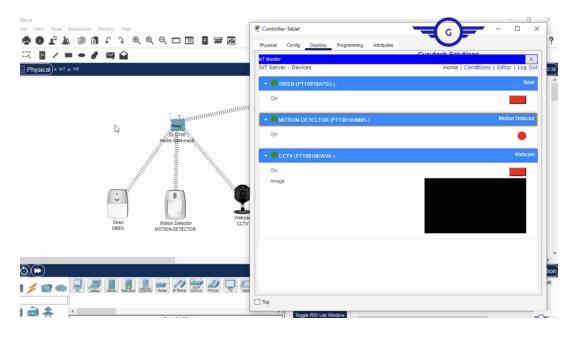


Figure 2.19: Devices turning off after motion ceases.

- Why Two Separate Rules?. Positive Trigger: The MOTIONDETECT rule handles what happens when motion is detected (on = true).
  - **Negative Trigger:** The NOMOVEMENT rule handles what happens *when* motion stops (on = false), ensuring devices don't stay on indefinitely.
  - Realistic Behavior: This mimics how a real motion sensor system automatically resets to


off, deactivating alarms and cameras after a period of no movement.

#### **Measuring Success**

- **Device Registration:** Each IoT device (Siren, Motion Detector, Webcam) appears in the Home Gateway list, confirming a correct "Home Gateway" registration.
- Motion Activation: Holding Alt over the motion detector triggers the CCTV and Siren to turn on—verifying the "MOTIONDETECT" condition rule works.
- Automatic Reset: After motion stops, the "NOMOVEMENT" rule turns off both CCTV and Siren, indicating a complete on/off cycle is functional.
- **Tablet Monitoring:** The Tablet's IOT Monitor displays all devices with accurate statuses, ensuring you can view and manage them in real time.

## Summary

Congratulations! You have successfully built and configured an IoT-based intruder detection system in Cisco Packet Tracer. Through device registration, condition-based rules, and practical testing, you demonstrated how motion sensors can seamlessly trigger CCTV cameras and sirens—forming a functional security setup.

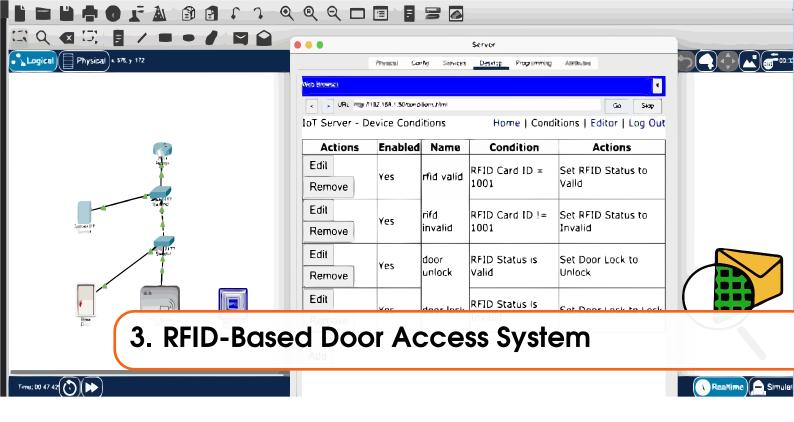

## Introduction

In this lab, you will learn how to **build and configure a network to control door access using an RFID reader**. You will assign IP addresses, set up a DHCP pool for IoT devices, and register an RFID door system with a central server. By creating conditions based on RFID card IDs, you will control the state of the door (locked or unlocked), providing a simple yet effective example of access control in a Packet Tracer IoT environment.

## Objective

- Build and configure a network to control door access using an RFID reader.
- Set up communication between devices using IP addressing and DHCP.
- Program and test device conditions to manage access control based on RFID card ID.

#### Lab Plan

- A. Launch Packet Tracer and Observe the Initial Workspace
- B. Build the Topology
- C. Connect Devices and Prepare the Door
- D. Configure IP Addresses and DHCP on the Router
- E. Set IP Addresses for the Server
- F. Enable IoT Services on the Server
- G. Create a Server Account (Username and Password)
- H. Register and Connect IoT Devices to the Server
- I. Configure RFID-Based Door Access Conditions

## **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Familiarity with Packet Tracer's Programming or Config tabs
- Optional: external PC browser for more advanced testing

# A. Launch Packet Tracer and Observe the Initial Workspace

## 1. Open Packet Tracer:

Double-click the Packet Tracer icon on your desktop or locate it in your applications folder to launch. You should see a blank default Logical topology workspace, as shown in Figure 5.1.

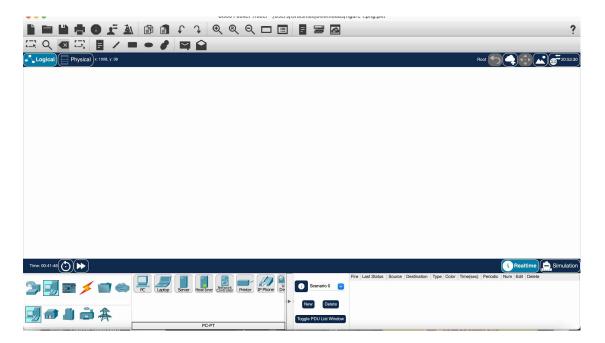


Figure 3.1: Initial Workspace

# B. Build the Topology

## 2. Add Network Devices:

In Packet Tracer, locate the *Device-Type Selection* box in the lower-left corner. You will see a row of **categories** (e.g., *Network Devices*, *End Devices*) and a row of **subcategories** (e.g., *Routers, Switches, Wireless Devices*). Drag each of the following onto your workspace:

- Router (e.g., Router0)
- Switches (e.g., Switch0, Switch1, as needed)
- RFID Reader
- Door
- Server

Arrange the devices to reflect the topology you plan to build. For instance, place the router at the center if it's a primary gateway, switches in between for LAN connections, and the RFID reader/door where you can simulate secure access. Figure 3.2 offers an example layout with these devices configured in a network.

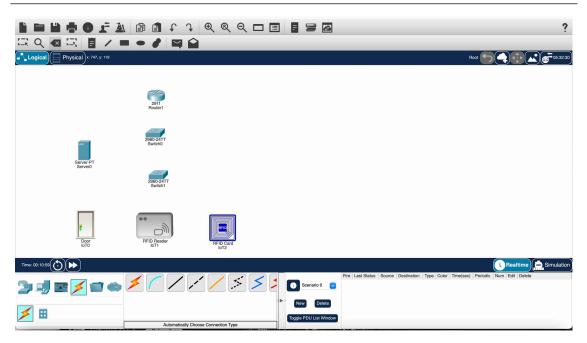


Figure 3.2: Sample topology featuring a router, switches, an RFID reader, a door, and a server.

- Why these devices?.
   Router: Central device for managing traffic between different subnets or connecting to external networks.
  - **Switches:** Provide LAN connectivity, allowing multiple end devices to communicate within the network.
  - **RFID Reader & Door:** Simulate an access control system, where authorized tags unlock the door.
  - Server: Hosts essential services (e.g., authentication, database, or web services) that integrate with the RFID reader and door for access control logic.

Placing these components together lets you explore how an RFID access system communicates and enforces security within a networked environment.

# C. Connect Devices and Prepare the Door

Goal: Ensure all devices (Router, Switches, RFID Reader, Door, Server) are cabled correctly.

3. Use the Connections Icon:

In Packet Tracer's toolbar (usually on the lower-left side), click the *Connections* icon, which appears as a **lightning bolt**. From the pop-up list, choose **Automatically Choose Connection Type**. This cable tool automatically selects the most appropriate cable (e.g., straight-through or cross-over) based on the devices you are connecting.

- 4. Connect Router and Switches:
  - With the cable tool active, click on the router, then click on Switch0.
  - Repeat the process to connect **Switch0** to **Switch1**.
  - After a moment, you should see link lights turn **green** on each connection if the devices are powered on.

## 5. Connect Switch1 to RFID Reader and Door:

- Attempt to connect Switch1 to the RFID Reader directly with the cable tool.
- If the cable *does not* attach to the **Door**:

- (a) Click on the door device, then select Advanced.
- (b) In the I/O Config tab, change the network adapter to PT-IOT-NM-1CFE.
- (c) Once changed, use the cable tool again to connect **Switch1** to the door.
- Wait a few seconds for the link lights or dotted lines to appear, indicating an active connection.

#### 6. Connect Switch0 to the Server:

Finally, use the same cable tool to link **Switch0** to the **Server**. This ensures the server can communicate with both switches and other devices in the topology.

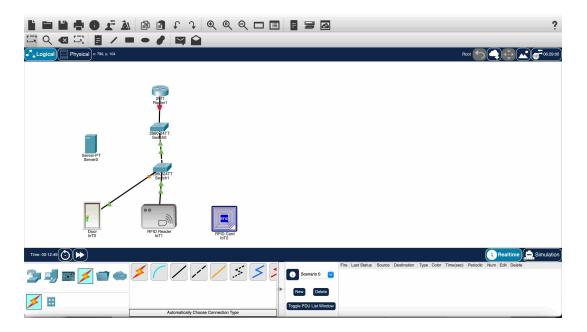


Figure 3.3: Partial topology showing the door (gray icon) and RFID reader connected to Switch1.

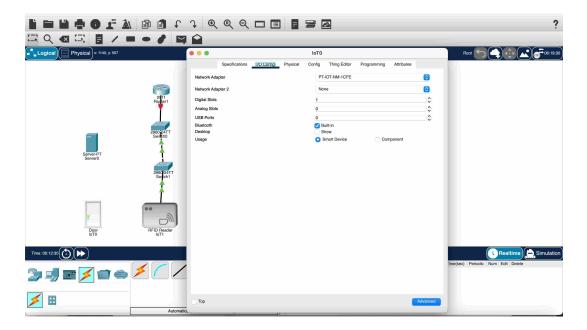


Figure 3.4: Accessing the door's Advanced settings to modify the network adapter.

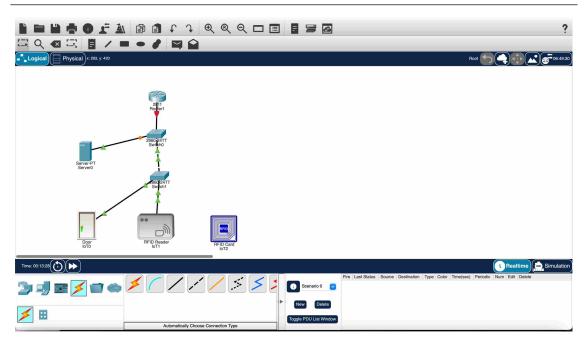


Figure 3.5: Ensuring the door uses the PT-IOT-NM-1CFE network adapter.

### - Troubleshooting Cable Connections. • No Link Lights?

- Check the device power status or port enable status under the Config or Physical tab.
- Make sure you've used the correct adapter module for IoT devices like the door.

### • Wrong Cable Type?

- If you selected a *Manual* cable type (e.g., *Copper Straight-Through*), double-check that it's correct for Router-to-Switch or Switch-to-Switch links.
- The *Automatically Choose Connection Type* option usually picks the right cable based on the devices.

## • Door Not Showing Port?

- Always verify the PT-IOT-NM-1CFE or equivalent network interface module is installed under the Advanced  $\rightarrow$  I/O Config tab.
- After installing the correct module, power the device off and on (if needed) to ensure the port becomes active.

# D. Configure IP Addresses and DHCP on the Router

Goal: Automatically assign IP addresses to IoT devices via DHCP.

- 7. Open the Router CLI:
  - Click the **Router** in the workspace.
  - Choose the CLI tab. If prompted, press Enter to begin.

You will see a command-line interface (CLI) similar to a real Cisco router.

## 8. Enter Commands:

At the router prompt, type the following commands:

```
enable
conf terminal
hostname R1
interface gigabitEthernet 0/0
ip address 192.168.1.1 255.255.255.0
```

```
no shutdown
exit

ip dhcp pool iot
network 192.168.1.0 255.255.255.0
exit

- Command Explanation: • enable: Switches from user mode to privileged
mode on the router.
• conf terminal: Enters global configuration mode.
• hostname R1: Renames the router to R1.
• interface gigabitEthernet 0/0: Selects the primary interface to configure
(may vary by router model).
```

- ip address 192.168.1.1 255.255.255.0: Assigns an IP (192.168.1.1) and subnet mask to GigabitEthernet 0/0.
- no shutdown: Activates the interface (removes default shutdown state).
- exit: Returns to global config mode.
- ip dhcp pool iot: Creates a DHCP pool named iot.
- network 192.168.1.0 255.255.255.0: Defines the subnet from which IP addresses are assigned.
- exit: Returns to privileged EXEC mode.

#### 9. DHCP Pool Created:

This configures a DHCP pool named iot that assigns IP addresses within the 192.168.1.0/24 subnet. Any device requesting an IP via DHCP on this interface will automatically be assigned an address, preventing manual configuration errors and address conflicts.

	Physical Config <u>CLI</u> Attributes	?
	IOS Command Line Interface	the second s
드 익 섹 드 🗄 / = = / 🎮 🏫	Complete Weit 4-100 - Device apoent, then Complete Weit 4-101 - Device Weit 1- Device Weit - Device -	
Logical) Physical x 64.37 44	This protoet mutation employing the features and is notice to follow in flatest and one loostry and generation for parts, apply the transfer and use, bailway of these experimental probabilities and use imply in the second s	
	A summary of U.B. lass governing (lice cryptographic products may be found at) http://www.mismo.com/wwi/wegort/crypto/tool/atgrg.html	
	If you require further ansistance please contact us by sending email to exportSciencem.	
	Cines CHECHLINE Log with ChildRey Link ChildRey Link State of memory. Provement with 10 PCDISIONS 16 Signalis Elements in detections BBBC configurations in 6 Hits wind with parity disablest. SSR bytes of norm-kalls configuration Neuropy. 2189555 (pyrk of Arth Pyrkon Departing of DearWithing).	
	System Configuration Dialog	
	Would you like to enter the juitial configuration dialog? (yes/nois a.	
	Press HEFRON to get started!	
	Boundarden Boundarden Nachen Schnicht Enter en underschnie enternann, eine per Line, Ente wich OSLI/Z. Einenzig Han dipektionen. VO Rie inschigt Han dipektionen. VO Rie inschigt Han dipektionen.	
	Rijoonfig-Lijj	
	%LINK-5-CARAKED: Interface SignaitElteront()%, changed state to up %LINEPHUTO-5-DFTONN: Line protocol on Interface SignaitElternet()/S, changed state to up	
	81.toorf.jej14.hes15 81.toorf.jej14.hes19.ebs30.eos1.ist 81.tobeg-eos12.jej14.eos11.1255.255.255.0 81.tobeg-eos12.jej1	
Time: 09:27:25 () ()	Copy Paste	Realtime A Simulation
", , , , , , , , , , , , , , , , , , ,	Тар	die Num Edit Delete
∕ ∎	New Datate	
Automatically Choose C	connection Type	

Figure 3.6: Using the router CLI to configure IP addressing and a DHCP pool named "iot."

Why Use DHCP on the Router?.
 Central Management: You can manage IP addresses from a single point, making it easy to add or remove devices without manual IP

changes.

- Fewer Conflicts: Automatically assigning addresses reduces the risk of two devices accidentally sharing the same IP.
- Scalability: In larger or busier networks, relying on DHCP can save considerable time and administrative overhead.

## E. Set IP Addresses for the Server

#### 10. Open Server Desktop:

- Click on the Server device in your Packet Tracer workspace.
- Select the Desktop tab, then choose IP Configuration.

This interface allows you to configure the server's IP settings, much like configuring a real-world server's network adapter.

#### 11. Assign IP:

In the IP Configuration window, set:

- IPv4 Address: 192.168.1.50
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1

These values place the server in the same 192.168.1.x subnet as the router and other network devices.

#### 12. Confirm and Close:

After entering these settings, simply close the configuration window. The **static IP address** ensures the server remains reachable at 192.168.1.50, making it easy to host IoT services and preventing automatic changes from DHCP.

		Server0	
Logical Physical x: 855, y: 158	Physics	al Config Services Desktop Programming Attributes	
	IP Configuration	۸ ۲	
	IP Configuration		
	DHCP	O Static	
	IPv4 Address	192.168.1.50	
2111	Subnet Mask	255.255.255.0	
Ŧ	Default Gateway	192.168.1.1	
	DNS Server	0.0.0.0	
SRED SALL	IPv6 Configuration		
Server-PT Server0	Automatic	Static	
Pigett			
Soutchi	IPv6 Address		
	Link Local Address	FE80::204:9AFF:FEEC:77EB	
	Default Gateway		
	DNS Server		
loto loti loti	802.1X		
	Use 802.1X Security		
	Authentication MD		
Time: 00:32:53 ()	Username		Realtime 🖨 Simul
	Password		odic Num Edit Delete
沟 🚽 📷 🗾 📹 🖊 🦳 🖊	· · ·		
	Тор		
≯ ⊞	the second se	Toggle PDU List Window	
Automatic	ally Choose Connection Type		

Figure 3.7: Assigning 192.168.1.50 to the server so it can host IoT services.

Why Use a Static IP for Servers?.
 Consistent Addressing: Client devices (and network admins) always know where the server can be reached, important for DNS, HTTP, or other services.

- Easier Troubleshooting: A stable IP simplifies pings and route tracing, helping you quickly verify server availability.
- No DHCP Reliance: In case DHCP fails or is misconfigured, the server remains unaffected.

#### F. Enable IoT Services on the Server

- 13. Switch to Services:
  - With the Server window still open, select the Services tab (usually found at the top).
  - The left-hand panel will list various services (e.g., DHCP, DNS, IoT, HTTP, etc.).
- 14. Turn On IoT:
  - In the left panel, click on **IoT**.
  - Locate the toggle or button to enable the IoT service.
  - Click the button so it reads **On**.

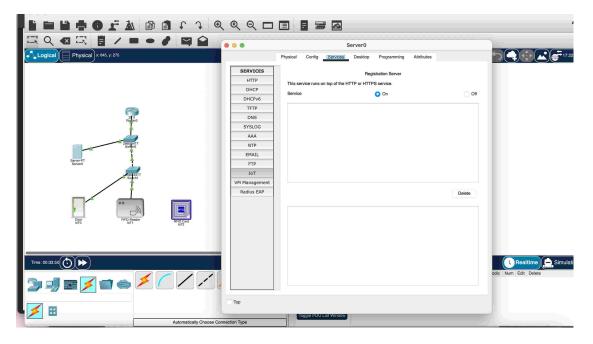


Figure 3.8: Enabling the server's built-in IoT services.

- Why Enable IoT Services?.
   Device Registration: When IoT services are active, networked devices such as doors, sensors, or RFID readers can register with this server and appear in its device list.
  - **Central Management:** It provides a hub for managing IoT rules, conditions, or triggers across multiple devices—similar to a home automation controller.
  - **Scalability:** As your lab grows, you can integrate more IoT devices (cameras, sensors, etc.) under the same server, simplifying configuration and control.

## G. Create a Server Account (Username and Password)

- 15. Open Web Browser:
  - While still on the Server device, switch to the *Desktop* tab.

• Click on Web Browser.

This will open a built-in browser window, enabling you to access the server's local web interface.

16. Enter the Server IP: 192.168.1.50.

In the browser's address bar, type 192.168.1.50 and press **Enter**. You should see the server's default web interface load.

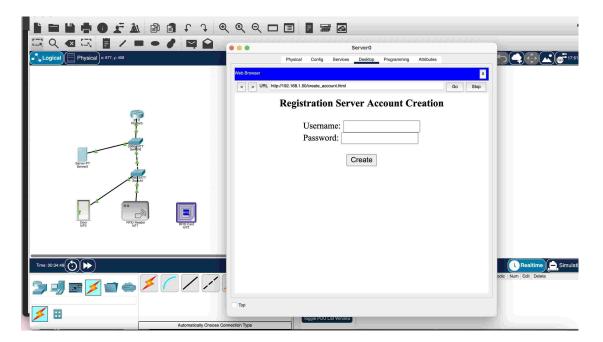


Figure 3.9: Accessing the server's web interface via 192.168.1.50.

## 17. Sign Up:

- Look for a link or button labeled "sign up now" on the login page.
- Provide a username and password (for instance, admin / admin) in the corresponding fields.



Figure 3.10: Signing up for a new account on the server.

### 18. Complete Registration:

- Click *Create* (or *Submit*) to finalize your new user account.
- Once created, you will be logged in or prompted to log in using the new credentials.

	Q Q 🗆 🗏 불 🗃 🙆	
	Server0	
Logical Physical) x: 1728, y: 443	Physical Config Services Desktop Programming Attributes	<b>18:01</b>
	Web Browser X	
	< > URL http://192.168.1.50/create_account.html Go Stop	
89	Registration Server Account Creation	
2111 Roberts	Username: admin	
	Password:	
Sector Sector	Create	
Sanson PT Servino	Cicale	
Sector		
Door PFD Peader PFD Card IoTo BOT IoT2		
Time: 00:35:08	Rea	Itime 🖨 Simulati
	odic Num Edit	
> → = ≯ = ≯ < / / / /		
	Тор	
Automatically Choose Conn	Toggle PDU List Window	

Figure 3.11: Specifying username and password (e.g., "admin/admin").

- Why Create a User Account?. IoT Registration: This account allows you to register IoT devices under the server's management, so they appear in the device list.
  - Security and Customization: Each user account can have distinct access privileges or

configurations, helpful for managing multiple users or administrative roles.

• Simplicity for Labs: Using admin / admin is fine for classroom or lab scenarios, but remember to use stronger credentials in real-world setups.

# H. Register and Connect IoT Devices to the Server

## 19. Door Config:

- Click the **Door** device, then select the *Config* tab.
- Under **Gateway DNS IPv4**, choose DHCP to automatically obtain an IP address from the router's DHCP pool.
- Switch to the **Remote Server** section and enter:
  - Server Address: 192.168.1.50
  - User Name: admin
  - Password: admin
- Click **Connect** to link the door to the server.

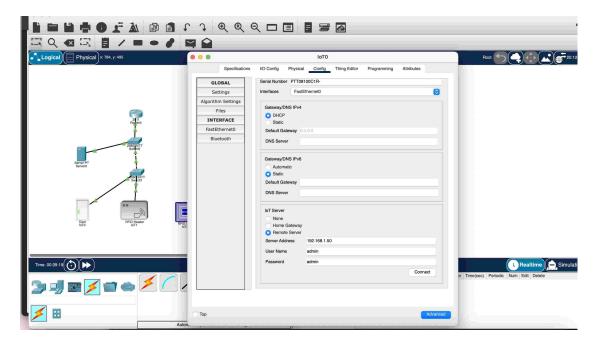


Figure 3.12: Door set to DHCP and pointing to the server at 192.168.1.50.

#### 20. RFID Reader Config:

- Repeat the same steps: under  $Config \rightarrow Settings$ , select DHCP for IP assignment.
- Then, in **Remote Server**:
  - Server Address: 192.168.1.50
  - User Name: admin
  - Password: admin
- Click **Connect** to finalize registration.

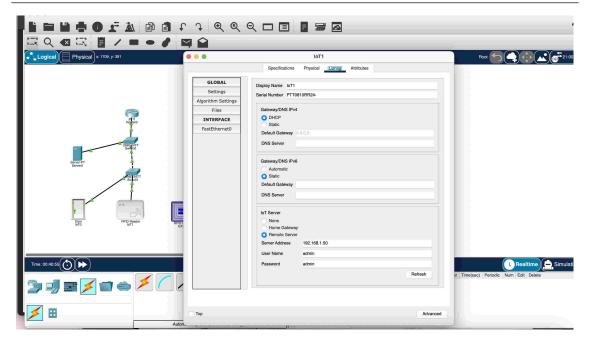


Figure 3.13: RFID reader also connecting remotely to the server.

### 21. Verify in IoT Monitor:

- On the **Server**'s *Desktop* tab, select *IoT Monitor*.
- Log in with the credentials (admin/admin) you created earlier.
- Confirm that both the **Door** and the **RFID Reader** appear in the list of connected devices.

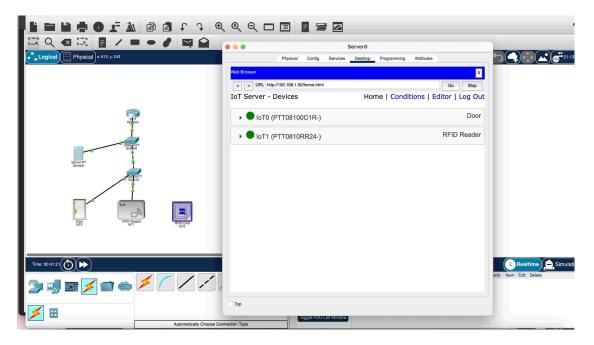


Figure 3.14: IoT Monitor view showing door and RFID status.

22. Test Basic Functionality:

- From the IoT Monitor, try locking or unlocking the door to verify the server can control it.
- Alternatively, you can click the door directly in the workspace to ensure changes reflect back in the IoT Monitor.

	R R 🗆 🗏 🖥 🗃	
	Server0	
Logical Physical x: 1633, y: 115	Physical Config Services Desktop Programming Attributes	
	Web Browser	×
	< > URL http://192.168.1.50/home.html	Bo Stop
	IoT Server - Devices Home   Conditions   Editor	r   Log Out
	- CTT08100C1R-)	Door
	Open	•
Statute PT	Lock Unlock	
Served Sarr	▼	ID Reader
	Card ID Status Valid Invalid	0
Time: 00:42:16		odic Num Edit Delete
沟 🚽 🖻 🗾 📹 🍝 🗡 🦳 🖊 📬		and the second second second
	Тор	
Automatically Choose Con	Toggle PDU List Window	

Figure 3.15: Lock/unlock tests confirming the door responds to server commands.

- Why Register IoT Devices with the Server?.
   Central Control: Once registered, the server can monitor and send commands to each IoT device (e.g., lock/unlock the door, read RFID events).
  - Automation & Rules: You can create rules (for example, *if RFID tag is valid, unlock door*) to automate the system.
  - **Easier Troubleshooting:** The IoT Monitor on the server provides a consolidated view of device statuses and connections.

## I. Configure RFID-Based Door Access Conditions

Goal: Control the door lock based on the RFID card ID.

- 23. Open the Server's Web Browser:
  - Return to the Server device, switch to its *Desktop* tab, and launch the *Web Browser*.
  - In the server's web interface, look for the **Conditions** section (or a link labeled "Conditions") to begin setting up your rules.
- 24. Add Condition for RFID Card ID = 1001:
  - Under Add Condition, specify:
    - **RFID Card ID**: equals 1001
    - Action: RFID Status = Valid
  - This creates a rule stating that whenever the card ID is 1001, the RFID status should be marked Valid.
- 25. Add Condition for RFID Card ID != 1001:

- Similarly, create a second condition:
  - RFID Card ID: not equal to 1001
  - Action: RFID Status = Invalid
- This covers any card ID that differs from 1001, automatically marking the RFID status Invalid.

## 26. If RFID Status = Valid:

- Add or edit an action so that whenever RFID Status equals Valid, the **Door Lock** is set to Unlock.
- This ensures the door opens if the RFID tag is recognized as authorized.

#### 27. If RFID Status = Invalid:

- Add another action specifying that if RFID Status is Invalid, then the **Door Lock** remains Lock.
- This keeps the door locked for all unauthorized or unknown RFID IDs.

#### 28. Save and Exit:

The final rule set should resemble Figure 3.16, where **Valid** IDs unlock the door, and **Invalid** IDs keep it locked.

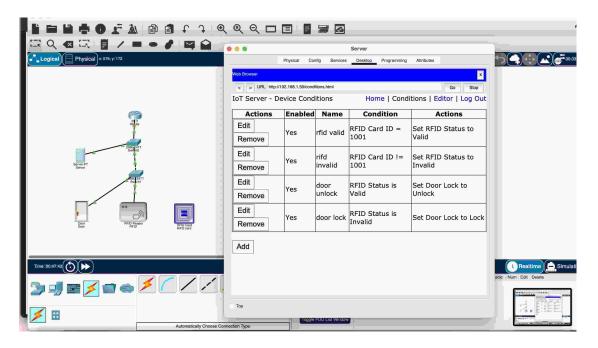


Figure 3.16: Condition-based rules controlling the door lock via RFID status.

**How it works:** If the RFID card ID is 1001, it's marked Valid, unlocking the door. Any other ID is Invalid, keeping the door locked.

#### Tips for Testing RFID Door Conditions:

- **CardID Property:** Click the RFID tag in the workspace, go to *Attributes*, and edit the CardID. This lets you simulate both authorized and unauthorized tags.
- Visual Confirmation: Some versions of Packet Tracer show a green icon or light if the door unlocks, and a red indicator if the ID is rejected. Observe the door to confirm the lock status changes as expected.

#### 29. Test the Setup:

- Hover the RFID card (ID = 1001) over the **RFID Reader**.
- You should see a **green light** (or similar indicator) and the door should unlock.
- If you change the CardID to something else (e.g., 500), you'll see a **red** indicator and the door will remain locked.

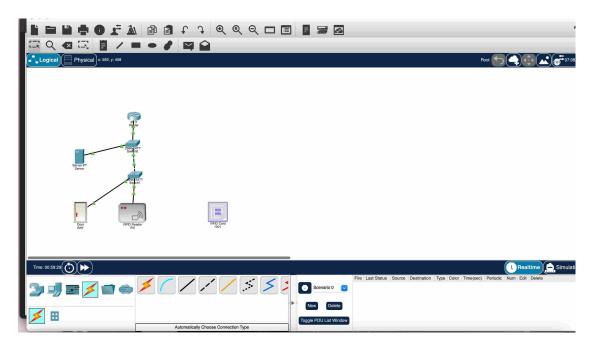


Figure 3.17: Invalid card scenario, red light if mismatch (door remains locked).

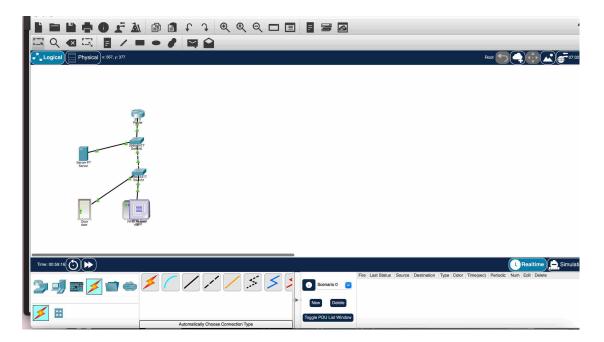



Figure 3.18: Valid card scenario, green light with door unlocked.

## **Measuring Success**

- **DHCP Setup on Router:** Door and RFID reader successfully obtain IP addresses from 192.168.1.0/24.
- **IoT Registration:** The door and RFID reader appear in the server's IoT Monitor, verifying that they've connected.
- **Card Validation:** Presenting the correct card ID (1001) unlocks the door; any other ID keeps it locked.
- **Real-time Status Updates:** The IoT Monitor or visual icons (lights) show correct lock/unlock states, confirming that conditions are triggered properly.

## Summary

Congratulations! You have successfully **configured a server to control door access using an RFID reader** in Cisco Packet Tracer. By assigning IP addresses (with DHCP), creating a user account on the server, and setting conditions for valid vs. invalid RFID card IDs, you achieved a functioning access control system. This approach can be expanded or integrated with additional IoT devices to form a more comprehensive security or smart-building scenario.

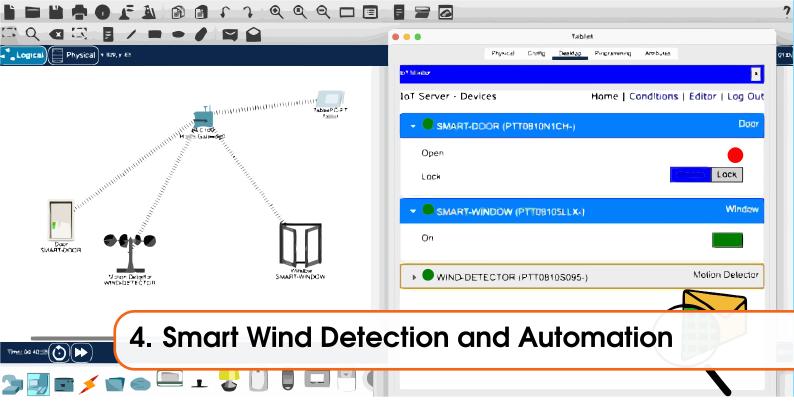

## Introduction

This lab will guide you through creating a small **smart home system** in Cisco Packet Tracer using a *Wind Detector, Smart Door*, and *Smart Window*. You will establish wireless connections to a Home Gateway, configure devices with appropriate IP addresses, and set up automated rules that lock a door or close a window when high wind is detected.

#### **Objectives**

- Simulate and configure IoT devices: Smart Door, Smart Window, Wind Detector.
- Establish wireless communication between IoT devices and the Home Gateway.
- Create automated conditions (rules) for device actions based on wind detection.
- Test and verify the entire setup via the Packet Tracer interface and Tablet.

#### Lab Plan

- A. Launch Packet Tracer and Observe Initial Workspace
- B. Build the Topology
- C. Configure the Tablet (Wireless Settings)
- D. Assign IP Addresses to IoT Devices
- E. Register Devices with the Home Gateway
- F. Control IoT Devices through the Tablet
- G. Modify Wind Detector Icons
- H. Add Wind Detection Conditions
- I. Test Wind Detector Functionality

## **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Familiarity with Config and Advanced tabs in Packet Tracer IoT devices
- Optional: external PC browser (if you want to test beyond Packet Tracer's built-in tools)

# A. Launch Packet Tracer and Observe Initial Workspace

## 1. Open Packet Tracer:

Double-click the Packet Tracer icon (or navigate to its directory) to launch. You should see a blank default Logical topology workspace.

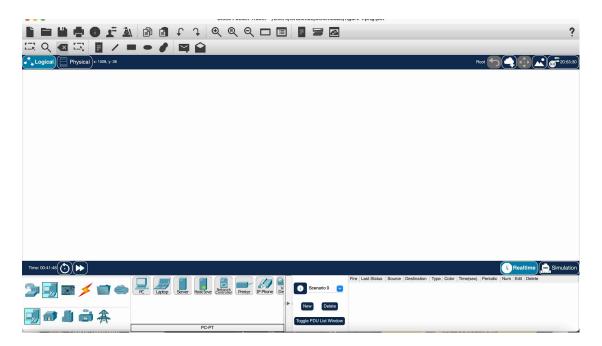


Figure 4.1: Initial Workspace (blank topology).

# B. Build the Topology

#### 2. Add Network Devices:

Open the *Device Selection* box in the lower-left corner of Packet Tracer. You will see a row of **categories** (e.g., *Network Devices*, *End Devices*, *Components*) and a row of **subcategories** (e.g., *Home Gateways*, *Smart Devices*, *IoT*). Drag each of the following onto your workspace:

- Home Gateway
- Tablet
- Smart Door
- Smart Window
- Wind Detector

Arrange them to reflect the scenario you plan to create. For instance, place the *Home Gateway* centrally so all IoT devices can connect to it wirelessly or via a wired link, and position your *Tablet* as the user control interface.

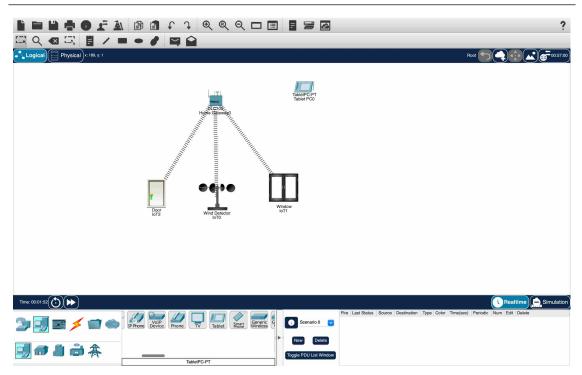


Figure 4.2: Sample topology with IoT devices and a Home Gateway.

- Why these devices?.
   Home Gateway: Acts as the central hub for IoT device registration and management, often providing wireless access.
  - **Tablet:** Serves as a user interface to monitor and configure IoT devices (e.g., checking sensor status, controlling doors/windows).
  - Smart Door, Smart Window, Wind Detector: Represent common IoT elements in a smart home. The door and window can be opened/closed via conditions, while the wind detector senses changes in wind speed or direction.

Together, they create a realistic small-scale smart home environment in Packet Tracer.

# C. Configure the Tablet (Wireless Settings)

#### 3. Select the Tablet and Config Tab:

- Click on the **Tablet** device in the Logical workspace.
- At the top of the Tablet's configuration window, choose the *Config* tab.

This tab provides a simplified interface for modifying the Tablet's hardware and network parameters.

### 4. Wireless Configuration:

- In the left pane, select Wireless0.
- Change the **SSID** from "Default" to "HomeGateway" (see Figure 4.3).

This ensures the Tablet connects to the Home Gateway's wireless network rather than any default or unrelated SSID.

		2 🗆 🔳 📕 🖉	2		?
Logical Physical x: 735, y: 67		Tablet PC	0		Root 5 01:40:00
		Physical Config Desktop	Programming Attributes		
	GLOBAL		Wireless0		
	Settings	Port Status		🔽 On	
	Algorithm Settings				
	INTERFACE	Bandwidth	11 Mbps		
	Wireless0	MAC Address	0030.A344.0B72		
	3G/4G Cell1	SSID	HomeGateway		
	Bluetooth	Authentication			
		O Disabled WEP	WEP Key		
	-ununun.	WPA-PSK WPA2-PSK	PSK Pass Phrase		
	11111	WPA WPA2	User ID Password		
ŝ	111.	802.1X Method:	MD5	0	
		802.1X Method:	User Name	<u>.</u>	
• · · ·			Password		
Dear		Encryption Type	Disabled	0	
Door IoT2		IP Configuration O DHCP Static			
		IPv4 Address	192.168.25.103		
		Subnet Mask	265.255.255.0		
Time: 00.03:15		IPv6 Configuration Automatic Static			Realtime Simulation
Device	4	IPv6 Address		1	
	Phor	Link Local Address: FE80::230:A3FF:	-E44:B72		
<b>] # 1 2 *</b>	Пор	(i -			

Figure 4.3: Wireless Settings on the Tablet.

#### 5. Verify the Connection:

- After setting the SSID, the Tablet should automatically form a wireless link to the **Home Gateway**.
- Look for a dotted or curved line connecting the Tablet to the Gateway in the workspace (Figure 4.4).

If you hover your cursor over the Tablet or Gateway icon, you may see status details (e.g., signal strength, connected SSID) confirming the active connection.

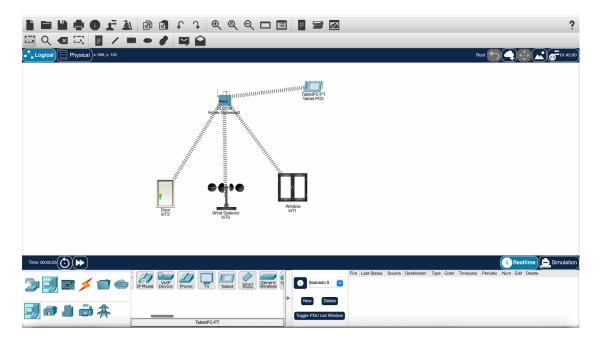


Figure 4.4: Wireless connection established between Tablet and Gateway.

- Why rename the SSID?.
   Clarity in Multi-Wireless Environments: Using a unique SSID like HomeGateway helps distinguish this network from any other wireless networks in Packet Tracer.
  - **Consistency with Other Devices:** All IoT devices that need to connect wirelessly will reference HomeGateway in their configuration, making it easier to manage and troubleshoot.

# D. Assign IP Addresses to IoT Devices

#### 6. Check Device IPs:

In the Packet Tracer workspace, hover your mouse cursor over each IoT device (see Figure 4.5) to see if it already has an IP address assigned. A small tooltip usually appears, listing the device's **IP Address, Subnet Mask, Gateway**, and more.

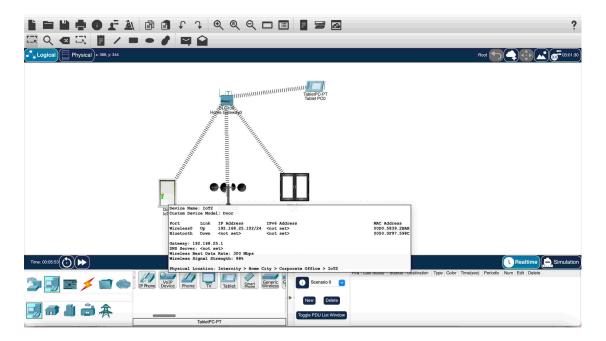


Figure 4.5: Hovering over devices to check IP addresses.

- Why hover for IPs?. Quick Verification: Without opening each device's *Config* tab, you can rapidly confirm which devices still need an IP.
  - Network Snapshot: If you see 0.0.0.0 or 169.x.x.x, it indicates the device hasn't properly obtained an IP (or is using a default/link-local address).
- 7. Use DHCP for Each Device:

If any device lacks a valid IP address:

- (a) **Click** the device in the workspace.
- (b) Go to  $Config \rightarrow Gateway/DNS$  IPv4.
- (c) Temporarily switch from DHCP to Static (if needed), then switch back to DHCP.

This process re-requests a dynamic address from the Home Gateway's DHCP service.

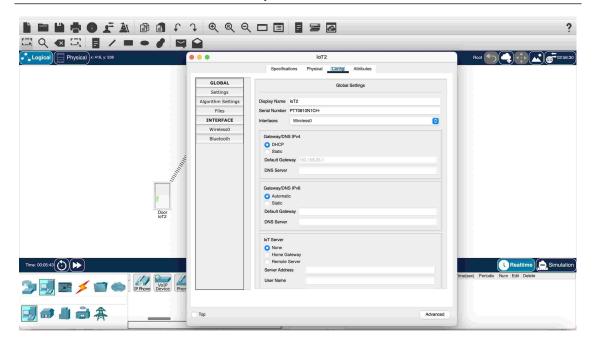


Figure 4.6: Assigning an IP address via DHCP.

- Why switch from Static to DHCP?. Forcing a Refresh: Packet Tracer devices sometimes need a "nudge" to re-check DHCP. Moving to Static and then back to DHCP triggers a new request to the gateway.
  - Ensuring Consistent Settings: This guarantees each IoT device is on the same IP subnet as the Home Gateway, simplifying communication and control.

## E. Register Devices with the Home Gateway

#### 8. Door Registration:

- Click the **Door** device in the workspace.
- Go to **Config**  $\rightarrow$  **Settings**.
- Under IoT Server (sometimes labeled "Server" or "IoT Connection"), select Home Gateway.

This tells the Door to register itself with the **Home Gateway**, enabling remote control and monitoring.

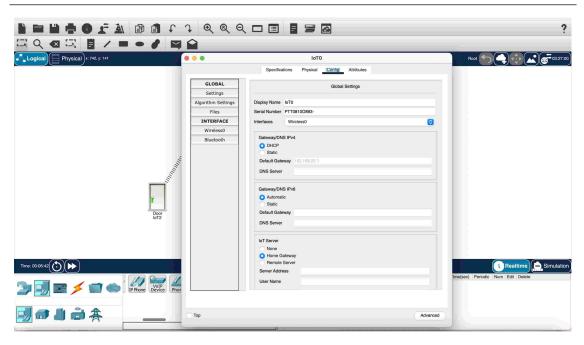


Figure 4.7: Registering a device (e.g., Door) with the Home Gateway.

## 9. Wind Detector Registration:

- Click the Wind Detector device.
- Navigate to  $Config \rightarrow$ **Settings**.
- Under IoT Server, select Home Gateway.

This step ensures the Wind Detector is visible to the Home Gateway and can send wind status updates.

## 10. Window Registration:

- Click the **Window** device.
- Go to *Config*  $\rightarrow$  **Settings**.
- Choose Home Gateway under IoT Server.

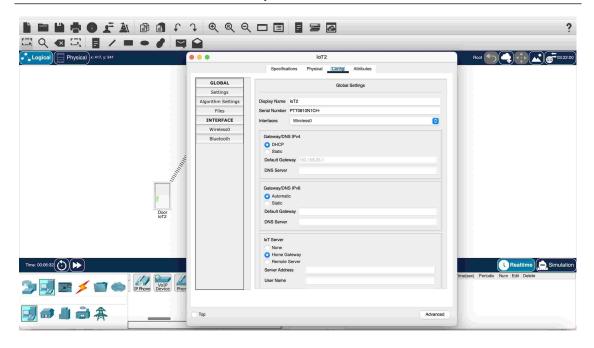


Figure 4.8: Registering multiple IoT devices (Window, Wind Detector, etc.) to the Home Gateway server.

- Why Register These Devices?.
   Centralized Control: By registering each IoT device with the Home Gateway, you can manage (lock, unlock, open, close, etc.) all devices from one interface.
  - Automation Possibilities: The gateway can define rules (for example, *if wind is high, automatically close window*) involving multiple devices.
  - **Easy Monitoring:** The Home Gateway's IoT Monitor shows real-time statuses of all connected devices, making it simple to troubleshoot or observe behavior.

# F. Control IoT Devices Through the Tablet

- 11. Open IoT Monitor:
  - On the **Tablet**, switch to the *Desktop* tab.
  - Click the **IoT Monitor** icon to launch the web interface that connects to the Home Gateway.

	) Q Q Q 🗖 🗏 🖥 🗃 🙆	?
프 익 🗠 프 🖥 🖊 🖿 🖝 🖉		
Logical Physical x: 423. y: 474		Root ()(4:41:00)
	oT Monitor X	
	IoT Server Address: 192.168.25.1	
	User Name: admin Password: admin	
	Login	
Internet in the second s		
Door Door		
Time: 00:09:07		Realtime Simulation
Device Phor		Time(sec) Periodic Num Edit Delete
]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]]	Пор	

Figure 4.9: Accessing IoT Monitor on the Tablet.

## 12. Login:

- In many cases, the Server IP, Username, and Password may already be auto-filled (*e.g.*, 192.168.x.x, admin, admin).
- Click the **Login** button to proceed. You should then see a list of all registered IoT devices under the Home Gateway.

	ନ୍ ବ୍ ବ୍ 🗖 🔳 🛢 🚍	<u>a</u>	?
🖾 오 🗠 🖾 / = - / 🛤			
Logical Physical x: 758, y: 58	🛡 鱼 🔍 Table	t	Root () (05.06:30
	Physical Config Desktop	Programming Attributes	
	loT Monitor	×	
	IoT Server - Devices	Home   Conditions   Editor   Log Out	
	Door (PTT0810N1CH-)	Door	
	Wind Detector (PTT08100893-)	Wind Detector	
<sup>1</sup> U <sub>111</sub> .	Window (PTT08105LLX-)	Window	
Door			
Time: 00.09.59			Realtime Simulation
Device Phor			Time(sec)   Periodic   Num   Edit   Delete
	Тор		

Figure 4.10: IoT devices visible after logging in.

13. Rename Devices:

- Within the IoT Monitor interface, locate the Door, Wind Detector, and Window.
- Rename them as follows:
  - (a)  $\text{Door} \to \text{SMART}\text{-}\text{DOOR}$
  - (b) Wind Detector  $\rightarrow \texttt{WIND-DETECTOR}$
  - (c) Window  $\rightarrow$  SMART-WINDOW

Using clear, descriptive names helps distinguish devices in larger or more complex topologies.

#### 14. Interact with the Devices:

- From the IoT Monitor, try locking or unlocking SMART-DOOR, or open/close SMART-WINDOW.
- Observe that changes made here instantly reflect on the Packet Tracer workspace (e.g., the door icon may change states, or the window shows as open or closed).

▙▆▙╋@ヹ҈ऄः ऄॎॏॿऺऀ २ २ @ @ Q ◘ ॿ ॿ	<b>Z</b> 2
프 및 셑 프 📕 🖊 🖬 😭	Tablet
Logical Physical x: 1385, y: 124	Physical Config Desktop Programming Attributes
	loT Monitor X
	IoT Server - Devices Home   Conditions   Editor   Log Out
an Dicroty Hogine Generatio	SMART-DOOR (PTT0810N1CH-) Door
	Open e
	Lock
	WIND-DETECTOR (PTT08100893-) Wind Detector
	Wind
Door SMART-DOOR Wind Detector SMART-WINDOW WND-DETECTOR	SMART-WINDOW (PTT08105LLX-) Window
	On
Time: 00:12:28	
🎾 🗾 📧 🗲 📹 🌰 🏾 Proce Voire Prione 🔽 Tablet Roat Generics 🖗 🖸 S	*
	Cop DU List Window
TableIPC-PT	

Figure 4.11: Controlling the Smart Door and Window from the Tablet.

- Why Control IoT Devices via Tablet?.
   Central Access Point: A Tablet interface mimics a typical user-friendly home automation controller, letting you manage multiple IoT devices at once.
  - Live Feedback: Actions like locking a door or opening a window take effect in real time, demonstrating how IoT Monitor and Packet Tracer work together.
  - Future Expansion: You can add rules, schedules, or triggers (e.g., *close windows when wind is strong*) through this same interface.

## G. Modify Wind Detector Icons

- 15. Use Motion Detector as a Base:
  - In the Device Selection box, go to *End Devices*  $\rightarrow$  *Home Devices*.
  - Drag a Motion Detector onto your workspace.

Although you'll rename and re-icon this device, it serves as a convenient starting point for creating a custom "Wind Detector."

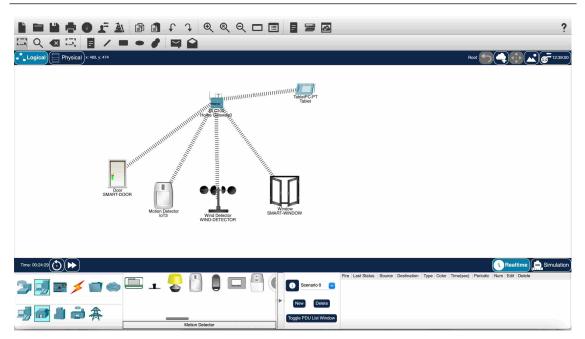


Figure 4.12: Adding a Motion Detector to transform into a Wind Detector.

## 16. Open Thing Editor:

- Click the newly added **Motion Detector**.
- Under Advanced, select the Thing Editor.
- Click New next to the motion detector icon or images list.

This allows you to customize the device's appearance, name, and behavior.

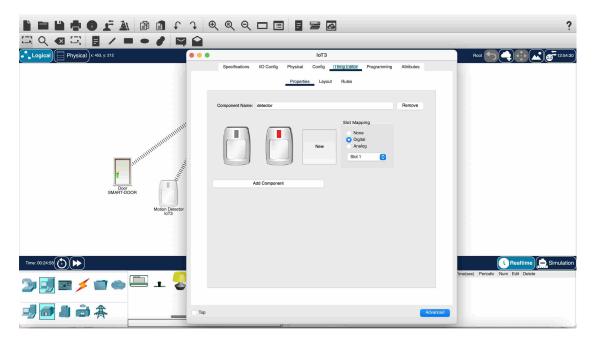


Figure 4.13: Thing Editor: preparing to upload new icons.

## 17. Choose Wind Detector Images:

- In the *Thing Editor*, delete the original motion detector images (often labeled icon0, icon1, etc.).
- Replace them with the two desired "Wind Detector" images you have, each representing a different wind state (e.g., *low wind*, *high wind*).

Make sure the new icons are clearly identified and saved.

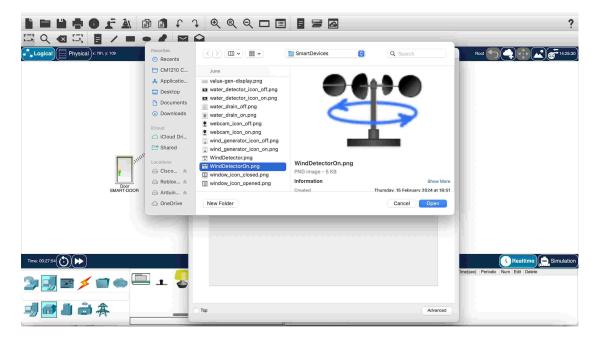


Figure 4.14: Selecting new icons to represent wind states.

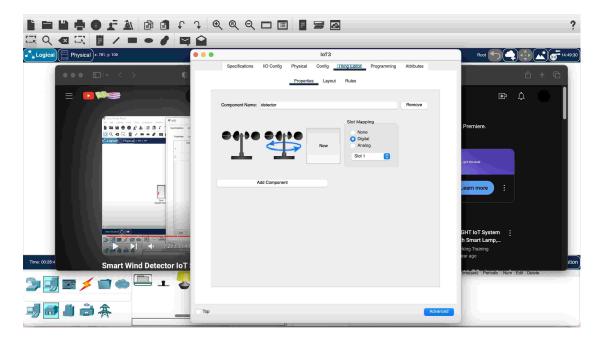


Figure 4.15: Second icon for an alternative wind state.

	@ @ (	2 🗆 🔳			?
Logical Physical x: 1437, y: 7			IoT3		Root 6 15.01.00
	Specification	ons I/O Config Phys	sical Config <u>Thing Editor</u> P	Programming Attributes	
		Pn	operties Layout Rules		
	Sub (	Component	Slot Value	Image	
	1	detector	LOW		
	2	detector	HIGH		
unum	<u>د</u>	detector	nian	Ŧ	
mmm					
- annananananananananananananananananana					
un.					
Door					
SMART-DOOR					
Motion Detector					
1013					
Time: 00.29.02					Realtime Simulation
🎾 🗾 🗃 🗲 📺 🥧 🏛 💶 😓	Add R	lemove			Time(sec) Periodic Num Edit Delete
	op			Advanced	

Figure 4.16: Confirming the new icons in the Thing Editor.

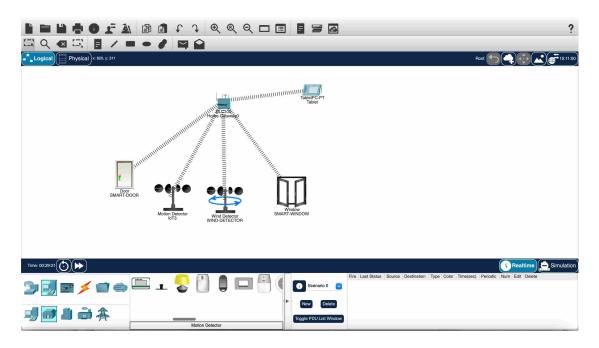


Figure 4.17: Deleting the old Motion Detector icon references.

#### 18. Replace the Old Device:

- Once the images are swapped, **remove the old wind detector** (or the original motion detector if you had one) from the workspace.
- Place your newly modified device into the workspace.
- Rename it **WIND-DETECTOR** (or a similar descriptive name).

Now you have a custom Wind Detector device that visually reflects different wind states.

- Why Customize the lcons?.
   Realistic Simulation: Visual changes in Packet Tracer help identify device states (e.g., high wind or low wind) at a glance.
  - **Simplify Troubleshooting:** Clear, custom icons make it easier to see which sensor is detecting what condition.
  - Engage Learners: Creating custom devices fosters a deeper understanding of how IoT devices can be adapted and integrated into the network simulation.

# H. Add Wind Detection Conditions

- 19. Register the New WIND-DETECTOR:
  - As with your other IoT devices, click the newly created **WIND-DETECTOR**, then go to **Config** → **Settings**.
  - Under Gateway/DNS IPv4, set DHCP to acquire an IP automatically.
  - Under IoT Server (or "Remote Server"), select Home Gateway.
  - Click **Connect** to finalize the registration.

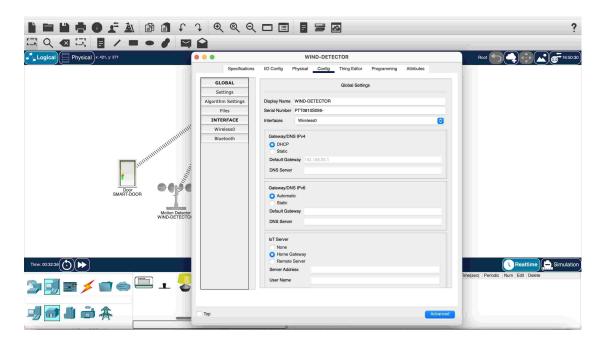


Figure 4.18: Registering the newly created WIND-DETECTOR device.

### 20. Confirm via Tablet:

- Open the **IoT Monitor** on your Tablet (*Desktop*  $\rightarrow$  *IoT Monitor*).
- Log in if prompted.
- You should now see WIND-DETECTOR listed alongside your other devices.

▶₩♣0ァ¾ ₪₫ァኁ ٩ @ @ □ ■ Q @ ः ▮/■●/ ¤₽		Tablet	3
Logical Physical x: 753, y: 50	Physical Confi		57:
	IoT Monitor	× Home   Conditions   Editor   Log Ou	
11 International International	▶ ● SMART-DOOR (PTT0810	N1CH-) Door	r
unun Martin Gateware	▶ ● SMART-WINDOW (PTT0	B105LLX-) Window	,
www.unin spanne fille	▶ ● WIND-DETECTOR (PTTC	1810S095-) Motion Detector	r
SMARTEDOOR			
e: 00:32:44 () )			at
• 🗾 🖻 🗲 📹 🥧 🕮 💶 😓 🚺 🏮 🗔 🗄 🍕 (			
· · · · · · · · · · · · · · · · · · ·	Top gle PDU List Window		
Motion Detector			

Figure 4.19: WIND-DETECTOR now displayed in the Tablet's IoT Monitor.

#### 21. Add Conditions for Wind Detection:

The IoT Monitor allows you to create **Conditions** that trigger specific **Actions** across devices. For example:

- Condition 1: WIND-DETECT *If* WIND-DETECTOR is on = true, → Lock SMART-DOOR, turn off SMART-WINDOW.
- Condition 2: NOWIND *If* WIND-DETECTOR is on = false, → Unlock SMART-DOOR, turn on SMART-WINDOW.

Actions	Enabled	Name	Condition	Actions
				Set SMART-DOOR Lock to Lock
Remove	Yes	WIND-DETCT	WIND-DETECTOR On is true	Set SMART-WINDOW On to false
Remove	Yes	NOWIND	WIND-DETECTOR On is false	Set SMART-DOOR Lock to Unlock
Remove	res	NOWIND		Set SMART-WINDOW On to true

Figure 4.20: Condition 1 for detecting wind: door locked, window off.

È■Ы╋0£À ฿฿↑↑↓ € € ⊂ □ ■	2 🗃 🙆 ?
	• • • Tablet
Logical Physical x 629, y 83	Physical Config Desktop Programming Attributes
	loT Montor
	IoT Server - Devices Home   Conditions   Editor   Log Out
Tablet	SMART-DOOR (PTT0810N1CH-)
ununun sint fill	Open 🔴
ununun, san itali	Lock
	SMART-WINDOW (PTT08105LLX-) Window
	On E
Motion Detector SMART-WINDOW	WIND-DETECTOR (PTT0810S095-) Motion Detector
Time: 00:40:39	ation
🍃 🗾 🕿 🗲 📹 👄 🎞 🛨 😓 🚺 🏮 🗔 🔒 🌗	
	Стор
Motion Detector	Toggle PDU List Window

Figure 4.21: Condition 2 for no wind: door unlocked, window on.

- Why Create Wind Detection Rules?.
   Automated Safety: High wind could cause damage if doors or windows are left open. Automating their state prevents potential hazards.
  - **Hands-Free Control:** No need for manual toggling each time; once the WIND-DETECTOR senses wind, the system adjusts devices accordingly.
  - Scalability: You can add more devices (like SMART-CURTAINS or SMART-SHUTTERS) to these rules, broadening your smart home's capabilities.

## I. Test Wind Detector Functionality

#### 22. Arrange Devices and Monitor:

- In Packet Tracer's *Logical* view, position your SMART-DOOR, SMART-WINDOW, and WIND-DETECTOR relatively close together for easy observation.
- Open the **IoT Monitor** on your **Tablet** and place it side by side with the main workspace (or toggle between them as needed).

This setup helps you see real-time changes on both the devices and the IoT Monitor interface.

- 23. Toggle States:
  - From the *IoT Monitor*, experiment with manually *unlocking* the SMART-DOOR or *opening* the SMART-WINDOW.
  - Then hold **Alt/Option** while hovering over the WIND-DETECTOR to simulate the sensor turning *on*.
  - Observe how the system responds in real time.

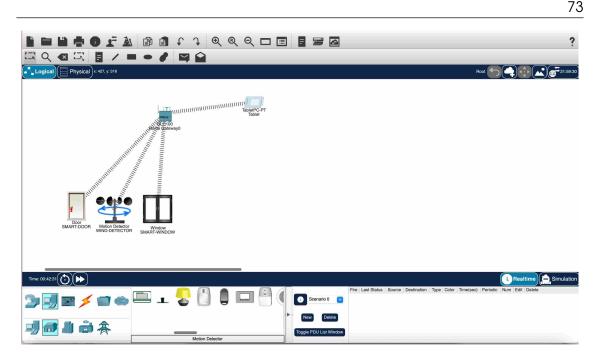


Figure 4.22: Observing the Wind Detector trigger the Smart Door and Window.

### 24. Observe Automation:


- With WIND-DETECTOR set to on, the SMART-DOOR automatically **locks** and the SMART-WINDOW **closes** (or toggles off), reflecting the conditions you configured in the IoT Monitor.
- Returning the WIND-DETECTOR to off reverts both devices to their previous states (*door unlocked*, *window open*).
- This demonstrates a fully automated home scenario, where sensor data (wind detection) triggers protective actions (locking or closing openings in the home).
- Testing Tips. Check the IoT Monitor Log: Some versions of Packet Tracer display logs indicating when a sensor changes state. Verify your rules are firing at the expected times.
  - Experiment with Delays: If you want a brief waiting period before the window closes, you can add an optional *delay* in the condition settings (where supported).
  - Expand Your System: Try adding more devices (lights, fans) and linking them to wind detection or other triggers for a comprehensive smart home experience.

#### **Measuring Success**

- **Registered Devices:** All IoT devices (SMART-DOOR, SMART-WINDOW, WIND-DETECTOR) appear under the Home Gateway's IoT Monitor.
- Wind Detector Reactions: Hovering Alt/Option on WIND-DETECTOR correctly toggles the door lock and window state.
- **Modified Icons:** The custom WIND-DETECTOR icons replace the old motion detector icons successfully, showing correct visuals for each state.
- Automated Conditions: The door remains locked and the window off when wind is detected, and revert to normal when no wind is detected—verifying your condition-based actions.

# Summary

You have successfully created an IoT-based smart home system in Cisco Packet Tracer, integrating a **WIND-DETECTOR** with a **SMART-DOOR** and **SMART-WINDOW**. By setting up wireless connectivity, assigning IP addresses, and defining condition-based rules in the IoT Monitor, you demonstrated how wind detection can automatically secure the home's door and window. This hands-on exercise underscores the flexibility and power of Packet Tracer's IoT functionality.

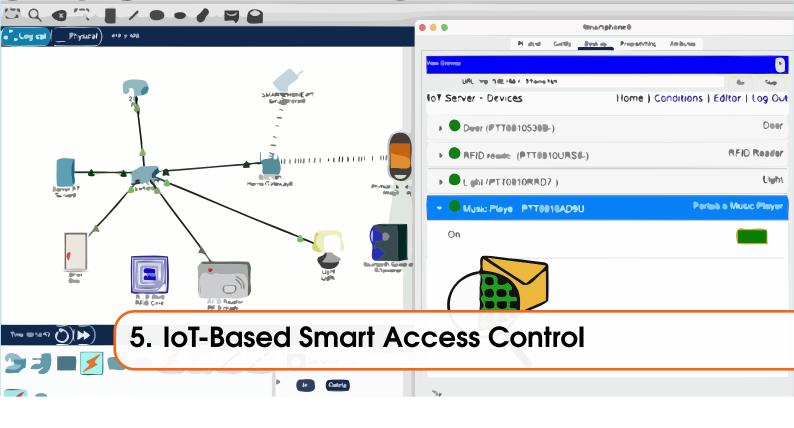

## Introduction

This lab will show you how to build and configure a **smart access control system** in Cisco Packet Tracer using *RFID*, *Bluetooth*, and a *smartphone*. You will create a network topology that includes an RFID-based door, a Bluetooth music player, and a smartphone for remote control. By the end, you will have tested both RFID access (unlocking a door) and Bluetooth device management (music playback) from a smartphone.

## Objective

- **Build and configure** a Packet Tracer network involving RFID, Bluetooth, and smartphone devices.
- Set up and test connectivity of IoT devices, ensuring proper IP configuration.
- Implement and test RFID access control logic (valid vs. invalid tag IDs).
- Manage devices (e.g., light, music player) via Bluetooth and a smartphone interface.

### Lab Plan

- A. Launch Packet Tracer and Observe Initial Workspace
- B. Build the Topology
- C. Configure the Router (DHCP) and Server
- D. Activate the IoT Registration Server
- E. Register Devices (Door, RFIDReader)
- F. Add Conditions for RFID Access
- G. Assign and Test RFID Tag ID
- H. Add Bluetooth Devices (Music Player, Speaker)
- I. Add Home Gateway and Smartphone
- J. Test IoT Control via Smartphone

## **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Basic knowledge of configuring IoT devices (RFID, Bluetooth) in Packet Tracer
- Optional: external PC browser for verifying server-based pages (if needed)

## A. Launch Packet Tracer and Observe Initial Workspace

### 1. Open Packet Tracer:

Double-click the Packet Tracer icon (or find it in your applications) to launch. You should see a blank Logical topology workspace:

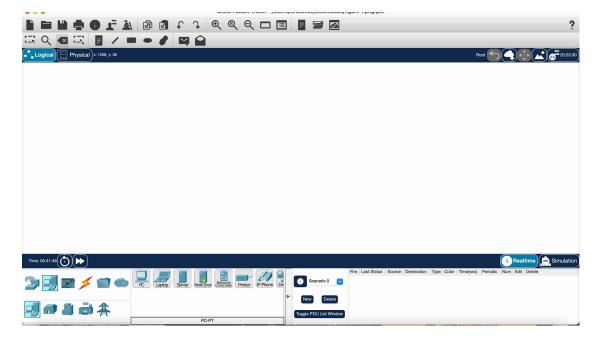


Figure 5.1: Initial Workspace

## B. Build the Topology

#### Adding the Devices to the Workspace

## 2. Add network devices:

From the Device Selection box, place the Router, Switch, Server, Door (IoT device), RFID Reader, RFID Card, and any other required devices onto the workspace. Refer to the sample topology (Figure 5.2).

È È È È È O F 2	■ ● / ■ 🛱 🖗 ● ● / ■ 🛱 😭		
Servero	2911 Router0		
Serveru	Switch PT Switch0	1	
Poor IoT0	RFID Reader		
Time: 00.9145 🕑 🍽		PPhone De V	Fire Last Status   Source   Destination   Type   Color   Time(sec)   Periodic   Num   Edit   Delete
	Server-PT	New Delate Toggle PDU List Window	

77

Figure 5.2: Sample topology for IoT-based smart access control.

## 3. Renaming IoT devices:

For clarity:

- Door  $\rightarrow$  Door
- RFID Reader  $\rightarrow$  RFIDReader
- RFID Card  $\rightarrow$  RFIDTag

In Packet Tracer, click on each device, go to Config, and change the Display Name.

## **Connecting Devices**

Use the "Automatically Choose Connection Type" cable (lightning bolt icon). Follow these steps:

- 4. Connect **Router** to the **Switch**.
- 5. Connect **Switch** to the **RFIDReader**.
- 6. Connect **Switch** to the **Door**.
- 7. Connect **Switch** to the **Server**.

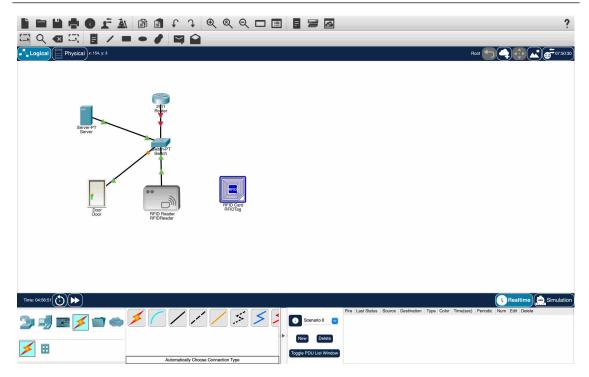


Figure 5.3: Cabling the router, switch, IoT door, and RFID reader.

# C. Configure the Router (DHCP) and Server

## Configuring the Router

- 8. Open the Router (R1):
  - Click the Router icon, go to Config.
- 9. Rename and Assign IP: Change the Display Name to R1 and Hostname to R1. In GigabitEthernet0/0:
  - IPv4 Address: 192.168.1.1
  - Subnet Mask: 255.255.255.0
  - Check the *Port Status* box to enable.

Gisco Packet Tracer File Edit Options View Tools	Extensions Window	Help			zoom 🛃	🕄 🎁 🖸	B 🕞 📭	<del>ଚ</del> ସ ଚ୍ଚ	Fri 16 Aug 21:16
		Disco P	acket Tracer						
	) @ @ Q								?
[국 Q 🚳 (국 📕 / = = 🖋 🔤									
Logical Physical x: 425. y: 84			R1				Root		08:17:00
		Physi	cal Config CLI	Attributes					
	GLOBAL			Global Settings					
(2)	Algorithm Settings	Display Name	R1						
2311	ROUTING	Hostname	R1						
	Static	NVRAM	Erase	Save					
Server-PT Server	RIP	Startup Config	Load	Export					
	VLAN Database	Running Config	Export	Merge					
Switch-PT	INTERFACE								
	GigabitEthernet0/0								
	GigabitEthernet0/1								
	GigabitEthernet0/2								
Door BFID Reader BFID Reader	Equivalent IOS Commands								
HFIDHesder	If you require further assists export@cisto.com.	nce plessé contact us	by sending email to						
	Cisco CINCO2911/89 trevision 1 Processor board 10 PTX15240888	.0) with 4915208/3276	its bytes of memory.						
	3 Gigabit Sthernet interfaces 20038 configuration is 64 bits	wide with parity disa	bled.						
Time: 04:57:43 🖒 🍺	2558 bytes of non-volatile con 2458568 bytes of ATA System Co	figuration memory. mpactPlash 0 (Read/Ws	100					Real	time Simulation
	System Configurat	ion Dialog					Ima(ana) Derit		
	Nould you like to enter the in	itial configuration of	Halog? [yes/no]:				ime(sec) Pend	dic Num Edit	Deiete
🏂 🌒 🕿 🗾 📹 📥 🖊 🦳 🚄	Frees serior to set started!								
	,								
<b>F</b>	Тор								
Automatic.							_		
💽 📰 🚅 🖉 🧮 🖏 🔤 🔍 TA 📑 📑 🥪	🕶 🚺 🗙 🔮 🖩	1 🔼 🛃 🕅		🗐 🗐 🗐	🛛 🖆 💽	🗷 👄 🗵	<b>1 💀 </b>		

Figure 5.4: Renaming router to R1 and preparing interface config.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help	ZOOM 🛃 😒 🎁 📴	) 🕑 💼 🗢 Q 😫 Fri 16 Aug 21:17
A A A	Cisco Pi	acket Tracer	
1 = 1 + 0 F A @ 1 + '	) ୧୧୧ 🗆 🔳		?
formal and the set			
Logical Physical x: 369, y: 479		R1	Root D - 09:02:30
	Physic	cal Config CLI Attributes GigabitEthernet0/0	
	GLOBAL Settings Port Status		
69	Algorithm Settings Bandwidth	On	
2911	ROUTING		
	Static	<ul> <li>Helf Duptex</li> <li>Full Duptex</li> <li>Auto</li> </ul>	
Server-PT	RIP MAC Address SWITCHING IP Configuration	0060.3E33.6B01	
	VLAN Database	192.168.1.1	
Switch-PT Switch	INTERFACE Subnet Mask	255.255.255.0	
	GigabitEthernet0/0 Tx Ring Limit	10	
	GigabitEthernet0/1		
	GigabitEthernet0/2		
*			
Door Door RFID Reader	Equivalent IOS Commands		
RFIDReader	System Configuration Dialog		
	Nould you like to enter the initial configuration d	lalogy [ywis/os]:	
	Press SETURN to get started)		
Time: 04:59:11 ())	Router>ensble Router+configure terminal Enter configuration commanis, one per line. End wi		Realtime Simulation
	Nouter(config)#hostname RL Bl(config)#	ta campa.	Ime(sec) Periodic Num Edit Delete
> , = , = , = , = , = , = , = , = , = ,	Ritconfig)# Bl(config)# Ritconfig)#interface GigabitEthernet0/0		
	Ri(config-if)#ip address 192.168.1.1 255.255.255.0 Ri(config-if)#		
<b>S B</b>			
Automatic.	Тор		-
🖉 💼 😋 🛇 🗕 🕼 📼 📖 🛄 🔂	🕶 🚺 🔕 🕃 💷 💋 🗻 🖉	نې چې ጅ 🚍 🔍 🔍 🖷 🖷 🖉	ੋਿ® 😤 🖬 🖬 🖛 🖬 🖊

Figure 5.5: Assigning IP 192.168.1.1/24 to GigabitEthernet0/0.

# 10. Enable DHCP from CLI:

Switch to the **CLI** tab, press Enter, and type:

ip dhcp pool iot network 192.168.1.1 255.255.255.0

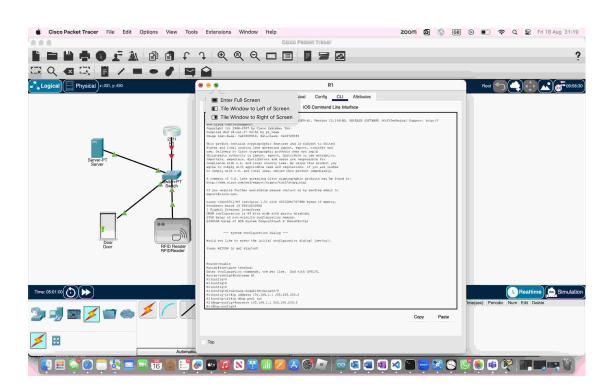


Figure 5.6: CLI commands to enable DHCP for the 192.168.1.0/24 network.

## Configuring the Server

### 11. Open the Server:

Go to  $Desktop \rightarrow IP$  Configuration and assign:

- IPv4 Address: 192.168.1.15
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1

Cisco Packet Tracer File Edit Options View Tools		zoom	<b>6</b> 3 🔇 GB	• • • • • • • • • • • • • • • • •
				2
				f
프 익 🗠 🖂 🗒 / = = / 🛤				
Logical Physical x: 384, y: 487		Server		Root () (10:46:30)
	Physical Con	ig Services Desktop Programming Attributes		
	IP Configuration		×	
<b>1</b>	IP Configuration			
2911	DHCP	O Static		
	IPv4 Address	192.168.1.15		
Server-PT Server	Subnet Mask	255.255.255.0		
	Default Gateway	192.168.1.1		
Switch-PT Switch	DNS Server	0.0.0		
	IPv6 Configuration			
	Automatic	O Static		
	IPv6 Address			
	Link Local Address	FE80::2E0:8FFF:FEA3:5861		
Door RFID Reader BFID Reader	Default Gateway			
	DNS Server			
	802.1X Use 802.1X Security			
	Authentication MDS		ă	
Time: 05:02:33	Usemame			Realtime 🚔 Simulation
"] = ∕ = ← ∕ / /	Password			Time(sec) Periodic Num Edit Delete
Automatic	Тор			
	y 🕶 🚺 🛯 🚰 💷 💋	<u>a 6 a i a a a a a a</u>	📑 🔀 😒 (	5 🖲 🕫 🏹 📰 💷 🗑 🤅

Figure 5.7: Server IP config: 192.168.1.15/24, gateway 192.168.1.1.

## 12. Enable IoT Services:

Go to Services  $\rightarrow$  **IoT** and switch On the *Registration Server*.

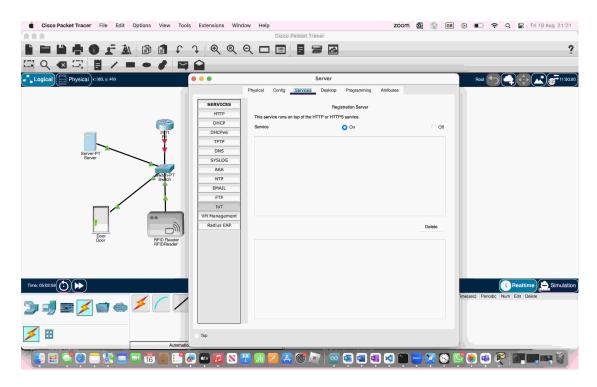


Figure 5.8: Turning on the IoT Registration Server.

81

# D. Activate the IoT Registration Server

### 13. Create an Account:

On the Server, go to  $Desktop \rightarrow$  Web Browser. Enter 192.168.1.15 in the URL. Since there's no IoT account yet, click Sign Up Now, and use 'admin' / 'admin'.

Gisco Packet Tracer File Edit Options View Tools	Extensions Window Help	zoom 💩 🕥 🐻 🕞 🗨 🗢 🤉 Q 😫 Fri 16 Aug 21:22
A A A	Cisco Packet Tracer	
	ᡗ @ @ Q □ 🗉 🖥 📾	?
교 Q 🚳 🖾 🖉 🖊 🖿 🖝 🧨 🖼		
Logical Physical x: 414, y: 100	Server	Root 👉 🗬 🖍 💣 11:17:30
	Physical Config Services Desktop Programming Attu	butes
	Web Browser	×
69	< > URL http://192.168.1.15	Go Stop
2411	Registration Server Login	
Server-PT Server	Username:	
Switch-PT'	Password:	
Switch 1	Sign In	
	Signin	
	Don't have an IoT account? Sign up now	
*		
Door Door BFID Reader BFID Reader		
HFIDHeader		
Time: 05:03:35		Realtime Simulation
🏂 🚽 🖻 🗾 📹 🖊 🦳 🖊		ime(sec) Penoaic Num cos Delete
1	Тор	
Automatica	1 miles	
	3 🕶 🧰 🛛 🖀 💷 💋 🖂 🎯 📨 🛛 📼 💷	9 🖱 🚔 🛠 🛇 🕵 🌒 🖗 🏹 📰 💷 🖏 🖗

Figure 5.9: Creating a new IoT account with username/password "admin."

### 14. Confirm Account Creation:

After hitting Create, you have an IoT account, but no devices are registered yet.

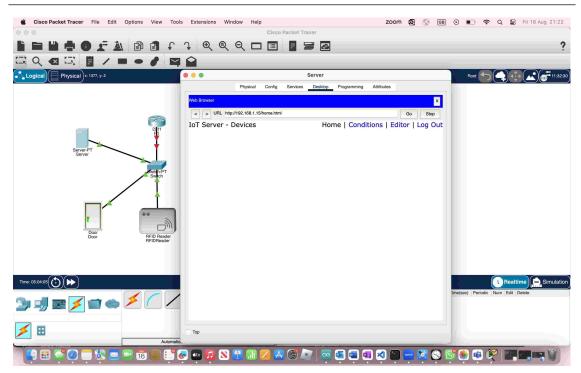


Figure 5.10: Successful account creation on the Registration Server.

## E. Register Devices (Door, RFIDReader)

### 15. Go to Device Config:

For each device (Door, RFIDReader), under *Gateway/DNS IPv4* choose DHCP so it picks up an IP from the router.

## 16. Select Remote Server: Under IoT Server options, click Remote Server, enter:

- Server IP: 192.168.1.15
- Username: admin
- Password: admin

#### Then click Connect.

83

Cisco Packet Tracer File Edit Options View Tools	Extensions Window	Help	zo	oom 🛃 🛞 GB	🕑 💽 🗢 Q 😫 Fri 16 Aug 21:23
		Cisco Packet Trac			
	$\mathbf{Q} \otimes \mathbf{Q}$				?
[대 Q 🔞 🗔 🎽 🖊 🔳 🖝 🧨 🖼 :					
Logical Physical x: 397, y: 233		D	oor		Root 11:56:00
	Specifications	I/O Config Physical Co	fig Thing Editor Programming	Attributes	
	GLOBAL	Display Name Door			
	Settings	Serial Number PTT0810KGJS			
	Algorithm Settings Files	Interfaces FastEthernet	1	0	
	INTERFACE	Gateway/DNS IPv4			
Server-PT Server	FastEthernet0 Bluetooth	O DHCP Static			
	bioatooat	Default Gateway			
Switch-PT Switch		DNS Server			
		Gateway/DNS IPv6			
		Automatic O Static			
r		Default Gateway			
Door RFID Reader		DNS Server			
Door RFID Reader BFIDReader		IoT Server			
		None Home Gateway			
		Remote Server Server Address 192.16	8115		
Time: 05:04:50		User Name admin			Realtime 🚔 Simulation
		Password admin			Time(sec) Periodic Num Edit Delete
沟 🚽 🖻 🎽 📹 📥 🗡 🗌 🖊				Connect	
∕ ⊞	Тор			Advanced	
🛒 😫 🥌 🧶 🚍 🍪 📼 😫 🛅 📴 📑 🖉	🔤 🚺 💌 🔛	∠ 🛆 © 🦉	🔜 📾 📾 🚮 🛪 I	🗖 🖼 🖾 💭 🖉	S 🖲 🦉 📰 📰 🛒 📝

Figure 5.11: Registering the Door with the remote server (192.168.1.15).

Cisco Packet Tracer File Edit Options View Tools	Extensions Window	Help	zoom 🛃 🔇 GB	🕑 💽 🗢 Q 😫 Fri 16 Aug 21:41
		Cisco Packet Tracer		
	) @ @ Q			?
[다 Q 🚳 🖂 🗒 / = = / 😭				
		RFIDReader		Root 520:52:00
		Specifications Physical Config Attributes		
	GLOBAL			
	Settings	Display Name RFIDReader		
	Algorithm Settings	Serial Number PTT0810IT97-		
2311 F1	Files	Gateway/DNS IPv4		
	FastEthernet0	O DHCP Static		
Server-PT Server	- addressed	Default Gateway 0.0.0.0		
Content of the second s		DNS Server		
Switch		Gateway/DNS IPv6		
		Automatic		
		<ul> <li>Static</li> <li>Default Gateway</li> </ul>		
		DNS Server		
Door BFID Reader BFIDReader		IoT Server		
Door H-Dheader		Home Gateway		
		Remote Server Server Address 192,168,1.15		
		User Name admin		
Time: 05:22:04		Password admin		Realtime 🚍 Simulation
· · · · · · · · · · · · · · · · ·			Refresh	ime(sec) Periodic Num Edit Delete
"] ] = ∕ ( ∕ ∕				
🗲 🗄 📃 🔄	Тор		Advanced	
Automatics	-			
🛒 🛱 🛋 🧟 🗖 😵 📼 🖬 😰 💽 🚾	🖭 🚺 🔕 🚰 I	💵 🔼 🎯 🖉 👳 💷 💷		978 @ 🐑 🖬 💶 🖙 🗑 🖊

Figure 5.12: Registering the RFID reader similarly.

## 17. Confirm Registration:

Return to the server's **Web Browser**. You should see Door and RFIDReader listed under the IoT devices.

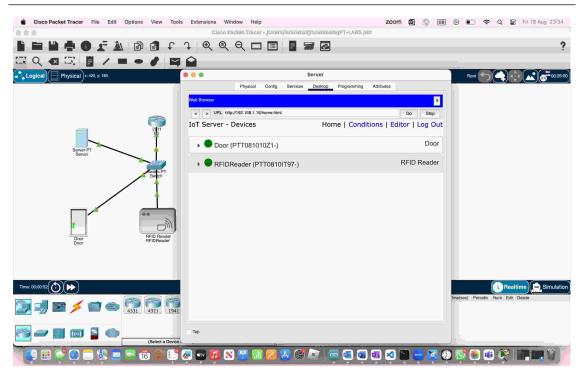


Figure 5.13: Door and RFID reader successfully connected to the IoT server.

## F. Add Conditions for RFID Access

#### 18. Four Rules:

In the Registration Server's Conditions or IoT Monitor interface, add the following:

- Condition 1: RFIDValid Condition: RFIDReader Card ID == 1001 → Set RFIDReader Status = Valid.
- Condition 2: RFIDInvalid Condition: RFIDReader Card ID  $!= 1001 \rightarrow Set RFIDReader Status = Invalid.$
- Condition 3: DoorOpen Condition: RFIDReader Status = Valid  $\rightarrow$  Door Lock = Unlock.
- Condition 4: DoorLock Condition: RFIDReader Status = Invalid  $\rightarrow$  DoorLock = Lock.

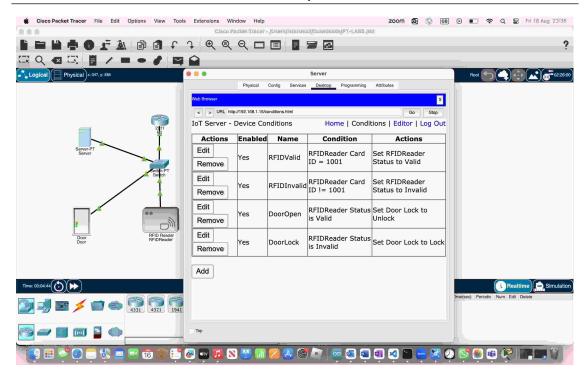


Figure 5.14: Creating conditions to manage door lock based on RFID validity.

## G. Assign and Test RFID Tag ID

### 19. Modify the RFID Tag:

In *Attributes*, set CardID from 1001 to 500. Then hover the tag over the reader. The reader should turn red, locking the door (invalid).

#### 20. Restore Valid ID:

Change the CardID back to 1001 and test again. This time, the reader turns green and unlocks the door.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help ZOOM	💩 🕼 📵 🕑 💽 🛜 Q 😫 Fri 16 Aug 23:39
A A A	Cisco Packet Tracer - /Users/israismail/Downloads/PT-LAB5.pkt	
	ᡗ @ @ Q □ Ξ 📱 🖬 🔤	?
[ ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( (		
	RFIDTag	Root S 2:49:00
	Specifications Physical Config Attributes	
	Attributes:	
	Name Attribute	
	1 MTBF 26280	
2011	2 cost 5	
	3 power source 0	
Server-PT	4 rack units 1	
Server	5 wattage 5	
Switch-PT Switch		
switch		
	Properties:	
	Property Value	
	1 ardID 500	
Door BFID Reader BFID Reader	2 ROGRAMMING_EDITING_DIR	
Door RFIDReader Door RFIDReader		
Time: 00:05:28		
		Time(sec) Periodic Num Edit Delete
		Refresh
	Тор	Advanced
	И	
🚺 🗄 😋 🔕 🚍 🗞 📼 🖘 💷 😂	🖗 🚥 🗖 🛇 🤐 💷 🔀 🥸 🖉 🖷 🥶 🐼 1	🗎 🖶 💐 🕗 🗳 🌒 📽 👯 📰 📖 🖏 🚩

87

Figure 5.15: Reader denies access (red) for invalid CardID (500).

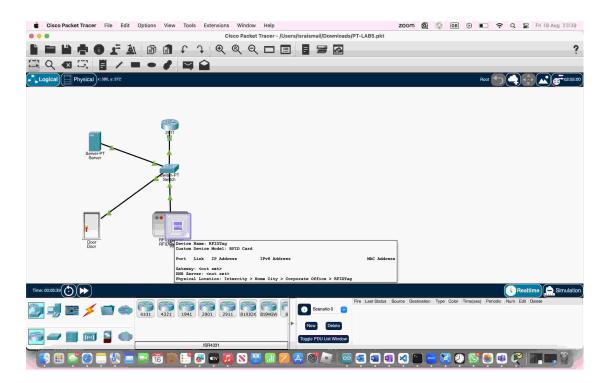


Figure 5.16: Switching card ID back to 1001 to allow green (valid).

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help	zoom 🛃 💿 📵 🕑 💽 🗢 Q 🕿 Fri 16 Aug 23:49
A A A	Cisco Packet Tracer - /Users/israismail/Downloads/PT=LAB5.pkt	
	l 🔍 🍳 Q 🗖 🔳 📕 🌌	?
[대 Q 🗠 🖾 🖉 🖉 🖛 🖉 🖼	<b></b>	
Logical Physical x: 610, y: 332	🖡 🖷 🔹 RFIDTag	Root () (**********************************
	Specifications Physical Config Attributes	
	Attributes: Attribute Attribute	
	1 MTBF 26280	
2011 Fa	2 cost 5	
	3 power source 0	
Server-PT Server	4 rack units 1	
Switch	5 wattage 5	
Switch		
	Properties: Property Value	
	1 ardID 1001	
Door BFID Reader Door BFIDReader	2 ROGRAMMING_EDITING_DIR	
500		
Time: 00:15:02		
		Time(ssc) Periodic Num Edit Delete
		Refresh
🕾 🛩 🖬 📾 🗳 🧄	Тор	Advanced
	11	
🛒 🖶 😋 🕲 📛 😵 🚍 📖 📖 층 (	🖗 🖦 🔯 🗶 🍘 🔽 🦉 🔊 📩 📾 🛍	) 🛛 🗖 🚝 🎇 🌍 🚱 🚳 🐯 📰 📰 🦉

Figure 5.17: Reader turning green and door unlocking.

<b>É Cisco Packet Tracer</b> File Edit	Options View Tools Extensions Window Help	<b>zoom 💩 🔇 (BB) 🕑 📭 穼 Q 😂 Fri 16 Aug 23:49</b>
• • •	Cisco Packet Tracer - /Users/israismail/Downloads/P	
	N 🗊 🗊 f f 🖲 🔍 Q 🗆 🗉 📑 🚟 🐼	?
日 Q 🕢 日 🗐 🖊 I		
Logical Physical x: 406, y: 366		Root 5 3 5 10 5 77.37.00
	erin Boranger Dranger	
Time: 00:14:48		Realtime A Simulation
🏹 -) 🖻 🗲 🖬 👄	4321 1941 2901 2911 81910X 81940W 8 Scenario 0	irre   Last Status   Source   Destination   Type   Color   Time(sec)   Periodic   Num   Edit   Delete
	New Deter Toggle PDU List Window	
🖉 😳 🖼 😅 🖉 🚍 🐯 🖻	s 🖃 🐻 🖳 📴 🕶 🙋 🛯 🖓 🔝 🖉 🖉 🧖 👳	🤹 💷 🔍 🍋 😇 💐 🎱 🗭 🏟 🟹 📰 📰 🦉 📗

Figure 5.18: Demonstrating RFID validity transitions.

# H. Add Bluetooth Devices (Music Player, Speaker)

21. Add Music Player and Speaker: In End Devices → Home Devices, place a Music Player (rename it MusicPlayer) and a Bluetooth Speaker (rename it BSpeaker).

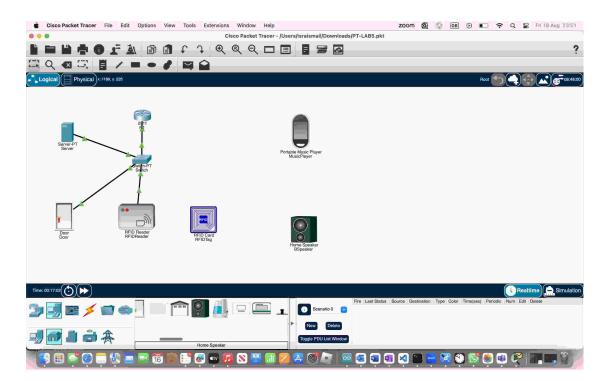


Figure 5.19: Adding Music Player and renaming it for clarity.

## 22. Configuring the Music Player (Bluetooth):

- Wireless0 tab: Uncheck Port Status to disable Wi-Fi.
- Bluetooth: Enable Port Status so it can pair.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help			zoom 🛃 🔇 G	🖲 💽 🗢 Q 🚆 Fri 16 Aug 23:51
	Cisco Packet Tracer - /Users	/israismail/Downloa	ids/PT-LAB5.pkt		
1 • • • • • • • • • • • • • • • • • • •	२ ९ ९ ० 🗖 🔳				?
[국 Q 🚳 🖫 / 〓 ● 🧨 🖼	<b></b>				
Logical Physical x: 773, y: 140		MusicPlayer			Root () (08:38:30)
	Specifica	tions Physical Co	onfig Attributes		
	GLOBAL		Wireless0		
63	Settings Port Status				
2911	Algorithm Settings				
	Files		11 Mbps		
Server-PT	INTERFACE MAC Address		0060.5C9E.DE57		
Server L	Wireless0 SSID		HomeGateway		
	Bluetooth Authentication				
Switch	O Disabled WPA-PSK	WEP WPA2-PSK	WEP Key PSK Pass Phrase		
	Weyear		User ID		
	- WPA	WPA2	Password		
	802.1X	Method:	MI35	0	
			User Name		
1			Password		
Door BFID Reader Door BFIDReader	Encryption Typ	90	Disabled		
	IP Configuratio OHCP Static IPv4 Address Subnet Mask	n			
Tree: 09:1644	IPv6 Configure Automatic Static IPv6 Address Link Local Add	tion ress: FE80::260:5CFF:FE	9E:DE57		Time(sec)   Periodic   Num   Edit   Delete
J <b>a 1 8 4</b>	Тор			Advanced	
💽 🗄 🗳 🖉 🚍 🖏 🔤 🕿 16 😰 😫	ا🗖 💷 🖾 🔍 🙀 💀	<u>a</u> (1	🥺 🗐 🦉	2 🖱 🚍 🕱	9 🞯 🖲 🖷 😤 📰 🖷 🦉

Figure 5.20: Disabling Wi-Fi, enabling Bluetooth on Music Player.

Gisco Packet Tracer File Edit Options View Tools E	xtensions Window Help	zoom 🛃	🔇 📵 🕑 💽 🗢 Q 🛢 Fri 16 Aug 23:51
	Cisco Packet Tracer - /Users/Israismai	[/Downloads/PT-LAB5.pkt	
<b>È ⊨ ⊨ ♦ ● 1 ● 1</b> ● <b>1</b> ↑ ↓	@ @ Q 🗆 🔳 🖥	<b>; a</b>	?
교 Q ④ 🖂 🗒 / = - / 🛤 😭			
Logical Physical x: 489, y: 149	📕 💿 🏾 Mu	sicPlayer	Root 60 44:30
	Specifications Phy	sical Config Attributes	
	GLOBAL	Bluetooth	
	Settings Port Status		C On
2911	Algorithm Settings		
	Files MAC Address		
Server-PT	INTERFACE Coverage Range (meters)	10.00	n v
Server	Wireless0 Discoverable		💟 On
	Bluetooth Devices		
Switch-PT Switch	Name MAG	CAddress Status	
/ î			
1 Î	Discover F	Pair Unpair Tether Unteth	er
	Beacon Broadcasting		
	Broadcast		On
Door RFID Reader L	Frequency (seconds)	10	
500	UUID Data	{794ef402-b230-4215-901d-5782456b	4413}
Time: 00:16:55 ())	IP Configuration		Realtime - Simulation
	IPv4 Address Subrei Minek		Ime(sec) Periodic Num Edit Delete
🎾 🗐 🗃 🗲 🐨 👄 📃 👘 🛄	Chenet Miner		
🥑 🚮 👜 🊓 🛛 💶 🖓	Тор		Advanced
	н.		
💽 😫 🚅 🥥 🚍 🖏 📼 🖃 🗃 📑 🥪	🚥 🗖 😒 🖉 💷 💋 🖉	💽 💿 🖪 🖬 🖉 🍋	- 🔀 🕙 🐼 😻 👰 📰 📰 🧊 📝

Figure 5.21: Ensuring the Music Player relies solely on Bluetooth.

- 23. Configuring the BSpeaker: Similarly, disable Wireless0 and enable Bluetooth in the *Config* tab.
- 24. **Discover and Pair:** In the BSpeaker's **Bluetooth** page, click Discover to find the MusicPlayer, then Pair.

Gisco Packet Tracer File Edit Options View Tools Extensi	ions Window Help	zoom 🗗 💮 (68) (	🗩 🙃 🤉 😋 🔓 Frí 16 Aug 23:52
	Cisco Packet Tracer - /Users/israismail/Downloads/PT-		
	२ ९ २ 🗖 🔳 🚍 🙆		?
표 및 ④ 표 📋 / = = / 🖼 🏠 -			
Logical Physical x: 822, y: 404	BSpeaker		Root 6 6 6 6 6 6 6 57:30
	Specifications Physical Config	Attributes	
G	Blueto	oth	
s s	ettings Port Status		
2¶11 Algorit	hm Settings		
	Files MAC Address	200.4348.3552	
Server-P1	TERFACE Coverage Range (meters) 1	0.00	
Server W	ireless0 Discoverable	🕑 On	
	uetooth Devices		
Switch	Name MAC Address	Status	
	Discover Pair Unpa	ir Tether Untether	
	Beacon Broadcasting		
¥	Broadcast	On	
Door BFID Reader	Frequency (seconds) 1	0	
Door RFIDReader		11b0210e-0a2a-4c6d-93ee-afe58a492128}	
	Data		
Time: 00:17:18	IP Contiguration		Realtime - Simulation
	IPv4 Address	Im	e(sec) Periodic Num Edit Delete
🍃 🗾 🗃 🗲 🚽 👘 📜 👘	Sugreyt Margie		along Longer Long Freit Strate
<b>Ja i i k</b>		Advanced	
	1	Paranaa	
📢 🖶 🗳 🔕 🚍 🖏 📼 📾 😳 😂 🛶	🙋 🛯 🚰 💷 🙋 🦉 🔤 🦉	i 💿 🕺 🍋 🚍 🔯 🚺	S 🗶 🖷 🏹 📰 🛒 📝

91

Figure 5.22: Discovering and pairing with MusicPlayer over Bluetooth.

Cisco Packet Tracer File Edit Options View Tools Extensions V	indow Help	200m 🔂 🛞 GB (	D 🕞 🗢 Q 🛢 Fri 16 Aug 23:52
R R R Cisco	Packet Tracer - /Users/israismail/Downloads/PT-LABS.pkt		1
🖹 🖿 💾 🖶 🗶 🛣 👔 👔 🗘 🗘 🔍 🍳	Q □ □ □ □ □ □ □ □ □		?
Logical Physical x: 1590, y: 505	BSpeaker		Root 60:04:00
	Specifications Physical Control Attributes		
GLOBAL	Bluetooth		
Settings	Port Status	💟 On	
2011 Algorithm Settin	gs		
	MAC Address 0000 A348 3EC2 Coverage Range (meters) 10.00	•	
Server/PT Server Wireless0	Discoverable	🗸 On.	
Bluetooth	Devices		
Switch	Name MAC Address Sta MusicPlayer 0040,0870.0077 Unpaired	tus	
	maski syst		
1	Discover Pair Unpair Tet	ner Untether	
*	Beacon Broadcasting Broadcast	On	
Door RFID Reader Door BFIDReader	Frequency (seconds) 10		
Door Bridheader	UUID (41b0210e-0a2a-4 Data	c6d-93ce-afe58a492128}	
Time: 00:17:30 ()) ())	IP Configuration IPv4 Address 169 254, 165 140		Realtime - Simulation
	Sindiment Minek 255.0.0		ve(sec) Periodic Num Edit Delete
🥑 🚮 👜 🏝 🔔 💷 👘		Advanced	
🛒 👬 🖼 😋 🧰 🖏 📼 🖾 🔞 📰 🛃 🚳 🛶 🚺 8	8 🚰 💷 🗖 🖉 🎯 🖉   👳 🚭 🖬	i 🔇 🖾 🚾 🔇 👀	

Figure 5.23: MusicPlayer discovered, ready for pairing.

## 25. Paired State:

The workspace should show a Bluetooth connection between MusicPlayer and BSpeaker.

Gisco Packet Tracer File Edit Options View	/ Tools Extensions Window Help	zoom 🛃 🐧 📵 🕑 🗊 🗢 🗘 🖢 Fri 16 Aug 23:52
	Cisco Packet Tracer - /Users/israismail/Downloads/PT-LAB	5.pkt
	f f @ @ Q 🗖 🔳 🚍 🙆	?
국 Q @ 대 별 / 표 • /		
Logical Physical x: 963, y: 328	j <b></b>	Roct 🕤 🗬 💭 💣 09:06:30
Streef?	Pontakis Marcis Proper	
Salah		
Dor Dor Dor Dor	RED Card HUDIng HUDIng	
	BSpeaker	
Time: 00:17/39		
	1 Scenario 0 S	It Status Source Destination Type Color Time(sec) Periodic Num Edit Delete
J 🗃 着 🌲 📃 🗕	Home Speaker	
		a a x 🗅 🚍 👯 🔍 💖 🕸 🥰 🖉 📰 🛄 🕅

Figure 5.24: Successful Bluetooth link between MusicPlayer and BSpeaker.

## I. Add Home Gateway and Smartphone

26. Place a HomeGateway:

In Network Devices  $\rightarrow$  Wireless Devices, add HomeGateway and use a cable to connect it to the switch.

27. Add a Smartphone: In End Devices, select Smartphone and place it on the workspace.

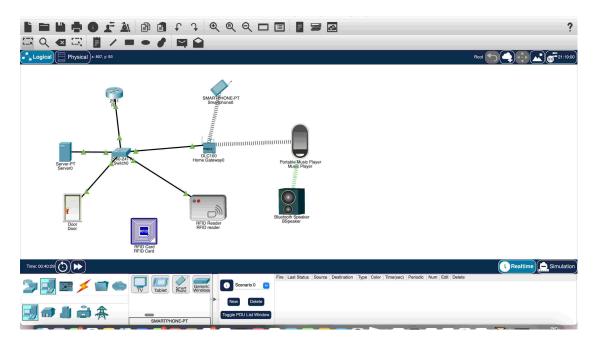


Figure 5.25: Smartphone added to the topology.

### 28. Configure the Smartphone:

- **Config** tab → **Bluetooth**: Disable Port Status.
- 3G/4G Cell: Disable Port Status.
- Wireless0: Set SSID to "HomeGateway", enable Port Status.

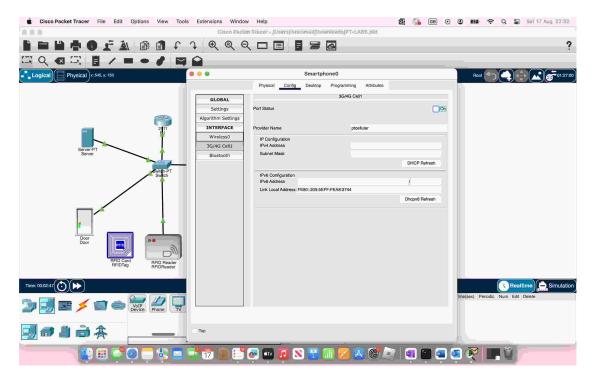


Figure 5.26: Smartphone config: turning off Bluetooth/cellular, turning on Wi-Fi (HomeGateway).

## J. Test IoT Control via Smartphone

## 29. Enable Wireless for MusicPlayer (Optional):

If you want the MusicPlayer to appear under the server, enable Wireless0 or repeat the DHCP + Remote Server steps from earlier. (If purely Bluetooth, it won't automatically show.)

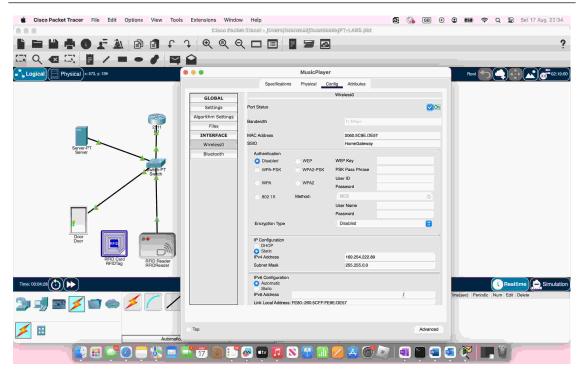


Figure 5.27: Turning on Wi-Fi for MusicPlayer to talk to server, if desired.

## 30. Configure the Light (Example):

If you have a Light device, set DHCP and *Remote Server* to 192.168.1.15, user "admin", pass "admin."

			?
□ Q	• •	Light	<b>−</b> 03:54:00
Sarver-FT Bood Bood Bood Bood Bood Bood Bood Boo	Specifications	UO Config Physical Control Thing Editor Progra Serial Number PT05010RD7- Interfaces PastEthermet0 Gateway/DNS IP-4 Default Gateway 0.900 DNS Server Gateway/DNS IP-6 Automatic State Default Gateway INS Server INT Server None Home Gateway Personets Server Server Address 192.188.1.15 User Name demin Passaod definin	mming Attributes
Time: 035255 (2) (2) (2) (2) (2) (2) (2) (2) (2) (2)			Refresh
Automatically Choose Connection Type	Тор		Advanced

Figure 5.28: Registering the Light with the server.

31. MusicPlayer to Server:

Repeat the same steps:

• DHCP for IP

• Remote Server = 192.168.1.15, user: admin, pass: admin

			<b>3</b>		?
🔀 🔍 🛃 🛄 🖊 🔳 • 🥒 🔛   🚺 Logical (E Physical) x: 1281, y: 152			Music Player		Root ()(4:20:30)
Lugical       Projected       Projected       Projected         Projected       Projected       Projected       Projected	GLOBAL	Gateway/DNS IPv4 O DHCP Static Default Gateway	Physical <u>Comp</u> Attributes 10ADBU- less0 80.108.15.1 0.0 9 192.108.1.15 admin admin	Refresh	Realtime 😭 Simulation
Automatically Choose Conne.	Пор			Advanced	

Figure 5.29: Connecting MusicPlayer to server.

## 32. Smartphone Web Browser:

On the Smartphone  $\rightarrow$  **Desktop**  $\rightarrow$  **Web Browser**, enter 192.168.1.15, credentials "admin" / "admin."

		?
CR Q X CR D V	Physical Config Desktop Programming Attributes	Root ( Ro
	Web Browser         X           <	
281	Registration Server Login	
R.	Username: admin	
	Password: •••••	
2000	Sign In	
Server0	Don't have an IoT account? Sign up now	
Door Door Refe		
Time: 00:55:46		
沟 🎝 🖻 🗲 🖬 4	Тор	t(sec) Periodic Num Edit Delete
🗾 🗉	Automatically Choose Connection Type   Toggle POU Litt Window	

Figure 5.30: Smartphone browser connected to the IoT server.

## 33. View IoT Devices:

All registered devices appear (Door, RFIDReader, Light, MusicPlayer, etc.).

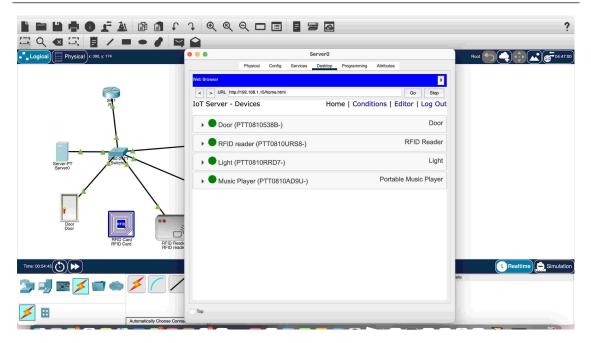


Figure 5.31: IoT devices connected to the server.

### 34. Test Light or Music Playback:

Toggle the Light on/off, or start the MusicPlayer. The Speaker and MusicPlayer are paired via Bluetooth, so audio is routed accordingly.

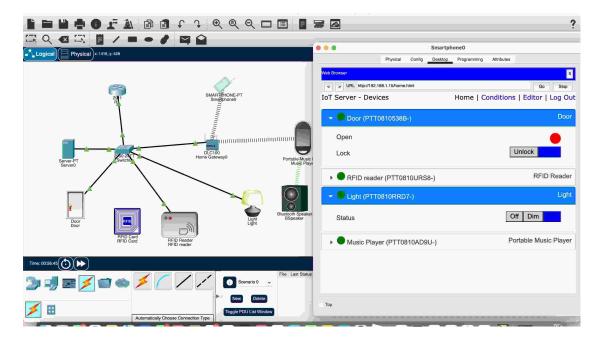


Figure 5.32: Light switched on from the smartphone interface.

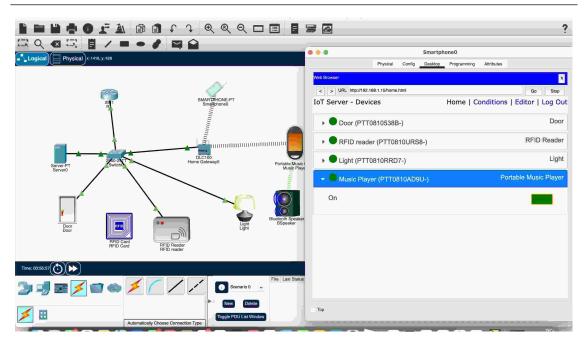


Figure 5.33: Music playing from the MusicPlayer to BSpeaker.

### 35. Door Unlocking Logic (RFID):

The door remains locked unless the RFID tag has the valid ID (1001). Once valid, the *DoorOpen* rule unlocks it.

#### **Measuring Success**

- **RFID** Access: Swiping the RFID tag with ID 1001 unlocks the door (green reader), while any other ID keeps it locked (red reader).
- **Bluetooth Pairing:** The MusicPlayer and BSpeaker are discovered, paired, and audio can be played.
- Smartphone Control: The phone's IoT Monitor (192.168.1.15) displays all devices (Door, Reader, Light, MusicPlayer) and allows toggling them.
- No Errors in Registration: The Packet Tracer console or IoT logs show successful DHCP/remote server connections, with no "bind port" or "unclosed string" errors.

## Summary

You have built a **smart access control system** in Cisco Packet Tracer, incorporating *RFID-based unlocking* and *Bluetooth device management*. By configuring a router with DHCP, registering devices to the IoT server, and setting up rules for valid vs. invalid tag IDs, you established fine-grained access control. Additionally, by pairing a *MusicPlayer* and *BSpeaker*, you demonstrated how a smartphone can manage music playback alongside door locks—forming an integrated IoT environment that showcases Packet Tracer's versatile simulation capabilities.

97





## Introduction

This lab will show you how to **enable multi-user communication** between two separate Packet Tracer instances (often referred to as *User A* and *User B*). By creating a multi-user connection, you can simulate a distributed network environment where each user has their own Packet Tracer topology, yet both can pass traffic or share a remote connection.

### Objective

- Set up multi-user communication between two Packet Tracer instances.
- Simulate network interaction across different users or separate topologies.

#### Lab Plan

- A. User A: Create a Topology
- B. User B: Create a Second Topology
- C. User B: Listen for Multi-user Connections
- D. User A: Accept the Remote Connection
- E. Connect PCs to the Remote Server
- F. Assign IP Addresses on Each PC
- G. Verify Connectivity (Ping)

## **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Basic knowledge of Packet Tracer interface for multi-user mode
- Two separate Packet Tracer instances (on one or multiple computers)

# A. User A: Create a Topology

- 1. Open Packet Tracer (User A):
  - Launch Cisco Packet Tracer on the first user account (User A).
  - You should see a blank *Logical* topology workspace, ready for creating your network.

### 2. Create a Rectangle (Optional Marker):

- (a) Click the *Draw Shape* Tool (near the top-right toolbar in Packet Tracer, depending on your version).
- (b) Select a **Rectangle** shape and fill it with any color you like.

(c) Right-click the rectangle and choose *Rename*, calling it UserA for easy identification. This optional marker helps visually separate or label User A's work area if you're collaborating in a multi-user environment.

### 3. Add a PC:

- (d) In the lower-left device selection, go to *End Devices*.
- (e) Drag a **PC** icon onto the canvas.
- (f) Rename it to PCA by clicking on the device, going to the **Config** tab (or right-click  $\rightarrow$  *Rename*), and typing PCA.

### 4. Add a Remote Network:

- (g) Scroll to or click the **Multi-user Connection** category (in some Packet Tracer versions, it may appear as "Multiuser").
- (h) Select and place a **Remote Network** object in the workspace.

Ś.	Cisco	Packet Tra	er Fi	le Edit	Options	View	Tools	Extension	Window	Help				zoom	ē.	9	GB	•	○	Q 🗑	Tue 13	8 Aug 20:31
	•							00	0	Pale	tte Dialog											
Ľ			0	F I		E	f '	1	2					1 m								3
			F	1	-					✓ Outline		Select Ou	tline Color									
		<u> </u>	<u> </u>						-						-					$\frown$		01:04:
• • L	ogical	Physic	al)x:941.	y: 362					-	No Fill		Select i	Fill Color					1	Root 🕙			
									/	Fill Col	or											
								-														
Time:	00:02:09	() ) )	)																	Rea	ltime	Simulatio
<b>FR</b>	_1		/	•		1				<b>F</b>	C Summer	-0	Fire   Last Status	Source Des	tination	Type	Color	Time(sec	Periodic	Num   Edi	Delete	
	4	<b>1</b>		E	4331	4321	1941	2901 29	11 819IOX	819HGW 8	Scenario	00 🕑										
										•	New	Delete										
100			1								Toggle PDU Lis	et Window										
	-							829			1.3901 00 01											
	) 🖬	) 📑 🖉		🕹 🔤	13		: 🕈 🌌	🔹 🗾	8	💷 💋 🔜		0	a 💼 💼	× 😜	2000	2	6	) 🚺	1 🧶 🕻	2		

Figure 6.1: Placing a Rectangle and PC for User A's topology.

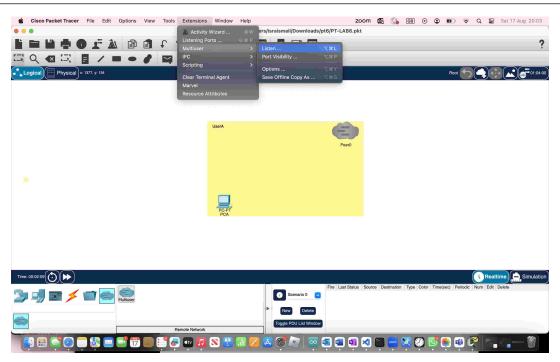


Figure 6.2: Adding a Remote Network object for User A.

- Why a Remote Network Object?.
   Multi-User Mode: Packet Tracer's remote network object is specifically used for connecting two or more Packet Tracer instances (e.g., User A and User B) over a shared topology.
  - Labeling Your Area: By drawing a rectangle named UserA, you visually delineate your portion of the simulation if you're collaborating with others in real time.
  - **Organized Workflows:** Keeping your devices (like PCA) and a remote network reference in one area ensures you can quickly link to User B's topology in the next steps.

# B. User B: Create a Second Topology

- 5. Open Packet Tracer (User B):
  - Launch Cisco Packet Tracer on the second user account (User B).
  - You should see another blank *Logical* workspace, just as in User A's setup.
- 6. New Rectangle:
  - (a) Use the **Draw Shape** Tool (found in the same toolbar as before) to create a rectangle of a different color than User A's.
  - (b) Right-click the rectangle and select **Rename**, calling it UserB.
  - This visually designates your portion of the multi-user topology as belonging to User B.
- 7. Add a PC:
  - (a) Under *End Devices* in the lower-left device selection, drag a PC into the workspace.
  - (b) Rename it PCB by clicking on the device and going to the **Config** tab (or right-click  $\rightarrow$  *Rename*).
- 8. Add a Remote Network:
  - (a) Scroll to the Multi-user Connection category (sometimes labeled "Multiuser").

- (b) Drag a **Remote Network** object onto your workspace.
  - Why Create a Separate User B Topology?.
     Multi-User Collaboration: Each user can build and manage their portion of the network independently, then link them together later.
    - **Clarity of Ownership:** By labeling the rectangle UserB and naming your PC PCB, it's easy to see which devices belong to User B if you're collaborating in real time.
    - Scalable Design: You can expand your own network—adding routers, switches, or servers—and then connect to User A's network when ready.

## C. User B: Listen for Multi-user Connections

### 9. Open Listen Mode:

In User B's Packet Tracer instance:

- (a) Click on the **Extensions** menu (usually at the top of the Packet Tracer window).
- (b) Hover over **Multiuser** and select **Listen**.
- (c) A prompt or dialog box appears. Choose:
  - Prompt for both existing and new remote networks
- (d) Keep the default password as cisco (unless you wish to change it) and click **OK**.

This puts **User B**'s Packet Tracer into a "listening" state, allowing **User A** (or others) to initiate remote connections.

#### 10. Configure the Remote Network Icon:

- (a) In User B's workspace, click on the *Remote Network* object you placed earlier.
- (b) In the object's configuration, change the connection type from *Incoming* to *Outgoing*.
- (c) Enter the password cisco (or the one you specified in the Listen Mode prompt).
- (d) Click **Connect** to finalize this part of the setup.

Cisco Packet Tracer File Edit Options View Tools Ext	ensions Window Help	200m 🛃 😘 🕒 🙂 📽 🗢 🗘 😫 Sat 17 Aug 20:08
	Cisco Packet Tracer - /Users/israismail/Downloads/??.pkt	
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ଷ୍ ଷ୍ ପ୍ 🗖 🔳 🗃 🖾	?
토 및 ④ 토 📱 / = = / 🛤 😭	Multiuser Listen	
Logical) Physical x: 457, y: 17		Root Root 20139.00
	127.0.0.1:38000 192.188.0.68:38000	
	Local Listening Address:	
	Port Number 08000	
	Password	
	Existing Remote Networks New Remote Networks	
	Always Accept Always Accept	
	Always Deny Always Deny  Prompt Prompt	
	Stop Listaning OK Cancel	
Time: 00.03:17	Supresumay OK Garden	Realtime Asimulation
	Fire Last St	atus Source Destination Type Color Time(sec) Periodic Num Edit Delete
🔊 🗾 🔤 🗲 📹 👄 😾 🚛 Server 🕷	Retwork Printer IP Phone De Scenario 0 ~	
	New Delete	
🗾 🗗 🏨 📩 条 📃 🔜	Toggle PDU List Window	
	s 🙋 🛛 💭 💷 🔽 😤 🎯 🖾   🚋 📹 🕻	n 🛪 🗩 🚔 🕱 🗞 🦓 👘 📢 🚺 🗖 🗖 🛄

Figure 6.3: User B listening for multi-user connections.

- Why Listen Mode?.
   Multi-User Collaboration: By enabling "listen," User B's Packet Tracer session awaits an incoming request from User A to link their topologies.
  - **Prompting for Both Existing and New Networks:** Ensures that if a new remote network tries to connect, or an existing one changes settings, **User B** is asked for confirmation each time—enhancing control and security.
  - **Same Password:** Both sides must use the same multi-user password (default cisco here) for the connection to succeed. This keeps unauthorized users from connecting unannounced.

## D. User A: Accept the Remote Connection

### 11. Pop-up Connection Request:

On User A's Packet Tracer instance, a prompt appears, such as:

"A peer (Guest at (1)) wants to make a new remote network connection to you. Do you want to accept this connection?"

Click **Yes** to grant permission. This links **User B**'s "listening" session to your own topology. 12. **New Remote Server Appears:** 

After accepting the request, you should see a new *Remote Server* icon automatically appear in **User A**'s workspace. This object is Packet Tracer's way of representing a successful multi-user connection.

#### 13. Delete the Original Remote Network (If Needed):

- Keep the newly created *Remote Server* (the one that just showed up after accepting the connection).
- Remove the old "Remote Network" object (the one you initially placed in User A's topology), since it's no longer needed or is not connected.

Cisco Packet Tracer File Edit Options View Tools Extensions	Window Help	zoom 🛃	😘 GB 🕑 😩	🐼 🗢 Q 😫 Sat 17 Aug 20:09
000	Cisco Packet Tracer - /Users/israismail/Downloads/??.pkt			
	Q Q 🗖 🗐 🛢 🚍 🗖			?
Logical Physical x: 869. y: 212				Root () (2:05:30
	Multiuser Connection			
	Multiuser Connection			
	Connection Type: Outgoing	3		
	Peer Address: localhost			
	Peer Port Number: 38000			
	Peer Network Name:			
	Password:			
		-		
	Connect Cancel			
Time: 00:04:10 () ()				<b>Realtime</b> Simulation
	Scenario 0	Status Source Des	stination Type Color Time	(sec) Periodic Num Edit Delete
🔊 🗾 🚟 🗲 📹 👄 📈 Lapton. Server, veni Serve , diffe	Siler Printer IP Phone De			
	New Delete			
	Toggle PDU List Window			
i 😫 🖽 🚅 🧭 🔲 🖏 🔤 📑 📅 🕮 블 🐼 🛶 💋	🔊 😭 🔝 💋 🕾 🎯 😰 🧐		🔤 🔀 🧭 💽	

Figure 6.4: User A receiving a new remote connection prompt.

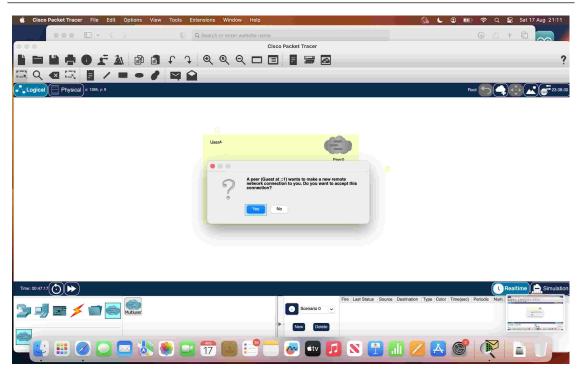


Figure 6.5: Accepting the multi-user connection creates a new Remote Server object.

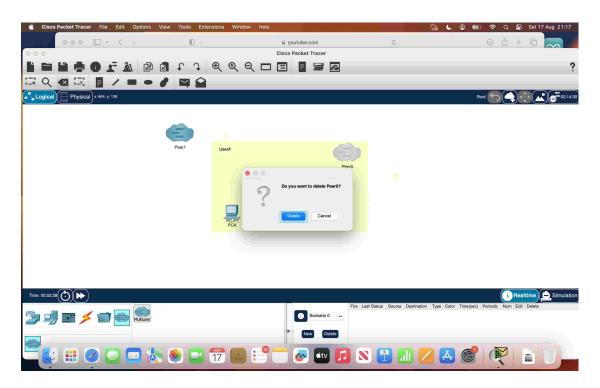


Figure 6.6: Removing the old unused Remote Network object.

 Why Remove the Original "Remote Network"?.
 Auto-Created Remote Server: Once you accept the connection from User B, Packet Tracer generates a *Remote Server* automatically in your workspace. This new object effectively replaces the initial "Remote

104

Network" placeholder you added.

- **Prevent Confusion:** Having multiple "Remote Network" objects can be confusing. Removing the unused one streamlines your topology, ensuring you only keep the active multi-user connection.
- Clear Roles: The new *Remote Server* is now your link to User B's topology, while the leftover "Remote Network" no longer serves any purpose.

## E. Connect PCs to the Remote Server

- 14. In User A:
  - (a) Select a Copper Cross Cable from the *Connections* toolbar (often at the bottom-left).
  - (b) Connect **PCA**'s *FastEthernet0* port to one of the available *link ports* on the newly created *Remote Server*.
  - (c) Wait a moment to see if link lights appear or turn green, indicating a successful cable connection.

#### 15. In User B:

- (a) Also choose a Copper Cross Cable.
- (b) Connect **PCB**'s *FastEthernet0* port to another *link port* on the same *Remote Server* object.
- (c) Observe the link status—if both ends of the connection are active, you'll see link lights or a green status.

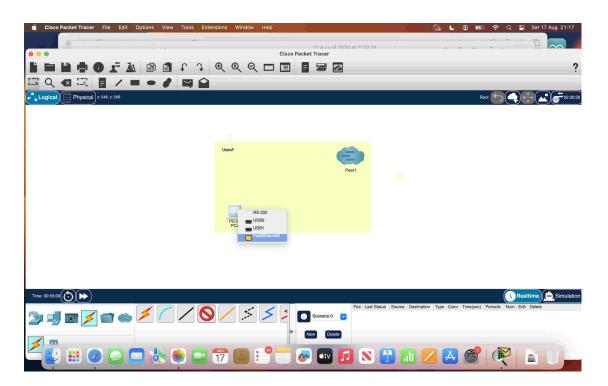


Figure 6.7: User A connecting PCA to the newly created remote server.

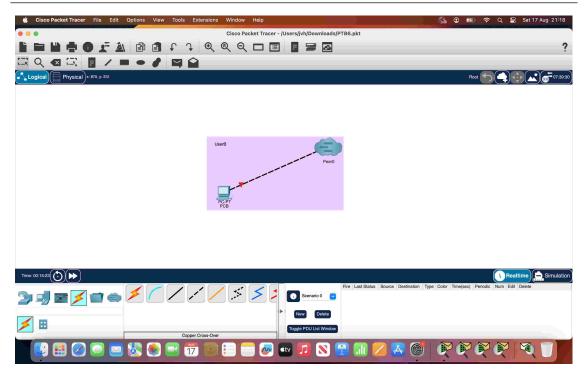


Figure 6.8: User B connecting PCB to the same remote server link.

- Why Use a Copper Cross Cable?.
   Multi-User Connection Object: Packet Tracer often requires a *Cross Cable* to link physical ports to the *Remote Server* interface (though *Automatically Choose Connection Type* can work, too).
  - Virtual "Link Ports": The *Remote Server* object simulates a "gateway" for User A and User B's topologies, so each PC needs to connect with a cable type that Packet Tracer recognizes for direct host-to-host or host-to-virtual server connections.
  - **Confirm Link Lights:** If you don't see the link lights, re-check the ports (e.g., FastEthernet0), or try *Switching* to another cable type if Packet Tracer misidentifies the connection.

## F. Assign IP Addresses on Each PC

- 16. PCA Configuration (User A):
  - (a) **Open PCA's Desktop**: Click on PCA, then select  $Desktop \rightarrow IP$  Configuration.
  - (b) Assign IP Details:
    - **IP Address**: 10.0.0.1
    - Subnet Mask: Let Packet Tracer auto-fill (likely 255.0.0.0 or 255.255.255.0).
  - (c) **No Gateway Needed**: Since we're directly testing connectivity between PCA and PCB over a *Remote Server* link, a default gateway is not strictly necessary unless you expand the network.
  - (d) Close Configuration: Once set, exit the IP Configuration window.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help	- A	🕒 🙆 🐼 🗢 Q 🚍 Sat 17 Aug 21:20
9	n - 1	17 Auroust 2024 an 21/17/19	
		Cisco Packet Tracer	
	10000		?
[국 Q 🚳 🗔 🚦 / = 🗕 🧨 😭	Physica		-
Logical Physical x: 711, y: 37	IP Configuration		Root 6 04:02:00
	Interface FastEthemet0	×	
	IP Configuration		
	DHCP	Static	
	IPv4 Address	10.0.0.1	
	Subnet Mask	255.0.00	
	Default Gateway	0.0.0.0	
	DNS Server	0.0.0.0	
	IPv6 Configuration		
	Automatic	Static	
	IPv6 Address	1	
	Link Local Address	FE80::2E0:B0FF:FE77:CB2	
	Default Gateway		
	DNS Server		
	802.1X		
	Use 802.1X Security		
Time: 09:56:02	Authentication MD5	4	Realtime - Simulation
	Usemame		Time(sec) Periodic Num Edit Delete
🍃 🚽 🖼 🗲 📹 👄 🦰 🖉 🦉	Password		
	Тор		
	- 17 🕒 📑	_ 🖉 💷 🚺 🚺 🚺 🖊 🛃	

Figure 6.9: Assigning 10.0.0.1 to PCA.

- 17. PCB Configuration (User B):
  - (a) **Open PCB's Desktop**: Click on PCB, then go to  $Desktop \rightarrow IP$  Configuration.
  - (b) Assign IP Details:
    - **IP Address**: 10.0.0.2
    - Subnet Mask: Same as PCA's (e.g., 255.0.0.0 or 255.255.255.0).
  - (c) **No Gateway Needed**: Similar to PCA, if you're only testing basic cross-connectivity with User A's PC, a gateway is not required unless you plan a larger routed network.
  - (d) Close Configuration: After entering the IP information, exit the IP Configuration.

107

Cisco Packet Tracer File Edit Options View Tools	s Extensions Window Help	🌀 🙆 📫 🗢 Q 🚆 Sat 17 Aug 21:23
	Cisco Packet Tracer - /Users/jvh/Downloads/PTB6.pkt	
	ጉ ଝ ଝ ଝ   🗖 📕 🚟 🐼	?
프 Q 🛛 🖾 📱 / = = 🧨 🛤	<b>A</b>	
Logical Physical x: 892, y: 231	ID ID ID POR	Root 5 10:07:30
	Physical Config Desktop Programming Attributes	
	IP Configuration	X
	Interface FastEthernet0	0
	IP Configuration	
	DHCP • Static	
	IPv4 Address 10.0.0.2	
	Subnet Mask 255.0.0.0	
	Default Gateway 0.0.0.0	
	DNS Server 0.0.0.0	
	IPv6 Configuration	
	Automatic    Static	
	IPv6 Address /	
	Link Local Address FE80::260:3EFF:FE04:E685	
	Default Gateway	
	DNS Server	
	802.1X	
Time: 00:20:17	Use 802.1X Security Authentication MD6	Realtime Simulation     Ime(sec) Periodic Num Edit Delete
🏂 🚽 🖻 🗾 🖬 🍝 🗡 🤇 🖊		
	Username	
	Password	
× •	Тор	
	📅 🖹 📄 🐼 🚥 🞵 🗙 😭 💷 🧭	

Figure 6.10: Assigning 10.0.0.2 to PCB.

- Why 10.0.0.x Addresses?. Simple Private Network: The 10.0.0.0/8 range is a common private IP space, ideal for point-to-point or lab scenarios.
  - Easy Memorization: Short IP addresses like 10.0.0.1 and 10.0.0.2 are simple to recall and reduce typing errors when pinging or configuring devices.
  - No Overlaps: Using a dedicated subnet for multi-user mode ensures it won't conflict with other subnets in your broader Packet Tracer labs.

## G. Verify Connectivity (Ping)

#### 18. Ping from PCA to PCB:

- (a) On PCA, open the **Command Prompt** from the *Desktop* tab.
- (b) Type:

ping 10.0.0.2

(c) If you see replies like *Reply from 10.0.0.2: bytes=32 time<1ms TTL=128*, then multiuser communication is successfully established between **User A** and **User B**.

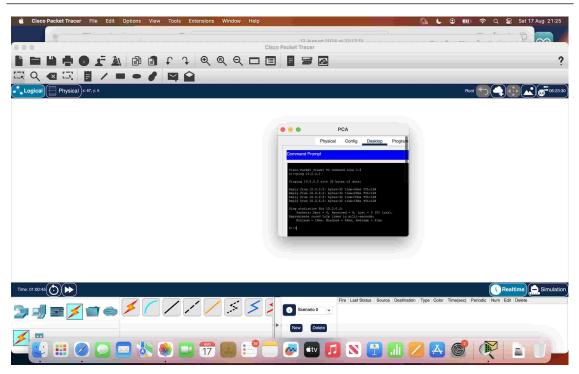



Figure 6.11: Successful ping from 10.0.0.1 (PCA) to 10.0.0.2 (PCB).

- Summary of the Multi-User Connection.
   Physical Representation: Each user builds a separate Packet Tracer topology (User A, User B). The *Remote Network* or *Remote Server* object links them.
  - **IP Configuration:** Assigning 10.0.0.1 and 10.0.0.2 on respective PCs ensures both are on the same subnet.
  - **Ping Test:** Verifies that the cross-connection in multi-user mode works as if both PCs were in the same LAN.
  - Further Exploration: You can now exchange packets, run other protocols, or build more complex labs (e.g., routers, switches, IoT devices) and still test them collaboratively in real time.

### Summary

You have successfully **configured multi-user communication** between two Packet Tracer instances (User A and User B). By *listening* on one side and *accepting* on the other, you created a shared remote server object that both PCs connect to. Using IP addresses on the 10.0.0.x subnet, you verified they can ping each other—demonstrating that both topologies are effectively joined into a single multi-user simulation. This setup allows you to simulate distributed networks or collaborative lab environments in real time.

109

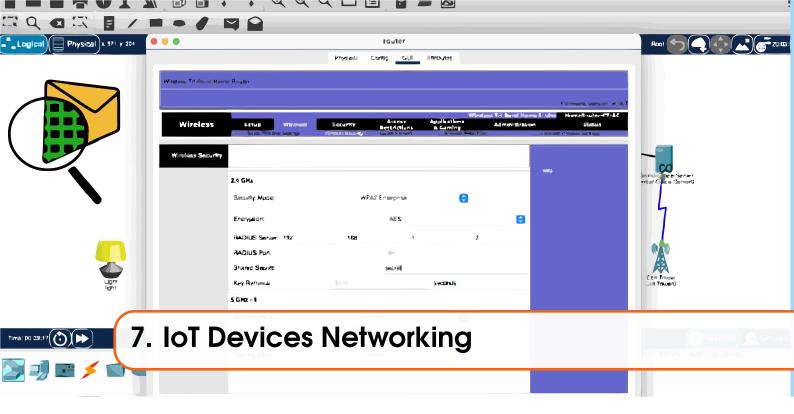

### Introduction

In this lab, you will create a **smart home network** in Cisco Packet Tracer using both *traditional networking devices* (router, switches) and *IoT devices* (fan, lamp, garage door). You will configure an IoT server for authentication (AAA), verify device connectivity (wired and wireless), and test remote control of the IoT devices through a laptop and smartphone.

#### Objective

- Create a basic network topology with IoT and traditional networking devices.
- Configure the IoT server and devices (AAA security, IP settings).
- Test and ensure connectivity of IoT devices using a laptop and smartphone.

#### Lab Plan

- A. Add Network Devices (Switches, IoT Server, Fan, Garage Door, Lamp)
- B. Connect the Network Devices (Switch-to-switch, router, external servers)
- C. Set Up the IoT Server (Registration Server, AAA)
- D. Configure Switches and Router
- E. Set Up Wireless (SSID, WPA2 Enterprise)
- F. Laptop Setup (testing network and IoT server)
- G. Smartphone Setup (final device configuration and testing)

#### **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Familiarity with Config and Services tabs for IoT server settings
- Optional smartphone or laptop knowledge to test final connectivity

# A. Add Network Devices

#### Step 1: Add Two Switches

#### 1. Open Cisco Packet Tracer:

Double-click the Packet Tracer icon on your computer or launch it from your applications. A blank *Logical* workspace should appear.

### 2. Add Two Switches:

- In the lower-left device categories, click on Network Devices and then Switches.
- Drag two **Switches** onto the workspace.

### 3. Place the First Switch in the Center:

- Position the first switch roughly in the center, leaving space on either side for more devices.
- This ensures you can easily connect devices on both the left (e.g., IoT Server) and right (e.g., IoT sensors or additional switches).

#### Step 2: Add IoT Devices

#### 4. From IoT Devices, Add a Fan, Garage Door, and Lamp:

- In the Packet Tracer categories, select *End Devices* or *IoT Devices*, depending on your version.
- Drag a Fan, a Garage Door, and a Lamp onto the workspace.
- 5. Position Them Near the First Switch:
  - Arrange the fan, garage door, and lamp near your central switch for short, uncluttered cable runs.
  - Leave room for any additional sensors or devices you may add later.

#### Step 3: Add IoT Server

#### 6. From Servers, Add an IoT Server Near the First Switch:

- In *Network Devices*  $\rightarrow$  *Servers*, select the **IoT Server**.
- Place it on the workspace, ensuring it's relatively close to your main switch for simpler cabling.

#### 7. Purpose of IoT Server:

- This device will manage and authenticate all IoT devices, such as the fan, garage door, and lamp.
- It can also provide additional services (e.g., DHCP, DNS) if needed, although you may configure a router for those tasks in more complex topologies.

	ଭ୍ଷ୍ ପ୍ 🗆 🔳		Root D	? () () () () () () () () () () () () ()
Ginge Dor	Hereeftoure TFAC Wireees Router	Smort PT Switch Service	Switch1 Switch1 Central Office Servert Central Office Servert	
Light Light Fan Light		Serveru	Cell Tower Cell Tower	
	< ا		ource Destination Type Color Time(sec) Periodic Num Edit Del	

113

Figure 7.1: Switches and IoT devices (fan, garage door, lamp, IoT server).

- Why These Devices?. Switches: Allow multiple endpoints (IoT devices, servers) to connect locally on a LAN.
  - Fan, Garage Door, Lamp: Simulate common smart-home or small-office IoT components that can be monitored or controlled remotely.
  - **IoT Server:** Acts as a central "brain" for device registration, authentication, and potential automation logic (e.g., triggers/conditions for each device).

# B. Connect the Network Devices

### Step 1: Add Central Office Server and Cell Tower

### 1. Add a Central Office Server and a Cell Tower:

- In Packet Tracer's *Network Devices* or *End Devices* (depending on the version), locate and place:
  - A Central Office Server
  - A Cell Tower
- These represent external network infrastructure, simulating an ISP or mobile provider that your network may connect to for broader access.

### Step 2: Connecting the Switches

- 2. Use the Automatically Selected Cable:
  - Click on the *Connections* icon (lightning bolt).
  - Choose "Automatically Choose Connection Type" so Packet Tracer picks the correct cable (usually a copper straight-through).
  - Click on the first switch, then the second switch, to link them together.

### 3. Place the Second Switch on the Right:

• Position Switch2 (or however you label it) on the right side of the workspace.

• This switch will connect to external devices such as the Central Office Server and Cell Tower.

### Step 3: Add a Router

### 4. Add a Router to the Workspace and Connect It:

- Drag a **Router** from the *Network Devices*  $\rightarrow$  *Routers* category.
- Use the cable tool again (either *Automatically Choose Connection Type* or *Copper Straight-Through*) to connect the router to the first switch.
- Wait a moment to see if link lights turn green, indicating a successful connection.

### Step 4: Connect IoT Server and Switches

### 5. Link the IoT Server to the First Switch:

- If you placed the IoT Server near the first switch, select an empty port on the switch (e.g., FastEthernet0/3) and connect it to the server's FastEthernet0.
- This ensures the IoT Server can communicate with any devices on Switch1.
- 6. Connect the Second Switch to the Central Office Server, and Then to the Cell Tower:
  - Use a *Copper Straight-Through* cable (or *Automatically Choose Connection Type*) to link Switch2 with the **Central Office Server**.
  - Connect the **Central Office Server** to the **Cell Tower**, simulating a path to external/mobile infrastructure.

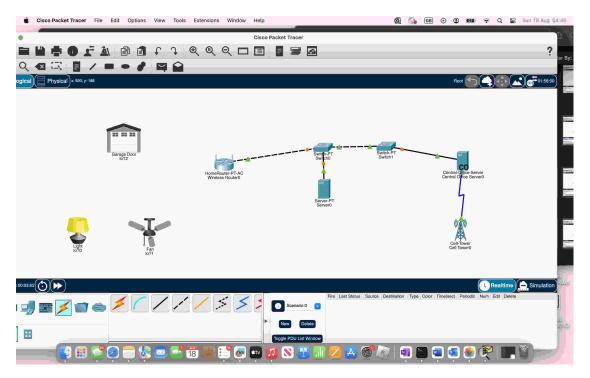


Figure 7.2: All devices connected, including router, switches, and external servers.

At this point, all essential IoT devices (fan, garage door, lamp), the IoT server, and the traditional network components (switches, router, external servers) are physically connected. In the next steps, you'll configure the IoT server (e.g., enabling registration, AAA security) and network elements (IP addressing, DHCP, etc.) to allow seamless communication and device management.

# C. IoT Server Setup

#### Step 1: Set IoT Server as Registration Server

#### 1. Open the IoT Server:

- Click on the IoT Server device in the workspace.
- Select the *Services* tab at the top of the server's configuration window.

#### 2. Enable the Registration Server:

- In the left-hand panel, click on **IoT**.
- Toggle or click the option to enable the **Registration Server**.
- This allows IoT devices (like the fan, garage door, lamp) to register themselves with this server.

Gisco Packet Tracer File Edit Options View Tools	Extensions Windo	w Help	🛃 🚳 GB 🕞 G	🕽 🛤 🗢 Q 😫 Sun 18 Aug 04:48
(aaa		Cisco Packet Tracer		
	J Q Q	< □ ■ ■ ■ ■ ■		?
[다 Q 🕢 [다] 🗒 / = + 🧨 🛤				
	• • •	loT server		Root Root 23:05:01
		Physical Config Services Desktop Programming At	tributes	
Garage Door	SERVICES HTTP DHCP/ DHCP/G TFTP DNS SYSLOG AAA NTP EMAIL FTP	Registration Server This service runs on top of the HTTP or HTTPS service. Service On	o or	Central Of Co-Server Central Of Co-Server
	ToT VM Management Radius EAP		Delete	Call Tower
				Time(sec) Periodic Num Edit Delote
🤭 🛩 🔝 🖬 🏎	Тор			
	🖪 📑 🤛 🖷	0 🔁 🛯 🔁 🖉 🎯 🧑	💷 🛅 🖷 🖷 🍕	) 🏹 🔳 🖛 🖷 🖤 🦳

Figure 7.3: Opening the IoT server's Services tab.

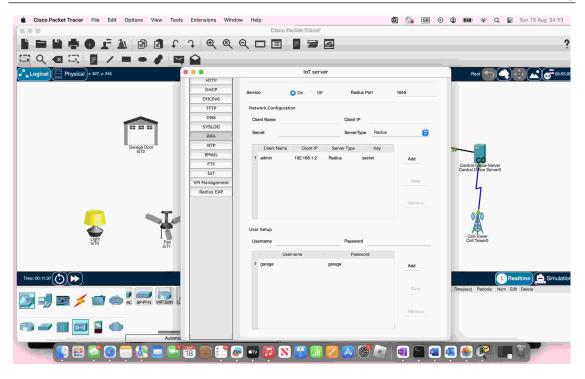


Figure 7.4: Enabling the Registration Server.

#### Step 2: Enable AAA Server

#### 3. Stay in the IoT Server Settings:

- Within the same **IoT** configuration panel, also enable the **AAA Server** (Authentication, Authorization, and Accounting).
- 4. Enter Credentials:
  - Client Name: admin
  - Client IP: 192.168.1.2
  - Secret: secret

Click Add to register these AAA credentials.

- 5. Why AAA?
  - Authentication: Ensures only recognized IoT devices/users can access the network.
  - Authorization: Controls what each device/user can do once authenticated.
  - Accounting: (Optional in Packet Tracer) Could track activity or usage if fully implemented.

### Step 3: Configure User Setup for IoT Devices

- 6. Assign Usernames/Passwords:
  - Under the same IoT/AAA configuration, create or edit user credentials for each IoT device:
    - Garage Door: user garage, pass garage123
    - Fan: user fan, pass fan123
    - Lamp: user lamp, pass lamp123
  - These login details allow each device to authenticate against the AAA server when they come online.

### 7. Save Your Configuration:

- Packet Tracer often auto-saves these settings within the project.
- It's good practice to manually save the Packet Tracer file ( $File \rightarrow Save$ ) after major changes.

#### 8. Next Steps:

- With the IoT server acting as both a registration server and an AAA server, your IoT devices can now securely register and authenticate.
- Proceed to configure the network devices (switches, router) so they can route traffic and manage IP addressing (e.g., DHCP).
- Why IoT + AAA Integration?.
   Centralized Management: All IoT devices register and authenticate in one place, making it simpler to monitor or revoke access if needed.
  - Security Enhancement: Prevents unauthorized devices from joining the IoT network, especially important in production or large-scale environments.
  - **Scalability:** As you add more IoT devices, the server can track all device credentials, status, and usage from a single interface.

### D. Configure Switches and Router

#### Step 1: Configure Default Gateway on Switch 0

#### 1. Open the CLI:

- Click on Switch 0 in the workspace.
- Select the *CLI* tab at the top of the switch's configuration window.
- Press Enter if prompted.

#### 2. Enter the Commands:

```
en
conf t
int vlan 1
ip add 192.168.1.1 255.255.255.0
no shut
exit
```

- en puts you in privileged EXEC mode.
- conf t (configure terminal) enters global configuration mode.
- int vlan 1 selects the VLAN 1 interface (the default logical interface on a Cisco switch).
- ip add 192.168.1.1 255.255.255.0 assigns an IP address (192.168.1.1) and a subnet mask to *VLAN 1*.
- no shut brings the interface up (it is *shutdown* by default).
- exit returns to *global config* mode.

```
3. Result:
```

- Setting 192.168.1.1 on VLAN 1 provides the switch an IP for remote management and serves as a gateway reference for connected devices (though in many designs, you'd use a separate router IP for the default gateway).
- Check the CLI output for messages indicating the interface is now active.

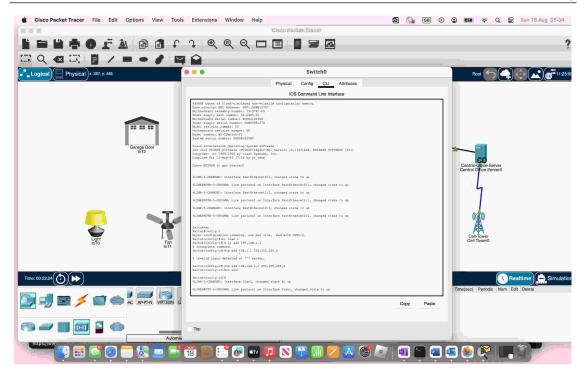


Figure 7.5: Setting VLAN 1 IP on Switch 0.

#### Step 2: Configure the Router

#### 4. Open the Router Configuration:

- Click the **Router** device in Packet Tracer.
- Go to *Configure* (or *Config*) → **Internet** (this may vary by router model or Packet Tracer version).
- 5. Select Static IP and Assign:
  - **IP Address:** 192.168.1.2
  - Default Gateway: 192.168.1.1

If there's a field for **Subnet Mask**, ensure it's set to 255.255.255.0, matching 192.168.1.x.

- 6. Confirm and Close:
  - These static IP settings ensure the router is reachable on the 192.168.1.x network.
  - You can verify connectivity by later pinging 192.168.1.2 from the switch or other end devices.

2 Dinas Dashat Transa - File Edit Ontions View	Tools Extensions Window Help	<b>d</b> (68)	
Cisco Packet Tracer File Edit Options View	Tools Extensions Window Help Cisco Packet Trace		Sun 18 Aug 05:14
	f f @ @ Q 🗖 🔳 📕		?
[다 Q 🛛 [다] 🗒 / = = /			
Logical Physical x: 182, y: 487	Wireless Router0		Root ( Root ( 16:23:00
		tributes	
GLOBAL	Intern	et Settings	
Settings			
Algorithm Set	IP Configuration		
INTERFAC	DHCP Static		
Internet	Media Bridge		
LAN	Wireless AP UserName		
Wireless 5G	Password		CO
Wireless 5G Wireless 5G	IPV4 Address	192.168.1.2	antral-Office-Server ntral Office Server0
Wireless Guest	Control Header	255.255.255.0 192.168.1.1	
Wireless Guest			- 4
Wireless Guest	G(2)		
_			
			(R)
			— A
Light			Cell-Tower Cell Tower0
1010			
Time: 00:32:08			Realtime Simulation
			sec) Periodic Num Edit Delete
🔝 🗐 🖼 🗲 🖬 🖷			
(**)			
	📲 😰 📑 🙋 🚥 💋 😒 😭 🕼	) 🔼 🗟 🎯 🖉 💷 🖻	) 💷 🧶 🎘 💷 🎘 🥌

Figure 7.6: Router static IP: 192.168.1.2, gateway 192.168.1.1.

With these IP settings, both the switch and router have static addresses in the 192.168.1.0/24 subnet, and IoT devices can reference them for authentication or registration. Next, you can proceed to set up additional services (e.g., wireless parameters, DHCP) for IoT devices.

### E. Set Up Wireless (SSID and Security)

#### Step 1: Check SSID on Router

#### 1. On the Router's GUI:

- Click on the router, go to the *GUI* tab (sometimes labeled Setup or Web\_GUI).
- Under *Internet Connection Type*, select Automatic Configuration DHCP (or the appropriate type, depending on your lab setup).

### 2. Edit the Wireless SSID:

- Navigate to the Wireless section in the router's GUI.
- If the default SSID is default, rename it to home.
- Click Save or Apply to confirm changes.

Cisco Packet Tracer File Edit Options View To	ols Extensions Window Help 🚳 🚳 💿 🕲	🕼 🗟 Q 😫 Sun 18 Aug 05:18
	Cisco Packet Tracer	
	· • • • • • • • • • • • • • • • • • • •	?
프 및 ④ 프 📕 / = = 🧨 🖬	a 🔒	
Logical Physical x: 583, y: 194	router	Root () (18:02:00
	Physical Config GUI Attributes	
Setup	Setup Wireless Security Access Applications & Administration Status East-Setup Locas Multicleuse Come & Administration Status	
Internet Setup		
Internet Connection type	Automatic Configuration - DHCP 👩	
Optional Settings (required by some internet sentence providere)	Hoof Name: Domain Name: MTU: O Size: 1800	antral-Qilco-Server ntral Olico Server0
Network Setup		
Router IP	IP Address: 192 . 168 . 0 . 1 Subret Mask: 255 255.255.0	
Light DHCP Server light Settings	DHCP Server: Enabled Disabled BinCP Programmers	Cell-Tower Cell Tower0
Time: 0035:22	Start IP Address: 192.188.0. 1/10 Maximum number 90 Uluent: IP Address Range: 192.188.0. 100 - 149	Realtime Simulation
De 🗾 🗐 📾 🗲 🖬 🖷	Client Lesse Time: 0 minutes (0 means one day) Static DNS 1: 0 . 0 . 0 . 0	sec) Periodic Num Edit Delete
🔭 🛹 🏢 📴 📓 🌒 төр	State DNS 2: 0 , 0 , 0	1
	17 19 19 19 19 19 19 19 19 19 19 19 19 19	۱

Figure 7.7: Router GUI for SSID "home".

#### Step 2: Connect the Garage Door to Wireless

#### 3. Configure Garage Door for Wireless:

- Click the Garage Door device.
- Go to *Config*  $\rightarrow$  **Wireless0**.
- In the SSID field, type home.
- The Garage Door should automatically associate with the router's home network if they share the same channel settings by default.

#### 4. Verify Connection:

- Check for a dotted (wireless) line between the Garage Door and the router in Packet Tracer's workspace.
- Hover your cursor over the Garage Door to see if the pop-up indicates it is connected to home.

#### Step 3: Enable WPA2 Enterprise Security

#### 5. Wireless Security on the Router:

- In the router's GUI, look for a Wireless Security or Security tab.
- Choose WPA2 Enterprise as the security mode.
- **Radius Server IP**: 192.168.1.2 (This should match your router's IP for AAA, or if you're using a separate RADIUS server, enter its IP here.)
- Shared Secret: secret
- Click Save or Apply.

Cisco Packet Tracer File Edit Options View To	Ols Extensions Window Help Cisco Packet Tracer	🕺 🚱 📵 🕑 😩 🕬 🗢 Q 😫 Sun 18 Aug 05:22
	` ↓ @ @ Q 🗖 🗏 📕 🛃	ş
[대 Q 🚳 🖂 🗒 🖊 🔳 🖝 🥜		
Logical Physical x: 571, y: 204	router	Root 🕤 🌒 💦 💣 20.03:0
	Physical Config GUI Attributes	
Wireless Tri-Band Horr	Router	
		Ermware Version: v0.9.7
Wireless	Setup         Wireless         Security         Access         Applications           Base Veniese Samue         Weaks Security         Coale Model         8 Gaming         Administration	
Wireless Security		
	2.4 GHz	Help antral-Off.ce-Server ritral Office Server0
	Security Mode: WPA2 Enterprise	
	Encryption: AES 3	1
_	RADIUS Server: 192 . 168 . 1 . 2	
	RADIUS Port: 1045	
Light	Shared Secret: secret Key Renewal: 3800 seconds	Cell-Tower Cell Tower
light	5 GHz - 1	
	Security Mode: Disabled	
Time: 00:39:17 ()	5 GHz - 2	Realtime 🖨 Simulatio
	Security Mode: Disabled	sec) Periodic Num Edit Delete
🕫 🛩 🔳 🚾 📓 🔍 тор		
💷 😫 🚍 🔗 🚍 🐯 🔤 🖻	178 🖺 📑 🧔 🕶 📮 😒 😤 🕼 💋 🚕 🎯 🦙	I 🔍 🍋 🛋 🔕 👰 🗔 🖉

Figure 7.8: Enabling WPA2 Enterprise with RADIUS server.

#### Step 4: Authenticate the Garage Door

#### 6. Garage Door WPA2 Configuration:

- Return to  $Config \rightarrow Wireless0$  on the Garage Door.
- Under Authentication, select WPA2.
- Enter:
  - User ID: garage
  - Password: garage123
- This matches the AAA credentials you set up earlier (garage / garage123).

#### 7. Confirm Association:

- The Garage Door now attempts to authenticate via WPA2 Enterprise using the RADIUS server at 192.168.1.2.
- If everything is correct, the device should successfully connect, and you may see a green status indicating *authenticated*.

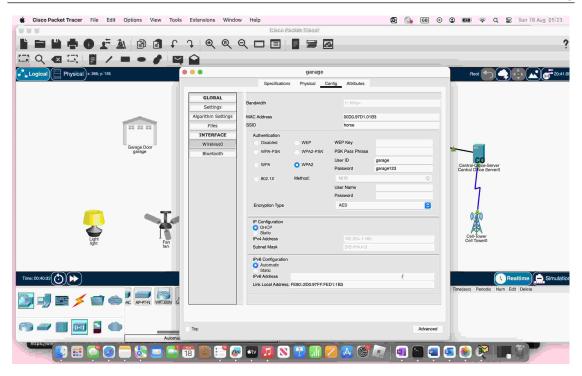


Figure 7.9: Garage Door WPA2 Enterprise credentials.

**Note:** Repeat this process for other wireless IoT devices (e.g., fan or lamp) if they also require WPA2 Enterprise authentication. Each device will need a unique username/password from your AAA server configuration.

- Why WPA2 Enterprise?. Enhanced Security: Using RADIUS-based authentication is more robust than WPA2 Personal (PSK), allowing separate credentials for each device.
  - Centralized Management: The AAA server can track which device logs in, revoke access if necessary, and maintain unique passwords—improving control over your IoT network.
  - **Scalability:** If you add more IoT devices, you can simply assign each one new credentials without changing a shared Wi-Fi passphrase across the board.

# F. Laptop Setup

### Step 1: Connect Laptop to the IoT Server

- 1. Add a Laptop:
  - From *End Devices* (or a similar category), drag a **Laptop** onto the workspace.
  - Position it near either the IoT server or the nearest switch to simplify cabling.
- 2. Wired Connection:
  - Use the **Copper Straight-Through** cable (or *Automatically Choose Connection Type*) to connect the Laptop's FastEthernet0 port to:
    - The IoT server's FastEthernet0 port, or
    - An available FastEthernet port on the switch that is already linked to the IoT server.
- 3. Assign an IP:
  - Click the Laptop, then go to  $Config \rightarrow FastEthernet0$ .
  - Enter:
    - IP Address: 192.168.1.4

- Subnet Mask: 255.255.255.0 (assuming the same /24 network)
- Default Gateway: 192.168.1.1 or 192.168.1.2, depending on your router setup.

Gisco Packet Tracer File Edit C	Options View Tools Ex	tensions Window Help		🛃 🚳 (BB) 📀	Sun 18 Aug 05:40
1999 1997			o Packet Tracer		
	🗊 🗊 t J	🔍 🍳 Q 🗖 🔳	<b>F F A</b>		?
교 Q 🚳 🖂 📕 / 🗖	• / • 6	<u>}</u>			
Logical Physical x: 401, y: 484	• •	-	Laptop0		Root 5:06:00
		Physical	onlig Desktop Programming	Attributes	
		GLOBAL	FastEtherne	10	
		Settings Port Status		🗹 On	
-		Igorithm Settings Bandwidth INTERFACE		🔹 100 Nibos 👘 10 Nibos 🔽 Auto	
		FastEthernet0 Duplex		Hnil' Duplex 👻 Full Duplex 🗹 Auto	
	Garage Door garage	Bluetooth MAC Address		).B0DB.0870	*
	guruge	IP Configuratio DHCP Static	n		co
		IPv4 Address		168.1.4	Central-Office-Server Central Office Server0
		Subnet Mask		255.255.0	
		IPv6 Configura Automatic	ition		1 7
		Static IPv6 Address		4	
	T.	Link Local Add	ress: FE80::2E0:B0FF:FEDB:870		
<b>e</b>					Cell-Tower
Light light	Fan fan				Cell Tower0
Time: 00:57:00					Realtime Simulation
놀 🚽 🖻 🗾 📹 👄	<b>F</b>				Time(sec) Periodic Num Edit Delete
27 - 77 🔤 🚬 🔤 🖘					
<b>×</b>	τα	ab di			10 m
	Automai				
	18 🔛 🔛 🚯	📳 📑 🐼 🕶 🚺 (	🔊 🔛 🔝 🔼 🕾	S 🗐 💿 🗐	🐱 🚳 🔛 💶 🖻 🦉

Figure 7.10: Laptop connected to the IoT server or switch with IP 192.168.1.4.

### Step 2: Ping the IoT Server

- 4. Open Command Prompt on the Laptop:
  - Click the *Desktop* tab on the Laptop, then select **Command Prompt**.
- 5. Test Connectivity:
  - Type ping 192.168.1.2 to verify connectivity with the router or IoT server (depending on which IP you set up for the server or router).
  - Alternatively, ping 192.168.1.1 if your gateway or server is on that IP.

### 6. Successful Ping:

- If replies come back with Reply from..., the Laptop can communicate with the network, confirming correct IP settings and active connections.
- If you receive Request timed out, re-check your cable connections, IP addresses, and gateway settings.
- Why Connect a Laptop?. Management Station: The Laptop can be used to configure or manage the IoT devices (e.g., via a web interface, SSH, or IoT Monitor).
  - **Troubleshooting:** Having a PC or laptop in the network allows you to ping, traceroute, or run other diagnostic commands to verify connectivity.
  - **Expandability:** You could add more end-user devices (phones, additional PCs) to simulate a realistic network with multiple users managing or interacting with IoT devices.

# G. Configuring the Smartphone

Step 1: Add Smartphone to the Network

1. Place a Smartphone in the Topology:

- From *End Devices* (or *Smart Devices*) in Packet Tracer, drag a **Smartphone** onto the workspace.
- 2. Access IoT Monitor:
  - Click the **Smartphone**.
    - Switch to the *Desktop* tab, then select **IoT Monitor**.
- 3. Set IoT Server Address:
  - In IoT Monitor, locate the Server Address or IoT Server field.
  - Type 192.168.1.2 (the IP of your IoT server, for example).
  - Log in using credentials you've established (e.g., user home, pass home123).

### Step 2: Wireless Security for Smartphone


- 4. Disable Cellular, Enable Wi-Fi:
  - Under the Smartphone's *Config* tab, click **3G/4G Cell** and turn Port Status **Off**.
  - Go to Wireless, set:
    - SSID = home
    - Security: WPA2
    - User ID: smartphone
    - Password: smartphone123
  - This matches the WPA2 Enterprise setup on your router.
- 5. Verify Connection:
  - The Smartphone should now connect wirelessly to the SSID home and authenticate via WPA2.
  - Check for a dotted wireless line in the workspace, indicating successful association.
  - If you open **IoT Monitor** again, you can confirm the phone is recognized by the IoT server at 192.168.1.2.

With this configuration, your **Smartphone** can manage and control IoT devices via Wi-Fi, just like the Laptop. You may now access the IoT Monitor from the phone's desktop and interact with any connected IoT devices (fan, lamp, garage door, etc.) in real time.

- Why Use a Smartphone?. Mobile Control: Simulates a user on a mobile device controlling or monitoring IoT devices anywhere in the network.
  - Wireless Authentication Demo: Emphasizes WPA2 Enterprise usage, separate from cellular data, to practice secure Wi-Fi connections.
  - Additional Testing: Allows you to verify that devices can be managed from multiple endpoints (Laptop, Smartphone), ensuring consistent network-wide IoT management.

# Summary

You have successfully set up a **smart home IoT network** in Packet Tracer. By creating a centralized IoT server (with AAA), configuring switches/routers for IP addressing, and enabling WPA2 Enterprise security, you ensured that devices such as the garage door, fan, and lamp can join securely. A laptop and smartphone can both control these IoT devices—validating your network's connectivity, authentication, and remote management capabilities.

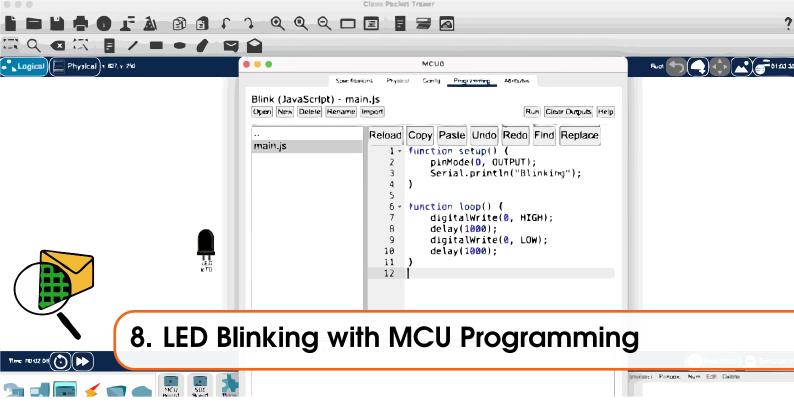

### Introduction

In this lab, you will **create a simple IoT topology** in Cisco Packet Tracer, connecting a *Microcontroller Unit (MCU)* to an *LED* and programming the MCU with JavaScript so the LED blinks at regular intervals. This exercise demonstrates basic IoT programming concepts—showing how to toggle an LED on and off using digital pins and simple timing logic.

### Objective

- Create a basic IoT topology with an MCU and an LED.
- Wire the MCU to the LED using a custom IoT cable.
- Write and execute a simple JavaScript program on the MCU.
- Observe and verify the LED blinking at a 1-second interval.

#### Lab Plan

- A. Add an MCU and LED to the Workspace
- B. Connect the Devices (MCU and LED)
- C. Program the MCU (JavaScript)
- D. Test the Program

### **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Familiarity with the Programming tab for IoT boards in Packet Tracer
- Basic understanding of JavaScript syntax for microcontroller loops

### A. Add an MCU and LED to the Workspace

1. Open Packet Tracer:

- Launch Packet Tracer on your computer.
- In the lower-left device categories, select *End Devices* and then choose the subcategory *Components*.
- This section contains various IoT modules and sensors you can use in your simulation.
- 2. Add an MCU and an LED:
  - From the *Components* subcategory, drag an MCU (Microcontroller Unit) onto the workspace.
  - Similarly, select an **LED** and place it near the MCU so that you can wire them together easily.

The MCU will act as your programmable controller, and the LED will serve as a simple output device.

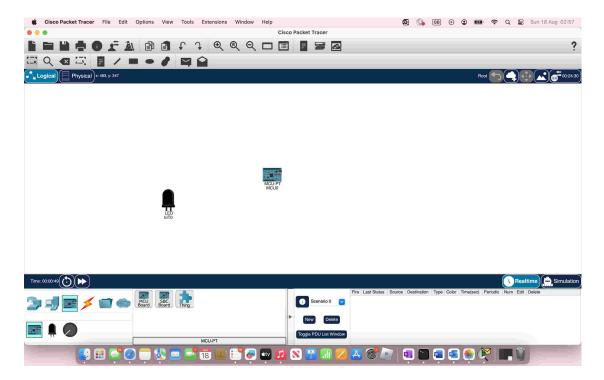


Figure 8.1: MCU and LED added to the workspace.

- Why an MCU and an LED?.
   Basic IoT Setup: An MCU controlling an LED is a fundamental example of how microcontrollers interface with outputs in IoT.
  - Hands-On Practice: Programming the MCU to blink the LED provides hands-on experience in writing, uploading, and testing simple scripts in Packet Tracer.
  - Scalable Concept: The same principles apply if you replace the LED with more complex actuators (motors, alarms) or add input sensors.

### B. Connect the Devices (MCU and LED)

- 3. Use the IoT Custom Cable:
  - In Packet Tracer's *Connections* panel (often at the bottom-left), select the **IoT custom** cable.
  - This cable type is designed for direct pin-to-pin connections between IoT components

(e.g., sensors and microcontrollers).

### 4. Wire the LED to the MCU:

- (a) Connect the D0 pin of the **LED** to the D0 pin of the **MCU**.
- (b) Verify that the cable line appears, confirming a successful connection.
- (c) This wiring allows the MCU's D0 digital output to send signals (e.g., *HIGH* or *LOW*) to the LED.

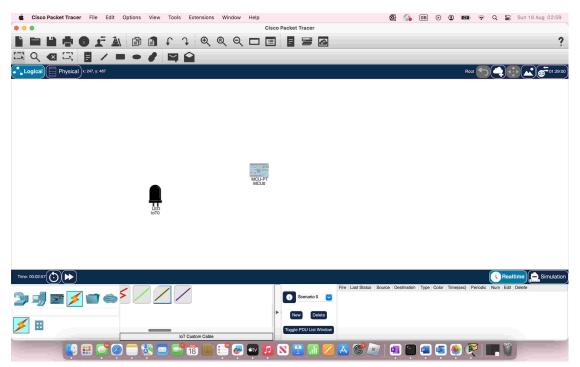


Figure 8.2: Wiring the LED's D0 pin to the MCU's D0 pin.

- Tips for Proper Wiring.
   Matching Pin Numbers: In your code, ensure you reference the correct MCU pin (here D0). If you change the wiring to D1, update your script accordingly.
  - **Polarity Considerations:** Although Packet Tracer abstracts some real-world aspects (like an LED's anode/cathode), make sure you consistently follow the intended direction of signal flow.
  - **Multiple Outputs:** If you add more LEDs or actuators, each should be connected to a different digital pin (e.g., D1, D2, etc.).

# C. Program the MCU (JavaScript)

- 5. Open the MCU Configuration:
  - Click on the MCU in the workspace.
  - In the device window, switch to the *Programming* tab to see available script files and editor options.
- 6. Select main.js:
  - In the left panel, highlight main.js (or whichever default file is present).
  - You will edit this file to implement the blinking LED logic.

#### 7. Function Setup:

#### (a) Initialize pin D0 as output:

pinMode(0, OUTPUT);

This configures pin 0 as an OUTPUT pin, enabling the MCU to drive the LED with either HIGH or LOW signals.

(b) Print a confirmation message in the console:

Serial.println("Blinking");

This helps you verify in the console that the script is indeed running.

#### 8. Function Loop:

To blink the LED, toggle the pin HIGH (on) and LOW (off), pausing one second between each state:

```
// Turn LED on
digitalWrite(0, HIGH);
delay(1000); // wait 1 second
```

```
// Turn LED off
digitalWrite(0, LOW);
delay(1000); // wait 1 second
```

This simple sequence continuously powers the LED for one second and then turns it off for one second.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help 🚳 🚳	GB 📀 😩 🛤 🗢 Q 😭 Sun 18 Aug 02:58
A A A	Oisoo Packet Tracer	
	) @ @ Q 🗖 🔳 📕 🌌	?
Logical) Physical) x:637, y: 250	e e Mcuo	Root 6 01:03:30
	Specifications Physical Config Programming Attributes	
EE	Blink (JavaScript) - main.js Open New Delete Rename [Import] Reload Copy Paste Undo Redo [Find Repl 1 + function setup() { 2 pinMode(0, 0UTPUT); 3 Serial.println("Blinking"); 4 } 5 6 + function loop() { 7 digitalWrite(0, HIGH); 8 delay(1000); 10 delay(1000); 11 } 12	ace
Time: 00:02:06	Serial Outputs	Realtime Simulation
		Time(sec) Periodic Num Edit Delate
	Тор	
	18 💽 🐺 👰 📭 🧔 😒 🕾 🕼 💋 🧟 👘	۵ 🖲 🖉 📰 🖉

Figure 8.3: JavaScript code snippet controlling the LED on pin D0.

- How the Code Works. pinMode(0, OUTPUT): Declares that pin 0 drives an external component (in this case, the LED).
  - digitalWrite(0, HIGH): Sends a 5V (or 3.3V, depending on the MCU) signal on pin

D0, lighting the LED.

- delay(1000): Pauses execution for 1,000 milliseconds (1 second).
- digitalWrite(0, LOW): Drops the pin to OV, turning the LED off.
- **Infinite Loop**: Typically, these commands are placed in the main loop (or repeated cycle) so the LED keeps blinking indefinitely.

### D. Test the Program

#### 9. Run the Code:

- In the MCU's *Programming* tab, click the **Run** button to start executing your JavaScript code.
- If you have a Serial.println("Blinking"); statement in your setup, the console output should read "*Blinking*" or similar, confirming the script is active.

#### 10. Observe the LED:

- Watch the LED on the workspace. It should alternate *on* (HIGH) and *off* (LOW) every second.
- If it's not blinking, double-check your wiring (ensure both ends are connected to D0), code syntax, or delays.


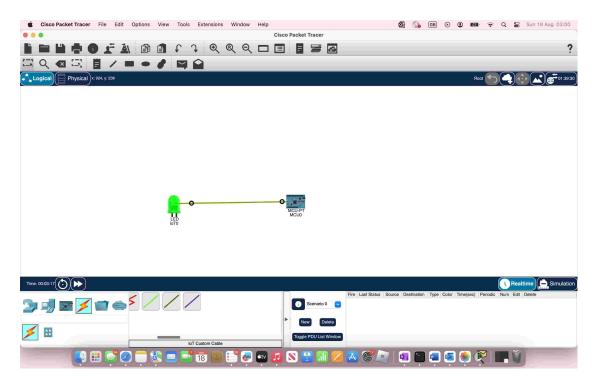


Figure 8.4: LED blinking at a 1-second interval, toggled by the MCU.

- Troubleshooting LED Issues.
   Wiring Check: Ensure the LED's D0 pin is actually connected to the MCU's D0 pin with the IoT custom cable.
  - Case Sensitivity in Code: Make sure all function names (pinMode, digitalWrite, delay) are spelled correctly and use the exact case Packet Tracer requires.
  - **Console Logs:** Use Serial.println statements to see if the loop is running (e.g., "LED on," "LED off") for clearer debugging.

### Summary

You have successfully **created a topology**, **wired the MCU and LED**, **programmed the MCU** to blink the LED, and **observed the LED** turning on and off every second. This lab demonstrates how a simple JavaScript loop can toggle an MCU's digital output—highlighting the basics of Packet Tracer IoT programming for physical components. You can extend this project by adding more sensors, altering blink intervals, or incorporating user input to control the LED state.

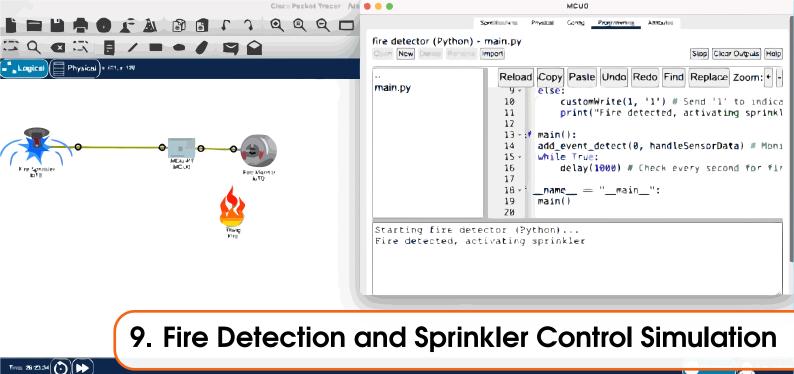

### Introduction

In this lab, you will build and configure a **fire monitoring system** in Cisco Packet Tracer using an *MCU*, *fire monitor*, *ceiling sprinkler*, and a simulated *heating element*. By programming the MCU to detect fire and activate the sprinkler, you will see how basic IoT logic can respond in real time to sensor input.

### Objective

- Create a fire monitoring system with MCU, Fire Monitor, and Sprinkler.
- Program the MCU to detect fire and automatically trigger the sprinkler.
- Learn how to connect and configure IoT devices in Packet Tracer.
- **Test** the system by simulating a fire event and observing the sprinkler response.

#### Lab Plan

- A. Set Up Packet Tracer Workspace
- B. Create the Topology (MCU, Fire Monitor, Sprinkler, Heating Element)
- C. Connect Devices (IoT custom cables)
- D. Program the MCU (Python/JavaScript logic)
- E. Test the Program (Simulate fire, verify sprinkler activation)

### **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Familiarity with Components and Advanced tabs for IoT devices
- Basic Python or JavaScript coding knowledge for MCU scripts

### A. Set Up Packet Tracer Workspace

1. Open Packet Tracer:

Launch the application and ensure you have a blank Logical topology workspace.

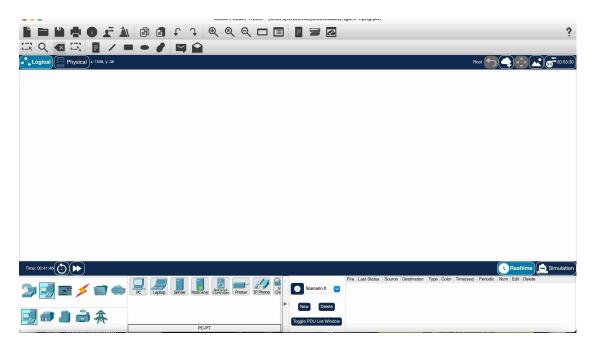


Figure 9.1: Blank Packet Tracer workspace for the fire monitoring system.

### B. Create the Topology

#### 2. Add the Following Devices:

In the Packet Tracer *Device Selection* box, locate and drag these components into the workspace:

- Fire Sprinkler
- MCU (Microcontroller Unit)
- Fire Monitor

These will form the core of the fire detection system.

3. Position Them:

Arrange the three devices so that the MCU can easily connect to both the Fire Monitor (acting as the input sensor) and the Fire Sprinkler (acting as the output/actuator). Ensure there is enough space around each device for cabling and any additional elements you might add later.

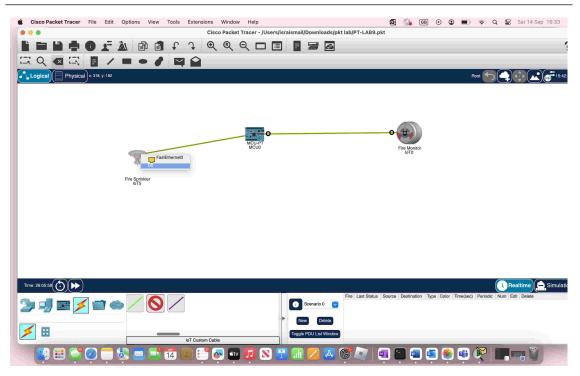


Figure 9.2: MCU, Fire Monitor, and Fire Sprinkler placed in the workspace.

- Why These Three Devices?. MCU (Microcontroller Unit): Orchestrates logic, reading sensor data from the Fire Monitor and controlling the Sprinkler based on threshold or detection events.
  - Fire Monitor (Sensor): Detects heat or smoke, sending signals to the MCU when fire conditions are met.
  - Fire Sprinkler (Actuator): Responds to the MCU's commands by spraying water if a fire is detected, simulating a real-life fire suppression mechanism.

This minimal setup illustrates a classic **sensor-actuator** workflow, with the MCU acting as the control logic in between.

# C. Connect the Devices (IoT Custom Cables)

### 4. Use IoT Custom Cable:

- In the Packet Tracer toolbar (often at the bottom-left), select the Connections icon.
- From the list of cables, choose the **IoT Custom Cable** (it may appear as "Custom Cable" or "IoT Cable").

This cable type allows direct pin-to-pin connections for IoT sensors and actuators.

- 5. Wiring:
  - Fire Monitor to MCU: Connect the D0 pin of the Fire Monitor to the D0 pin on the MCU. This link carries the sensor's "fire detected" signal as an *input* to the MCU.
  - MCU to Fire Sprinkler: Connect the D1 pin of the MCU (an *output* pin) to the D0 pin on the Fire Sprinkler. When the MCU determines a fire, it drives D1 high (or sends a signal) to activate the sprinkler.

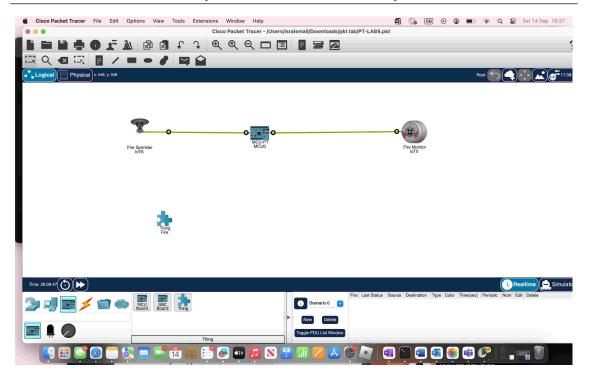


Figure 9.3: Wiring the Fire Monitor and Sprinkler to the MCU.

- Tips for Proper Wiring. Pin Matching: Ensure the correct pins match the roles:
  - Sensor  $\rightarrow$  D0 (input) on the MCU.
  - MCU Output  $\rightarrow$  D0 on the actuator (sprinkler).
  - **Check Pin Labels:** Some devices allow multiple digital pins (D0, D1, D2, etc.). Make sure the pin numbers in your code later correspond to how you've wired them here.
  - **Save Frequently:** If you have multiple cables and devices, consider saving the Packet Tracer file after each major step to avoid redoing connections.

### D. Create the Heating Element (Simulated Fire)

- 6. Add a New "Thing" Device:
  - In the **Components** category (lower-left pane of Packet Tracer), find and drag a device labeled **Thing** onto the workspace.
  - This generic device will act as a simulated heat source or "fire" for the lab.
- 7. Rename to "Fire":
  - (a) Click the newly added Thing.
  - (b) Go to  $Config \rightarrow Global Settings.$
  - (c) Change the **Display Name** from its default (e.g., "Thing1") to Fire.

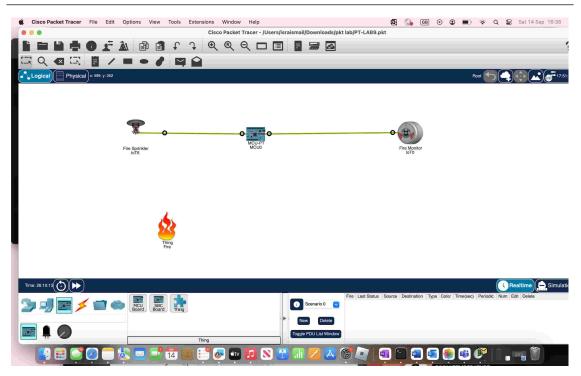


Figure 9.4: Renaming a generic Thing to "Fire."

### 8. Advanced Configuration:

- (a) Click on Advanced  $\rightarrow$  Thing Editor, then select Properties.
- (b) Change the **Component Name** to Fire.
- (c) (Optional) Click **New** to upload or add a custom icon representing fire, if you wish to make it visually distinct.

This allows you to identify and manage this device as your heat source within the Packet Tracer workspace.

- Why Create a "Fire" Thing?. Simulation of Heat Source: By naming it Fire, you can hover over or "move" this device near the *Fire Monitor* to simulate real fire conditions.
  - Flexible Customization: Packet Tracer's *Thing Editor* lets you change icons, behaviors, and properties, making it useful for a wide range of IoT scenarios.
  - Enhanced Visualization: Using a distinctive icon (like a flame) helps visually remind you that this device represents heat or combustion in the simulation.

# E. Program the MCU

- 9. Open the MCU Configuration:
  - On the MCU device, switch to the *Programming* tab.
  - Click New to create a fresh project file (e.g., name it Fire).

This project will contain the logic for detecting fire from the sensor and triggering the sprinkler.

- 10. Template Selection:
  - Depending on your lab's instructions, choose either *Empty JavaScript* or *MQTT Broker* (*Python*) in the drop-down.

• Although Packet Tracer might label the main file as main.js, you can still write Python code if you selected a Python-based template.

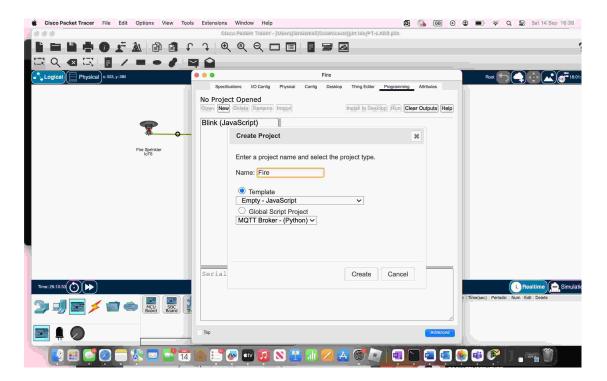


Figure 9.5: Creating a new Python-based project for the MCU.

#### 11. Open main.js:

- Even if you chose a Python template, Packet Tracer names the default script file main.js.
- Simply open main. js in the editor to begin writing or pasting code.

ire (JavaScript) - main.js	Specifications I/O Config Physical Config Desktop Thing Editor	Programming Attributes
Deen New Delete Rename Import		Install to Desktop Run Clear Outputs H
main.js 1 function set	up()	Reload Copy Paste Undo Redo Find Replace Zoom:+
2 - {	eProperty(getName(),'IR',900);	
4 }		
Serial Outputs		
Тор		Advance

Figure 9.6: Editing the main.js file for the MCU's code.

#### Writing the Python Code

#### 12. Paste the Following Code:

```
from gpio import input, output
from time import sleep
def handleSensorData():
    value = digitalRead(0) # Read from fire monitor sensor on pin D0
    if value == 0:
        customWrite(1, '0') # Send '0' to indicate no fire
        print("No fire detected")
    else:
        customWrite(1, '1') # Send '1' to indicate fire detected
        print("Fire detected, activating sprinkler")
def main():
    add_event_detect(0, handleSensorData) # Monitor fire monitor input on D0
    while True:
        delay(1000) # Check every second for fire
if __name__ == "main":
   main()
```

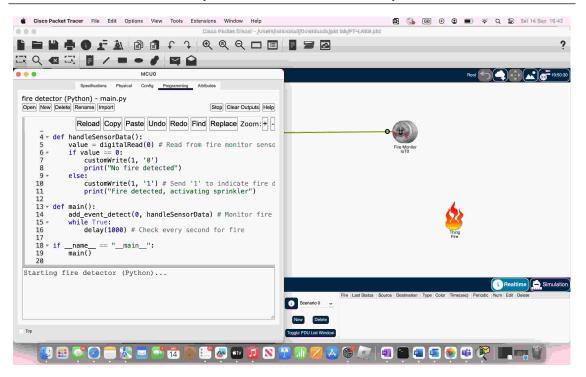


Figure 9.7: Python code reading the fire sensor and activating the sprinkler.

- How the Code Works. handleSensorData(): Reads pin D0 (the fire sensor).
   If the sensor returns 1, it signifies "fire detected," and the code sends '1' to pin D1 (sprinkler). Otherwise, it sends '0' to indicate no fire.
  - add\_event\_detect(0, handleSensorData): Watches D0 continuously and calls handleSensorData() whenever its state changes.
  - while True: delay(1000): Keeps the script running, checking for sensor updates every second.
- customWrite(1, '1'): A specialized Packet Tracer function that writes data to pin D1, where the sprinkler is connected, effectively turning it on or off.

### F. Test the Program

- 13. Run the Code:
  - In the MCU's Programming tab, click the Run button to start the script.
  - The code now continuously listens on D0 for any changes from the Fire Monitor.
- 14. Simulate Fire:
  - In the workspace, move the "**Fire**" device (your simulated heat source) closer to the **Fire Monitor**.
  - If the sensor detects fire (i.e., the **Fire Monitor** outputs a signal of "1" on D0), the MCU sends '1' to pin D1, indicating the sprinkler should turn on.

Cisco Packet Tracer File Edit Options View Tools Extensions Window Help	國 🚳 🕼 💷 🕢 💭 😴 Q 🔡 Sait 14 Sep 16:51
Cisco Packet Tracer - /Us	
	Specifications Physical Config Programming Attributes
Pré Spréder	<pre>fire detector (Python) - main.py</pre>
Time: 26 23 22 () >>	Realtime 🔒 Simulation
🎾 🥑 🔤 🗲 🗃 👄 🧱 🚉	Fire Last Status Source Destination Type Color Time(sec) Periodic Num Edit Delete     Scenario 0     Vorte Destination Type Color Time(sec) Periodic Num Edit Delete
💽 🛔 🕖	Yew Dealer
	s 🕾 🗊 💋 🕾 🎯 🦙   👜 🐃 🖷 😨 😨 🗭 🗰 😤   💷 🖏 ) 📂

Figure 9.8: Starting the fire detector program on the MCU.

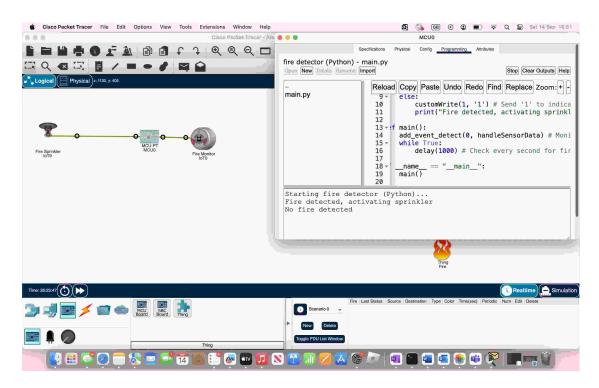


Figure 9.9: Fire is undetected when too far from the sensor.

### 15. Observe Sprinkler Activation:

- Moving "Fire" within range of the Fire Monitor triggers the sensor to read "fire."
- The MCU's code then writes '1' to the sprinkler pin, causing it to activate (e.g., visually

"spray water" or switch an icon from off to on).

• If you move "Fire" away, the monitor outputs "0," and the MCU turns the sprinkler off.


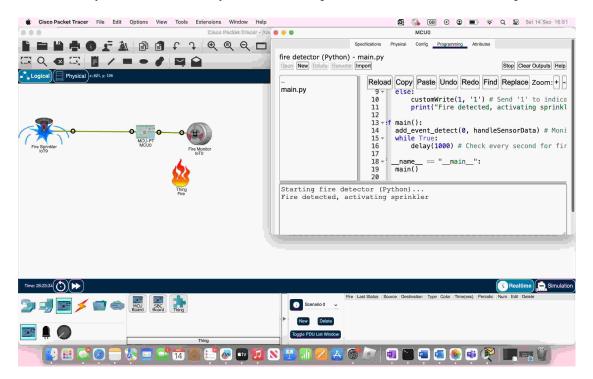


Figure 9.10: Sprinkler activates when fire is detected.

- Testing and Troubleshooting. Console Output: In the Programming tab's console, look for messages like "No fire detected" or "Fire detected, activating sprinkler" to confirm the code is running.
  - Sensor Placement: If the Fire Monitor never reads fire, adjust the distance of the "Fire" device or check the *Thing Editor* settings for sensitivity.
  - **Pin Conflicts:** Ensure no other scripts or hardware conflict with D0 and D1. Each pin should be dedicated to the Fire Monitor or Sprinkler, respectively.

### Summary

You have successfully built a **fire detection and sprinkler control system** in Cisco Packet Tracer. By **programming the MCU** in Python (or JavaScript syntax) to read the fire monitor input, you created a responsive scenario where the sprinkler automatically activates upon detecting fire. This demonstrates how IoT devices can collaborate in real time to handle emergencies—paving the way for more complex automation in Packet Tracer.

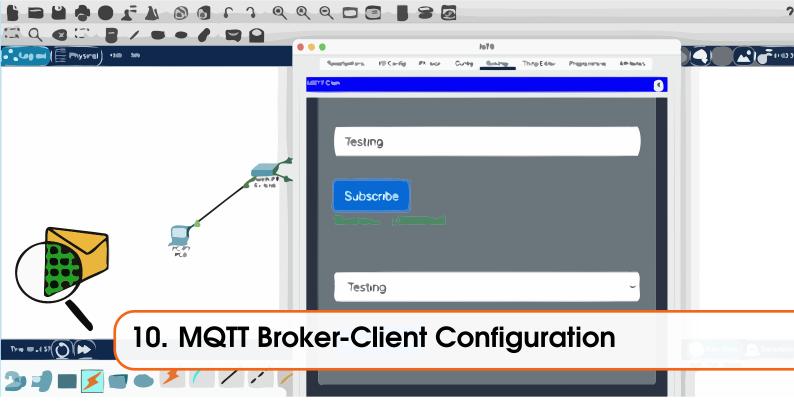

### Introduction

In this tutorial, you will learn how to **configure an MQTT broker and client** in Cisco Packet Tracer. You will create a small network with a router, switch, PC, and IoT device. The PC will act as the MQTT broker, while the IoT device will serve as the MQTT client. By the end, you will have tested publishing and subscribing to MQTT topics between the broker and client.

### Objective

- Create a network topology (router, switch, PC, IoT Thing).
- Configure all devices with IP settings for communication.
- Install and set up an MQTT broker on the PC.
- Install and set up an MQTT client on the IoT device.
- Verify message exchange (topics) between the broker and client.

#### Lab Plan

- A. Creating the Topology (Add router, switch, PC, IoT device)
- B. Connecting Devices (PC–Switch, IoT–Switch, Router–Switch)
- C. Configuring the Router
- D. Configuring the PC (MQTT Broker)
- E. Configuring the IoT Device (MQTT Client)
- F. Testing the MQTT Connection (ping test, broker/client topics)

### **Required Software**

- Cisco Packet Tracer 8.x (or newer)
- Basic knowledge of IP addressing and device configuration in Packet Tracer
- Familiarity with MQTT concepts (broker, client, topics)

# A. Creating the Topology

1. Add Devices:

From the *Device-Type Selection* box in Packet Tracer, locate and drag the following devices onto the workspace:

- Switch (*Network Devices*  $\rightarrow$  *Switches*)
- PC (End Devices)
- **IoT Thing** (*IoT Devices*)
- **Router** (*Network Devices* → *Routers*)

These are the core devices for setting up a basic MQTT demo network.

2. Layout:

Place the **Router**, **Switch**, **PC**, and **IoT Thing** in the workspace so that cabling between them is straightforward. For instance:

- *Router* on the left,
- *Switch* in the middle,
- *PC* and *IoT Thing* on the right.

Your arrangement might vary, but aim to keep enough space for easy viewing and cable connections.

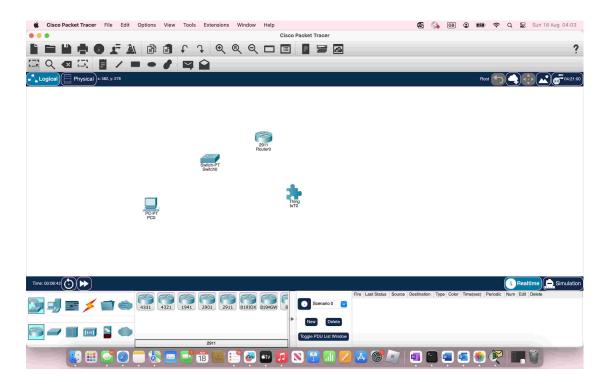


Figure 10.1: Initial topology with a router, switch, PC, and IoT Thing device.

- Why These Devices?. • Router: Provides an IP gateway and possible DHCP services for the network.

- Switch: Links multiple devices on the LAN.
- PC: Will act as an MQTT Broker or client, depending on your lab setup.
- IoT Thing: Serves as the MQTT client, simulating an IoT sensor or actuator.

This selection ensures a minimal yet functional network to demonstrate MQTT messaging in Packet Tracer.

# **B.** Connecting Devices

### 3. PC and Switch:

- Select the *Connections* tool in Packet Tracer (the lightning bolt icon).
- Choose Automatically Choose Connection Type.
- Click on the PC's *FastEthernet0* port, then click on an available *FastEthernet* port on the **Switch**.

The system should automatically pick the correct cable (typically a *straight-through*) for a PC-to-switch link.

#### 4. IoT0 and Switch:

- If you cannot directly connect **IoT0** to the switch, ensure the IoT device has the correct network adapter modules:
  - (a) Click **IoT0**, then go to Advanced  $\rightarrow$  **I/O Config**.
  - (b) For Network Adapter 1, select PT-IOT-NM-1W (wireless module).
  - (c) For Network Adapter 2, select PT-IOT-NM-1CE (wired module).
- After confirming the correct adapters, click on **IoT0** and the **Switch** with *Automatically Choose Connection Type* enabled. A valid link should form.

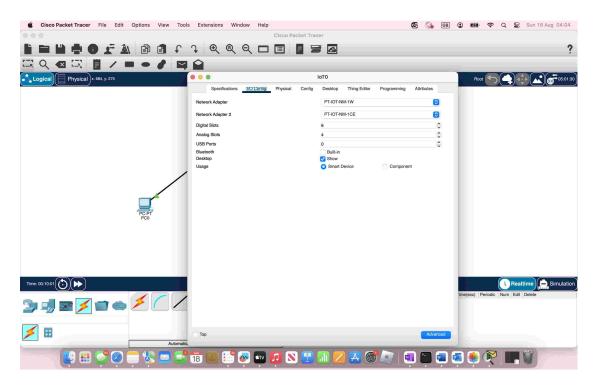


Figure 10.2: Configuring the IoT0 device to ensure it has the correct network adapters.

#### 5. Router and Switch:

- Again, use Automatically Choose Connection Type.
- Click on the **Router**'s *GigabitEthernet0/0* port, then on an available *FastEthernet* or *GigabitEthernet* port on the **Switch**.
- Wait a moment for the link lights to turn green, indicating a successful connection.

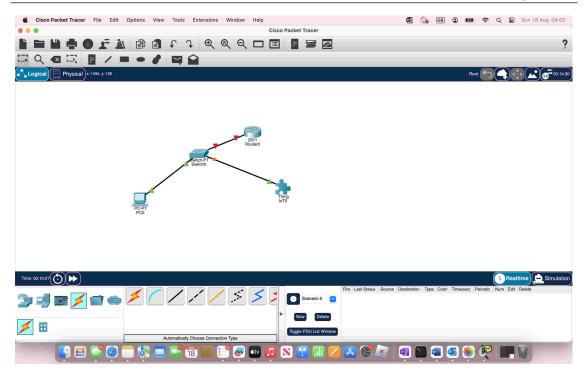


Figure 10.3: Connecting the router to the switch.

### - Troubleshooting Connections. • No Link Lights?

- Check that both devices are powered on and the correct port is selected.
- Verify the Power button is on (if visible) in the Physical tab for IoT devices.
- Incorrect Cable Type?
  - Manually choose a *Copper Straight-Through* cable if *Automatically Choose Connection Type* fails or picks the wrong option.
- Missing Ports or Adapters?
  - For IoT devices, confirm you've added the correct modules (PT-IOT-NM-1W, PT-IOT-NM-1CE) under Advanced → I/O Config.
  - For routers, ensure GigabitEthernet0/0 is enabled in the *Config* tab or via the CLI.

# C. Configuring the Router

- 6. Open the Router:
  - Click on the Router in your Packet Tracer workspace.
  - Select the *Config* tab at the top of the router's configuration window.
  - You'll see a list of interfaces and global settings.
- 7. Select GigabitEthernet0/0:
  - Check the box or toggle labeled Port Status to turn the interface **On**.
  - In the IP Address field, enter 192.168.10.1.
  - In the **Subnet Mask** field, enter 255.255.255.0.

This assigns the router's main interface an IP on the 192.168.10.x subnet.

### 8. Exit the Router Config:

Once you've entered the IP address and enabled the port, you can close the configuration

window or switch to another tab as needed.

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help		🛃 😘 📵 🕐 🖘 🗢 Q 🕿 Sun 18 Aug 04:06
	Ois	soo Packet Tracer	
	ନ 🔍 🍳 🗖 🗖		?
[ ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( (			
		PCO	Root Root 200 000 000 00000
	Physical	Config Desktop Programming Attributes	
	IP Configuration		×
	Interface FastEthernet0		0
	IP Configuration		
	DHCP	O Static	
	IPv4 Address	192.168.10.5	
	Subnet Mask	255.255.255.0	
/	Default Gateway	192.168.10.1	
	DNS Server	0.0.0.0	
	IPv6 Configuration		
PC-PT PC0	Automatic	O Static	
	IPv6 Address		7
	Link Local Address	FE80::2E0:F7FF:FE0B:A3B9	
	Default Gateway		
	DNS Server		
	802.1X		
Time: 00:12:10	Use 802.1X Security		Realtime Emulation
🍃 🥑 🖬 🗾 📹 🗲 🦳 🖊	Authentication MO5		Ime(sec) Periodic Num Edit Delete
	Usemame		
	Password		
Xutomatic.	Тор		
	18 🖉 📑 🐼 🕶 💋	8 🖀 🗊 🔼 😸 🎯 🦳 (	a 🖱 🖷 🗟 🌒 🏹 🛄 🖤

Figure 10.4: Assigning IP 192.168.10.1/24 on the router's interface.

- Why Configure the Router?.
   Gateway for Devices: By assigning 192.168.10.1
   to GigabitEthernet0/0, the router becomes the default gateway for the network.
  - Essential for Internet or WAN Access: If you expand this lab to connect to the broader internet or another subnet, the router directs traffic outside the local segment.
  - **DHCP / Additional Services:** Later, you can enable DHCP, NAT, or other router functionalities to further manage the network.

## D. Configuring the PC (MQTT Broker)

### **D.1 IP Settings**

- 1. Click the PC:
  - On the **PC** device, select the *Desktop* tab.
  - Open IP Configuration.
  - Assign the following:
    - IP Address: 192.168.10.5
    - Subnet Mask: 255.255.255.0
    - Default Gateway: 192.168.10.1

This ensures the PC is on the same network (192.168.10.x) as the router and can route traffic through 192.168.10.1 if needed.

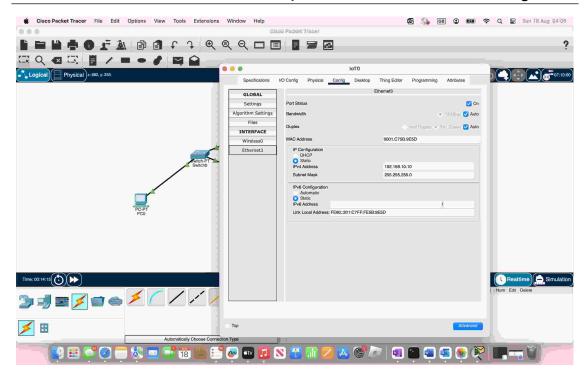


Figure 10.5: PC's IP settings: 192.168.10.5/24 with gateway 192.168.10.1.

D.2 Installing the MQTT Broker

2. User Apps Manager:

- Still on the **PC** device, open the *Desktop* tab.
- Choose User Apps Manager.
- Under the Available apps list, locate and install MQTT Broker.

Cisco Packet Tracer File Edit Options View Tools Extensions Wit	Window Help
프 및 셑 또 별 / = ● / 목 읍	
Logical Physical x: 1408, y: 468	• • IoTO
	Spacifications VO Config Physical Config Desktop Thing Editor Programming Attributes
	GLOBAL Global Settings
	Settings Algorithm Settings Display Name IoT0
	Algorithm Settings Display Name IoT0 Files Serial Number PTT0810BN1S-
	INTERFACE Interfaces Ethernel3
	Wireless0
	Ethernet3 Gateway/DNS IPv4
Switch-PT Switch0	O Static
	Default Gateway 192.168.10.1
	DNS Server
	Gateway/DNS IPv6
PC-PT	Automatic
PC0	Static     Default Gateway
	DNS Server
	IoT Server
	O None Home Gateway
Time: 00:14:92	Remote Server Server Address Server Address
Time: 00:14:22	
Ӭӈ҆҄ॾѮॿॖॖऺढ़ҲҀѴѴ	User Name : Num Edit Delete
	Top Advanced
Automatically Choose Connection Ty	
	🧟 🖬 🗃 🛇 🕃 📲 🔼 🛠 🎯 🥢   🛍 🚍 📾 🚳 🐇   📷 📼 🧃

Figure 10.6: Installing the MQTT Broker application on the PC.

3. Exit PC config once installed.

You've now set up the PC to serve as an **MQTT Broker**, ready to handle MQTT publish/subscribe traffic from IoT devices.

- Why Install an MQTT Broker?. Central Messaging Hub: The broker handles incoming messages (from "publishers") and routes them to subscribed "clients," enabling efficient decoupling of senders and receivers.
  - **IoT Standard Protocol:** MQTT is widely used in IoT for lightweight messaging, making this lab a solid introduction to real-world IoT scenarios.
  - Scalable Setup: Multiple devices can connect to the same broker, each subscribing to or publishing different topics (e.g., "sensors/temperature", "actuators/motor").

# E. Configuring the IoTO Device (MQTT Client)

## **E.1 IP Settings**

- 1. Click IoT0:
  - In the Device Configuration window, select Config  $\rightarrow$  Ethernet3.
  - Assign:
    - IP Address: 192.168.10.10
    - Subnet Mask: 255.255.255.0
    - Gateway/DNS IPv4: 192.168.10.1

This ensures IoT0 is on the same 192.168.10.x subnet and can reach the router at 192.168.10.1 for traffic outside its local segment.

#### 147

Cisco Packet Tracer File Edit Options View Tools	Extensions Window Help		🛃 😘 СВ С	🗴 🛤 🗢 Q 🗟 Sun 18 Aug 04:06
	Óla	oo Packet Tracer		
	ๅ ୧୧୧⊐ 🗖			?
[대 Q 🔞 🗔 📋 / = = 🥜 🖾				
Logical Physical x: 423. y: 288	• • •	PCO		Root (06:07:00)
	Physical	Config Desktop Programming Attributes		
	IP Configuration		×	
	Interface FastEthernet0		0	
	IP Configuration			
	DHCP	O Static		
	IPv4 Address	192.168.10.5		
	Subnet Mask	255.255.255.0		
/	Default Gateway	192.168.10.1		
	DNS Server	0.0.0.0		
	IPv6 Configuration			
PC-PT PC0	Automatic	O Static		
100	IPv6 Address		7	
	Link Local Address	FE80::2E0:F7FF:FE0B:A3B9		
	Default Gateway			
	DNS Server			
	802.1X			
Time: 00:12:10 () ()	Use 802.1X Security			Realtime 🚔 Simulation
	Authentication MO5		4	me(sec) Periodic Num Edit Delete
沟 🚽 🔤 🗾 📹 差 🦳 🖊	Usemame			
	Password			
🗲 🗄	Тор			
Automatic				
	18 📳 📑 🐼 🕶 🗾	N 🗄 🗊 🔼 🦉 🖉 i	<u>a 🍋 🖷 </u>	) 🌒 🖗 🔳 🖤


Figure 10.7: Assigning IP details to IoTO under Ethernet3 (example figure).

Cisco Packet Tracer File Edit Options View Tools Extensions	Window Help		🔂 😘 GB 🕐 🛤 🗢 Q 🕿 Sun 18 Aug 04:08.
0.0.0	Olso	o Packet Tracer	
	2 9 🗆 🔳		?
	· · –		
	. 🐵 💩	IoTO	
Logical Physical x: 882, y: 253		O Config Physical Config Desktop Thing Editor	Programming Attributes
		Ethernet3	
	GLOBAL Settings	Port Status	V On
1	Algorithm Settings	Bandwidth	- 10 Mbpi 🧭 Auto
	Files		
1	INTERFACE	Duplex	Hat Duplox 👻 Ful Duples 🗹 Auto
	Wireless0	MAC Address 0001.C75	B.9E5D
	Ethernet3	IP Configuration DHCP	
Switch-PT Switch0		Static IPv4 Address 192.168.	0.10
		Subnet Mask 255.255.3	55.0
		IPv6 Configuration	
		Automatic Static	
PC-PT		IPv6 Address Link Local Address: FE80::201:C7FF:FE5B:9E5D	<u> </u>
PCU			
-			
1			
Time: (0):14:18			Realtime E Simulation
Time: 00:14:15			Num Edit Delete
"]] ■ 🖉 🖬 🌰 🗡 🖊 🖊 🧹			THUR LOS DUDO
	-		
≯ ⊞	Тор		Advanced
Automatically Choose Connection		1	
	遷 💷 💆 🛽	S 🖀 🖩 🔼 🗟 🎯 🖉 🖣	) 🖱 🖷 🖷 🌸 🏹 🔳 🖏 🦉

Figure 10.8: Verifying IP configuration in the IoT device (example figure).

## E.2 Installing the MQTT Client

- 2. Thing's Desktop  $\rightarrow$  User Apps Manager:
  - On the IoT0 device, go to  $Desktop \rightarrow User Apps Manager.$

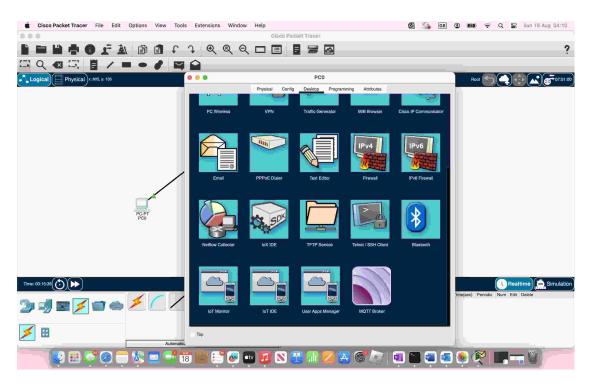

• Locate MQTT Client under the Available list and click to install it.

Figure 10.9: Installing MQTT Client on the IoT device.

- Exit the IoT device config after installation.
   At this point, IoT0 is ready to act as an MQTT client, capable of connecting to the MQTT Broker on the PC.
- Why an MQTT Client on IoTO?.
   Simulated Sensor/Actuator: The IoT device can publish messages (like sensor readings) or subscribe to topics (like commands from the broker).
  - Lightweight Protocol: MQTT is well-suited for IoT due to its minimal overhead, making it perfect for resource-constrained devices.
  - Hands-On Learning: This setup demonstrates real-world IoT patterns—devices sending data to a central broker that routes messages to subscribers.

## F. Configuring the MQTT Broker on the PC

- 4. Open the MQTT Broker App:
  - On the PC (which you set up as the MQTT Broker), switch to the Desktop tab.
  - Click on MQTT Broker to launch the application interface.
- 5. Create a New User:
  - In the MQTT Broker window, look for a Username and Password field.
  - Enter admin for both:
    - Username: admin
    - Password: admin
  - Click Add to register this new user.

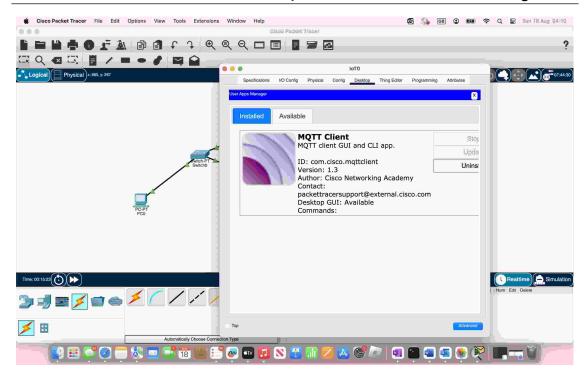


Figure 10.10: MQTT Broker application on the PC.

🗯 Cisco Packet Tracer File Edit Options View Tools Extensions Window Help	🛃 😘 📵 😰 🐲 🗢 Q 🛢 Sun 18 Aug 04:10
Cisco Packet Tracer	
▙▆▙╋♥▓▓ऄ\$↓♀♥♥ゟ□ॿॿॾख़	?
Logical Physical x 1928, y 28 PCO Physical Config Destrop Programming Attributes	Root () (* 08:08:00)
MQTT Broker	
On	
Authorized Users	
PC-PT PCD	
admin	
Add	
	Realtime 🚍 Simulation
	îme(sec)   Periodic   Num   Edit   Delete
🌫 🚽 🖻 🎽 👄 🗾 🦳 🖉	
Тор	
Automatic	
	) 📮 🖷 🧶 🏹 🔳 🖏 🧊

Figure 10.11: Creating credentials (admin/admin) for the MQTT broker.

- Why Add MQTT Broker Credentials?.
   Secure Access: User credentials (admin/admin) allow only authorized clients to connect, subscribe, or publish to topics.
  - Basic Authentication Demo: Although it's a simple lab setup, in real-world scenarios

you'd use unique usernames/passwords or tokens for improved security.

• **Multi-User Scenarios:** Having multiple accounts lets different IoT devices or groups connect to the broker with distinct privileges.

# G. Configuring the MQTT Client on the IoT Thing

## 6. IoT Device (MQTT Client Settings):

- On the **IoT Thing** device, open the *Desktop* (or *Applications*) tab where the **MQTT Client** was installed.
- Set the **Broker Address** to 192.168.10.5, which is the PC's IP address (i.e., where the MQTT Broker is running).
- Enter the Username and Password you created on the broker (e.g., admin/admin).
- Click **Connect** to establish the MQTT connection.

Cisco Packet Tracer File Edit Options View Tools Extensi	ons Window Help	🛃 😘 📵 😰 🐲 🗢 Q 🖢 Sun 18 Aug 04:11
000	Cisco Packet Tracer	
	L @ Q 🗖 🗐 🖥 🚟 🗖	?
	••••=•==	
	PCO	
Logical Physical x: 1352, y: 254	Physical Config Desktop Programming Attributes	Root ()(***********************************
MOTT B		
NOT B	Xxer	×
	Add	
	Username Password	
PC-PT PC0		
	admin admin	
	Remove	
Time: 00:16:20 () >>		
沟 y 🔤 🗾 🖕 🖊 🤇 🖉		Time(sec)   Periodic   Num   Edit   Delete
	Clients	
🗾 🗄 — Тор —		
inter 😫 🖽 🥰 🖉 🤤 🕵 🔞 🔘	📑 🖗 🖤 🙋 🛇 🖹 📶 💋 🐣 🎯 🖉   🗉	U 🛄 🖷 🏶 🕵 📰 🛄 🖉 / 🖉 🛄

Figure 10.12: Configuring the MQTT client on the IoT device.

- Why Configure MQIT on the IoT Device?.
   Message Publishing/Subscribing: Once connected, this IoT device can *publish* sensor data (e.g., temperature readings) to the broker or *subscribe* to topics for receiving commands (e.g., turn on/off).
  - Verification of Connectivity: If the client successfully connects, it confirms that your network settings (IP, gateway) and broker credentials are correct.
  - Scalable IoT Setup: You can add more IoT clients (with different addresses or on different topics) to simulate a fully functional MQTT-based IoT environment.

## H. Testing the MQTT Connection

## H.1 Ping Test

1. On the PC:

- Go to the PC's  $Desktop \rightarrow Command Prompt$ .
- Verify connectivity by pinging:
  - ping 192.168.10.1 (the router's IP)
  - ping 192.168.10.10 (the IoT device's IP)

Cisco Packet Tracer File Edit Options View Tools Extensions Window H	lelp	🛃 😘 📵 🕲 🐲 🗢 Q 🔡 Sun 18 Aug 04:12
000	Cisco Packet Tracer	
🗎 🖿 🖬 🖶 🖬 🛣 🖆 🖬 🖡 🤉 🔍 🍭 🔍 🕻		?
프 익 🗠 🖾 🖉 🖛 🖝 🖉 🔛 👘 👘		
Logical Physical x: 689, y: 277	IoT0	08:54:30
Specify	cations I/O Config Physical Config Desktop Thing Editor	Programming Attributes
MOTT Client		×
	QTT Client	
Witch-PT		
Switch0 Co	onnection	
	192.168.10.5	
PCPT	192:108:10:5	
PCO		
	admin	
	admin	
Time: 00:17:42		Realtime 🚍 Simulation
	Connect	2 Num Edit Delete
Тор		Advanced
	🧧 🛛 🖀 🔝 🖊 🧟 🎯 🖉   희	📮 🖷 🍓 🏹 🔳 🖏 💓

Figure 10.13: Verifying network connectivity via ping commands.

- Why Ping?. Layer 3 Confirmation: A successful ping ensures that the devices can reach each other at the IP layer.
  - **Troubleshoot Early:** If pings fail, check cabling, IP assignments, or gateway settings before proceeding with MQTT configuration.

### H.2 Verifying MQTT Connection

- 2. Check the IoT Device:
  - On the IoT device (where the *MQTT Client* app is installed), ensure it displays a status of **Connected** to the broker.
  - If not, re-check the broker's IP address, port, username, or password for any typos.

### 3. Check the Broker:

- On the PC's *MQTT Broker* window, look under "Clients" or "Connected Clients" to see if the IoT device is listed.
- A recognized client indicates a successful handshake between the IoT device and the broker.

#### **Topic Test**

- 4. Set a Topic on the IoT Device:
  - In the IoT device's MQTT Client interface, find the Topic field.

- Type a test topic name such as Testing (or myTopic).
- Publish a sample message to confirm the broker receives it.

### 5. Broker View:

- On the broker's console, you should see a log entry or a topic list entry reflecting "Testing."
- If you have another client subscribed to "Testing," it can receive any published messages from the IoT device.

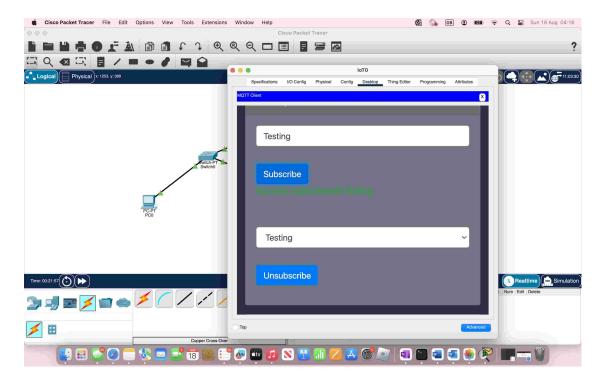


Figure 10.14: IoT device publishing/subscribing to topic "Testing."

	tensions Window Help	🛃 😘 📵 🕲 🐲 🗢 Q 🔡 Sun 18 Aug 04:17
		?
	•	
Logical Physical x: 428, y: 288	PC0      Physical Config Desktop Programming Attributes	Root () () (*******************************
	TT Broker	
	loT0 (3d3f3da3df10d0L)	
	Subscriptions	
	Subscriptions	
PC.PT		
PCO	Topic Clients	
	Testing IoT0 (3d3f3da3df10d0L)	
Time: 00:22:15		Realtime - Simulation
		Time(sec)   Periodic   Num   Edit   Delete
沟 🚽 📷 🗲 💼 📥 🗾 🤇	Event Log	
	qc	
13 13 13 13 1	= 📑 🐼 🕶 💋 🗙 🕾 🔐 📈 📈 🎯 🔄 🛯	2 🖬 🗟 🌸 🏹 📰 🖏 🧊
	s := 🛦 📩 🙀 🕞 📺 🔽 荣 🙈 🐔 🦷	

Figure 10.15: Broker console reflecting the new topic exchange.

- MQTT Troubleshooting Tips.
   Check the Broker's IP and Port: Some MQTT setups use port 1883 by default. Ensure Packet Tracer's broker is listening on that (or whichever port is configured).
  - Credentials Mismatch: If your IoT device can't connect, confirm the username/password match those added on the broker.
  - **Firewall or Security Settings:** In certain scenarios, Packet Tracer might prompt to allow ports. Confirm you allowed the port binding.
  - **Multiple Clients:** Try adding a second IoT device or even another PC client. Subscribe one to a topic, publish from the other, and watch the message pass through the broker.

### Summary

Congratulations! You have successfully **created an MQTT broker-client setup** in Packet Tracer. After **configuring the router** (192.168.10.x network), **assigning IPs** to the PC and IoT device, **installing** the MQTT broker on the PC, and **installing** the MQTT client on the IoT device, you tested the connection by publishing/subscribing to a topic. This verifies that your MQTT communication is **fully operational**—enabling IoT messaging and data exchange in Packet Tracer.

